 


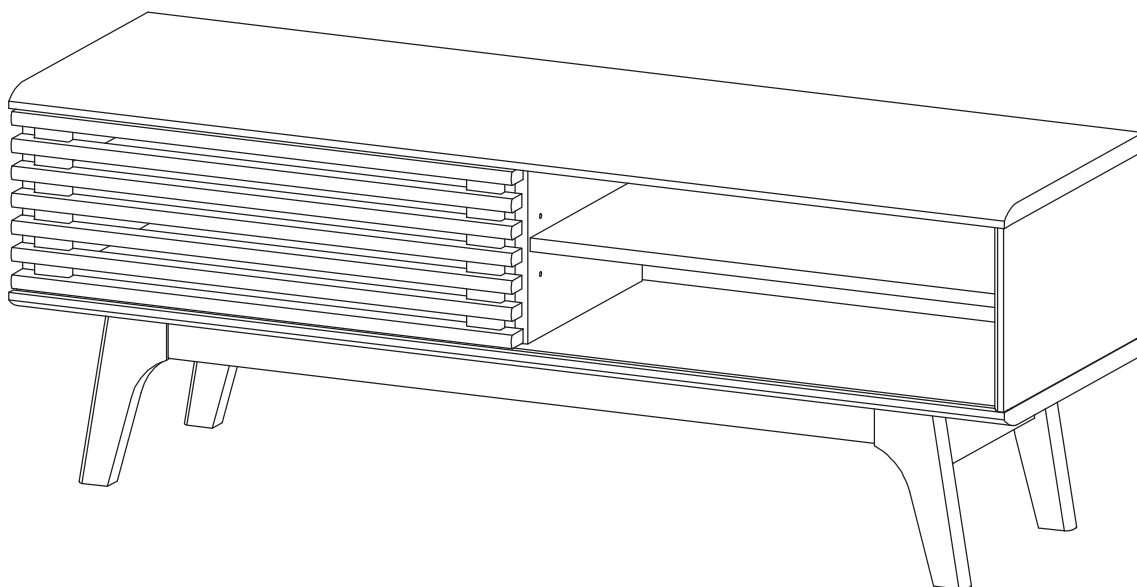 


 

 
 
 
 

 






Thank you for purchasing the **MODWAY TV Stand** !

Before you start, here are some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the Tv Stand, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.



  Hardware :


A) Cambolt/Metal  \varnothing 6 x 35 mm x 9	B) CamLock/Metal  \varnothing 15 mm x 9	C) Dowel/Wood  \varnothing 8 x 30 mm x 36	D) Screw/Metal  M 7 x 50 mm x 5	E) Key/Metal  L 4 x 1
F) Screw/Metal  M 12 x 35 mm x 6	G) Shelf Pin/Metal  \varnothing 5 x 15 mm x 8	H) Pin Sliding Top/Plastic  \varnothing 8 x 19 mm x 2	I) Pin Sliding Bottom/Plastic  \varnothing 8 x 16 mm x 2	J) Wedge/Plastic  9 x 14 x 10 mm x 8
K) Screw/Metal  M 3.5 x 15.5 mm x 8	L) Foam Pad/Spon  25 x 25 x 2 mm x 4	M) Buffer/Rubber  \varnothing 8 mm x 2	N) Screw Cup/Plastic  \varnothing 15 mm(Long) x 2	O) Screw Cup/Plastic  \varnothing 15 mm(Short) x 3
P) Stoper/Plastic  42 x 14 x 8 mm	Q) Screwdriver (Not Include)  x 1			

 Components:

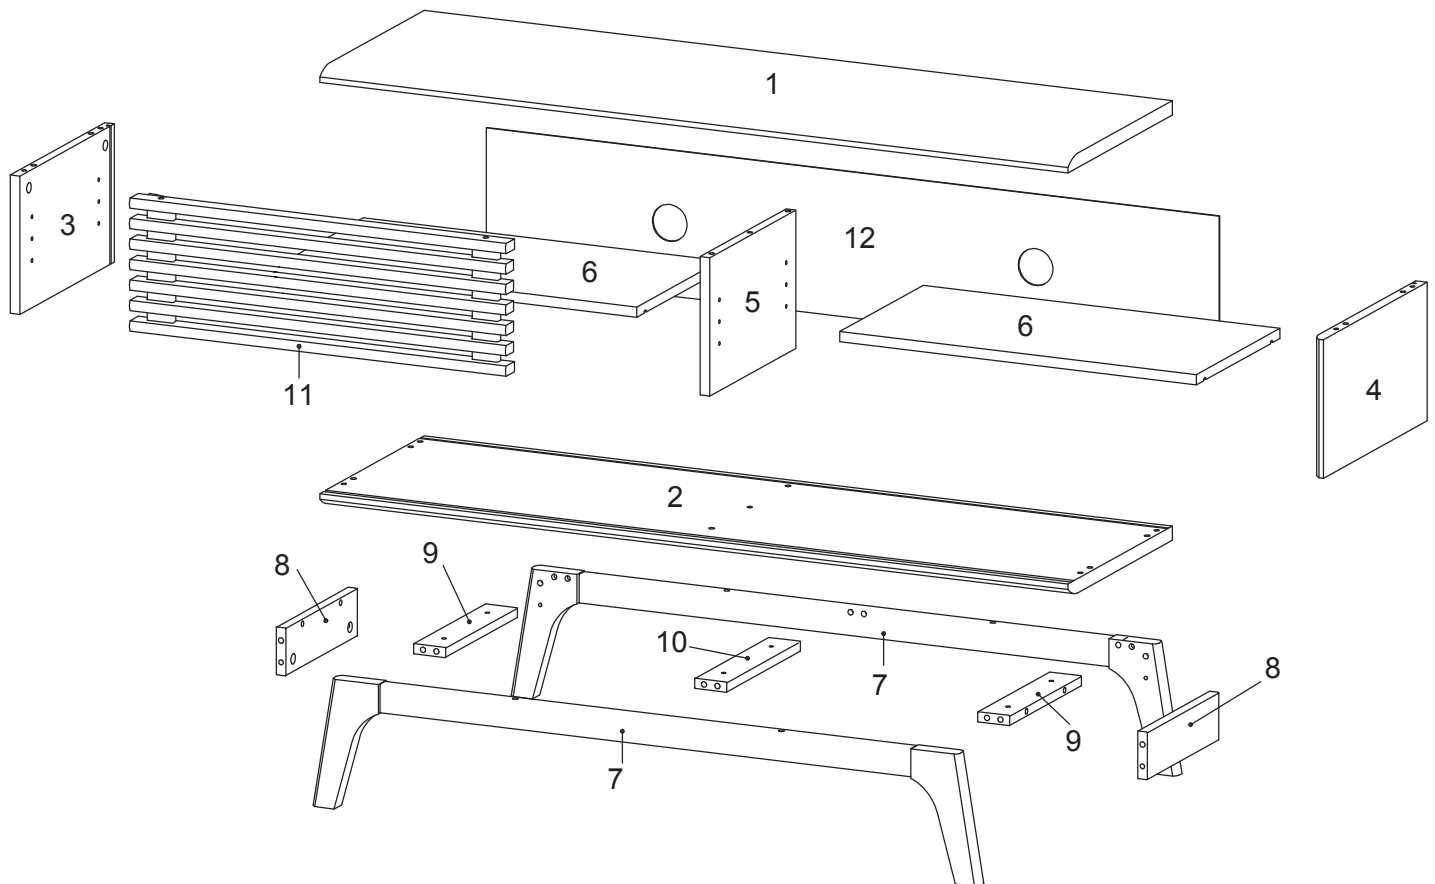


1	Top Board	x1	2	Bottom Board	x1	3	Side Board Left	x1	4	Side Board Right	x1
5	Center Board	x1	6	Adjustable Shelf	x2	7	Leg	x2	8	Support Board 1	x2
9	Support Board 2	x2	10	Support Board 3	x1	11	Door	x1	12	Back Board	x1

 
STEP 1:

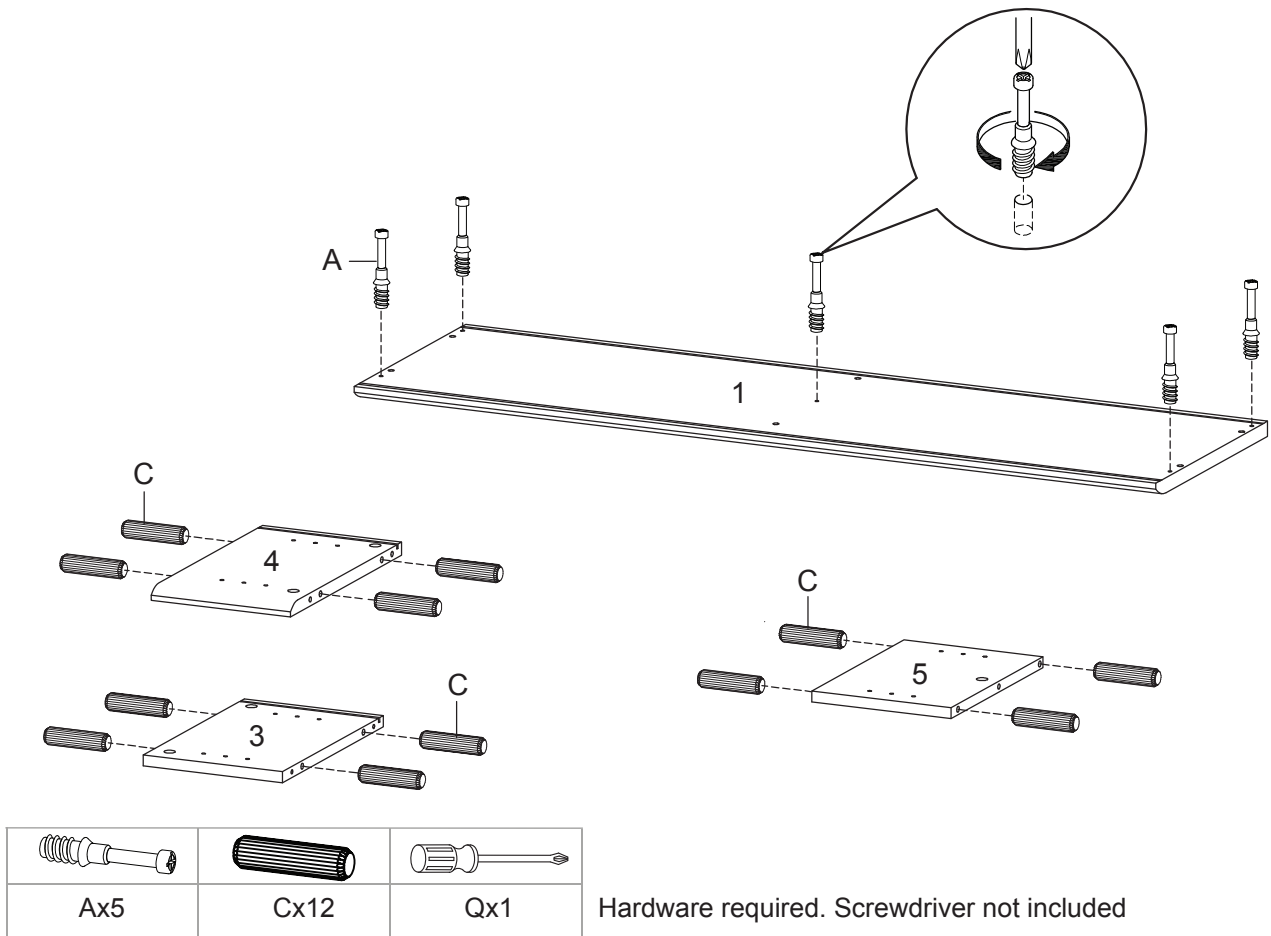

 
STEP 2:

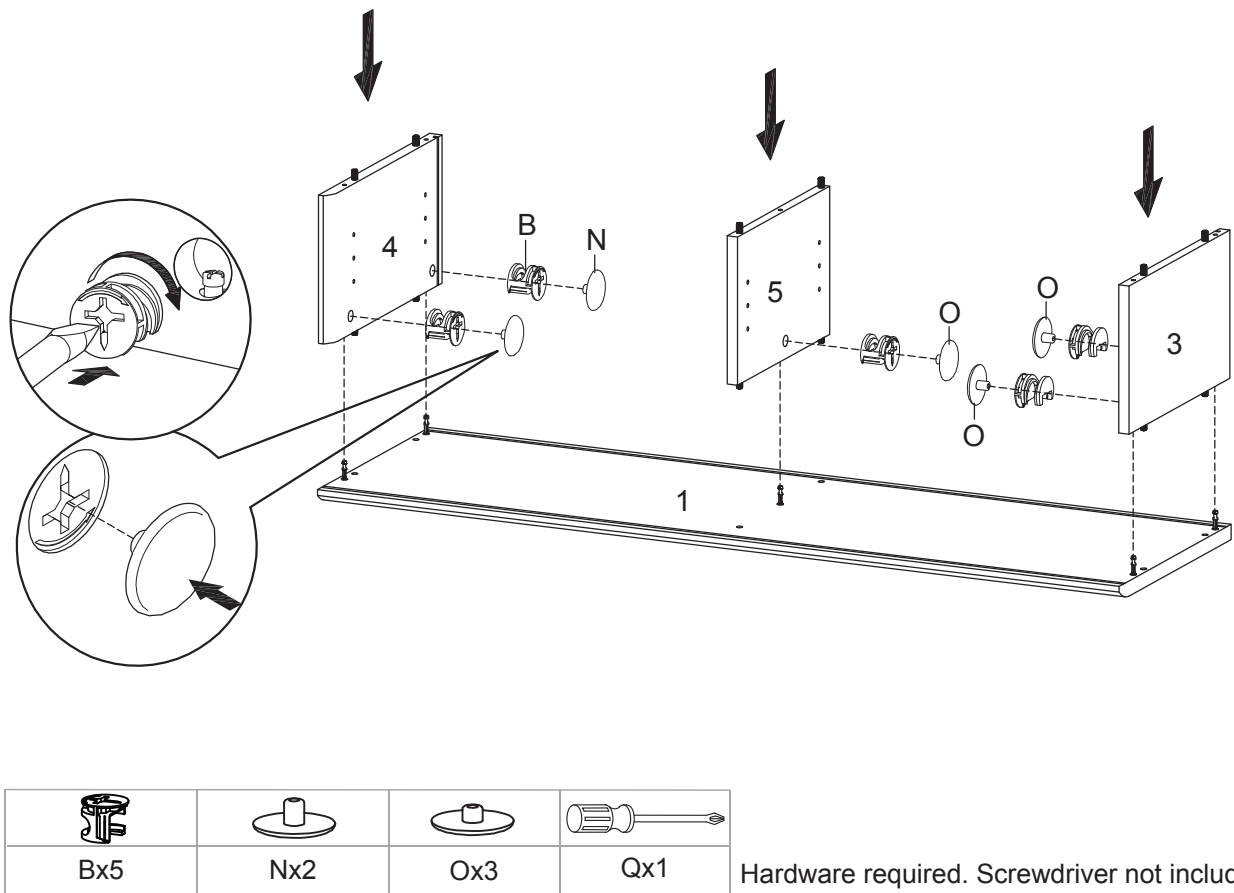

 STEP 3:


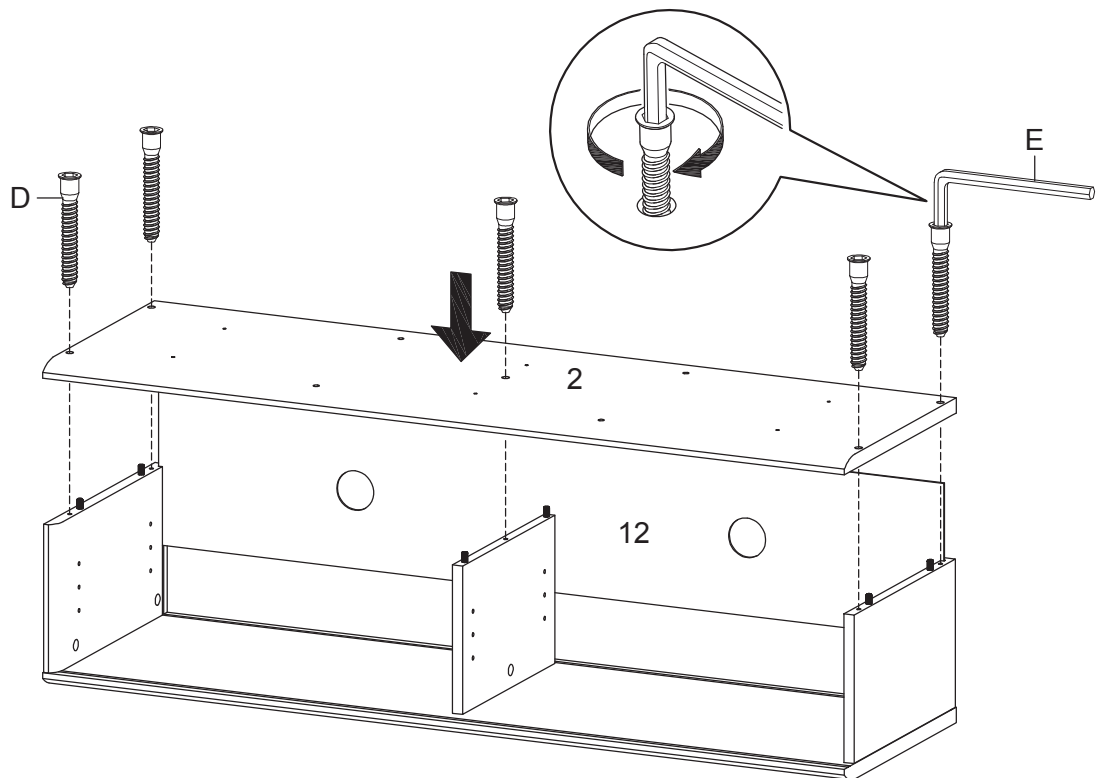


 Attention: Insert part 12 (Back Board) first and then part 2 (Bottom Board)




Hardware required

  STEP 4:

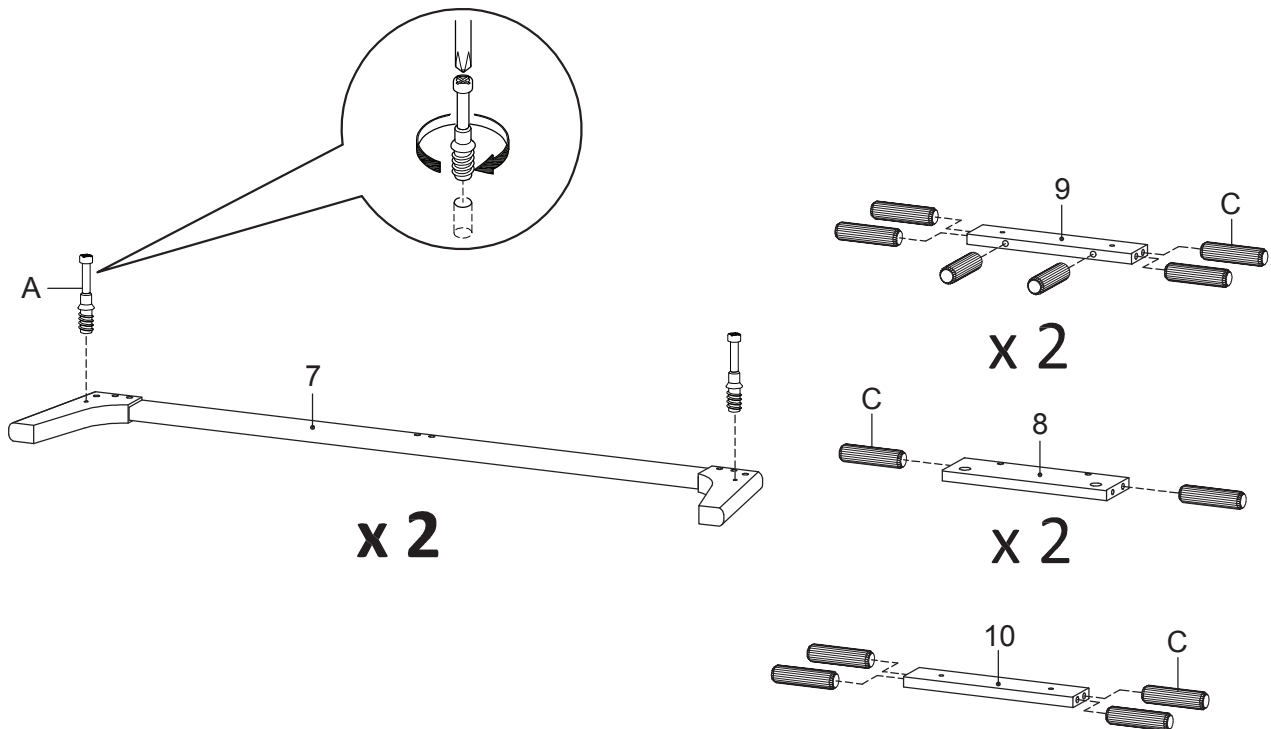


Hardware required. Screwdriver not included


 
STEP 5:

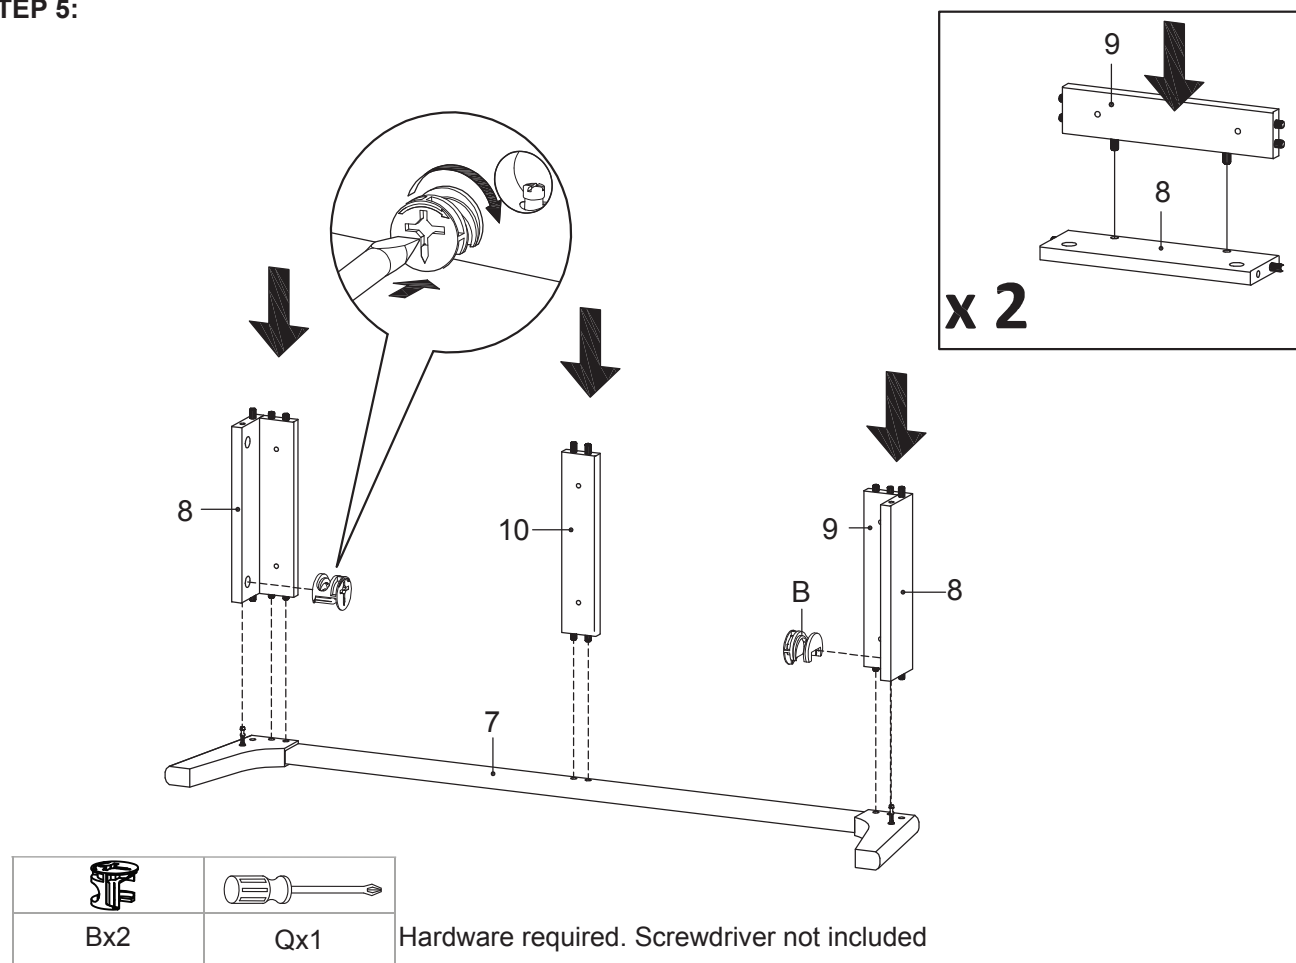

 STEP 6:

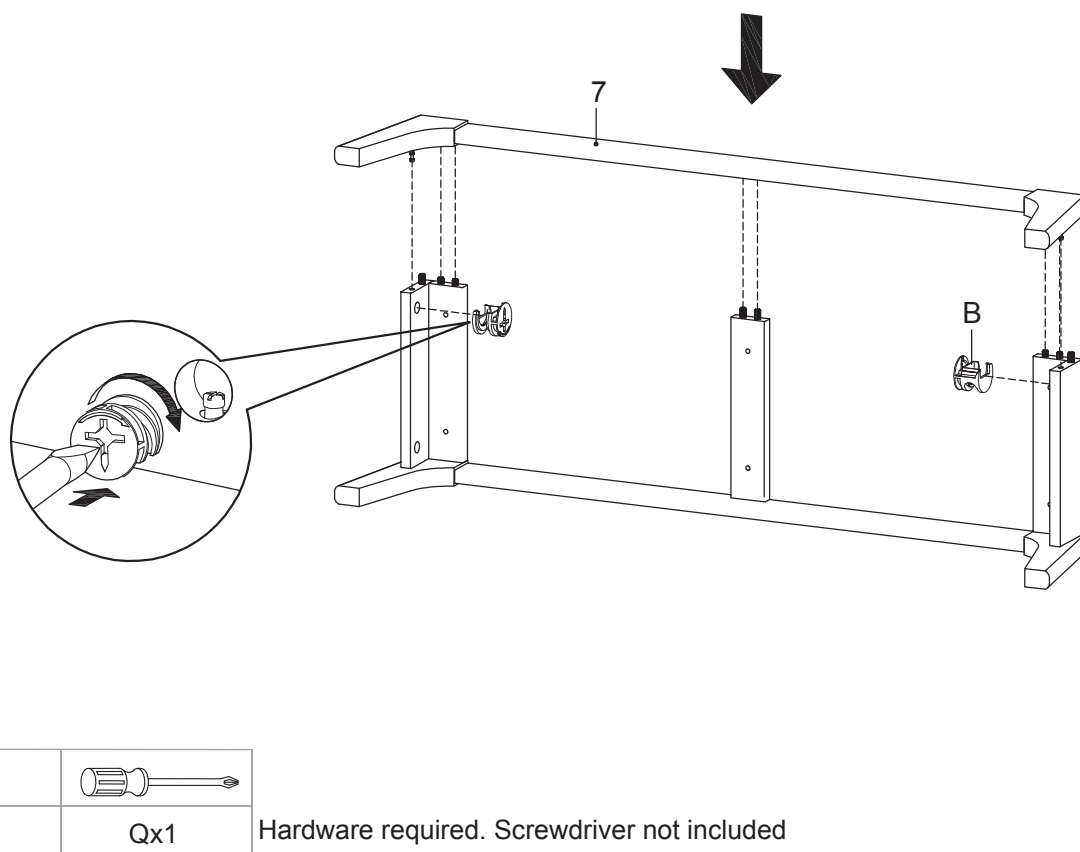

 
 
STEP 7:

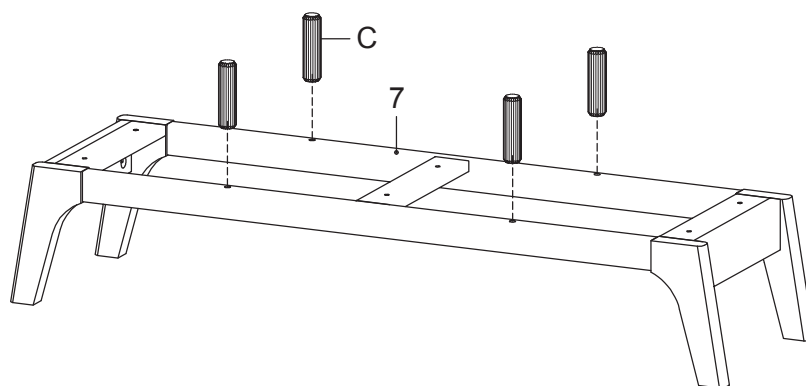

Cx4

Hardware required

  STEP 8:

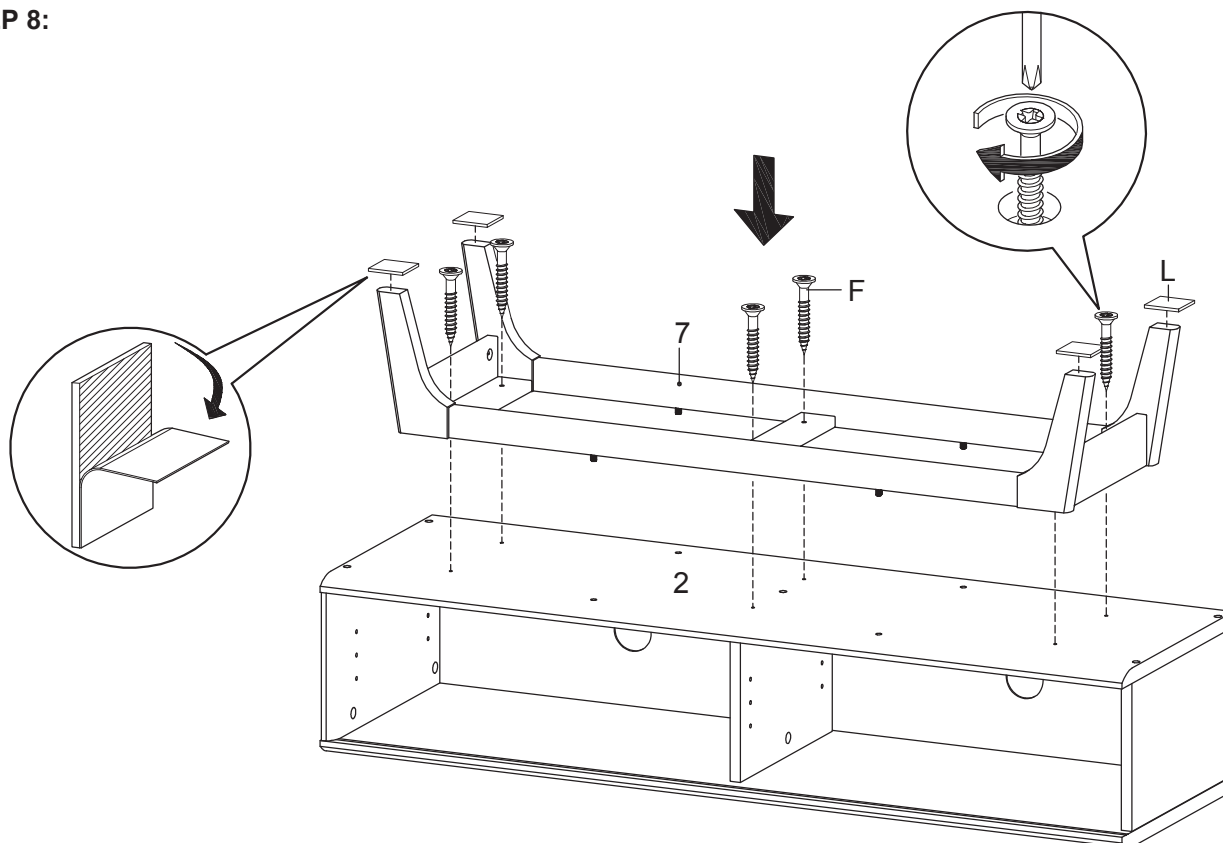



Fx6

Lx4

Qx1

Hardware required. Screwdriver not included

 
 
STEP 9:

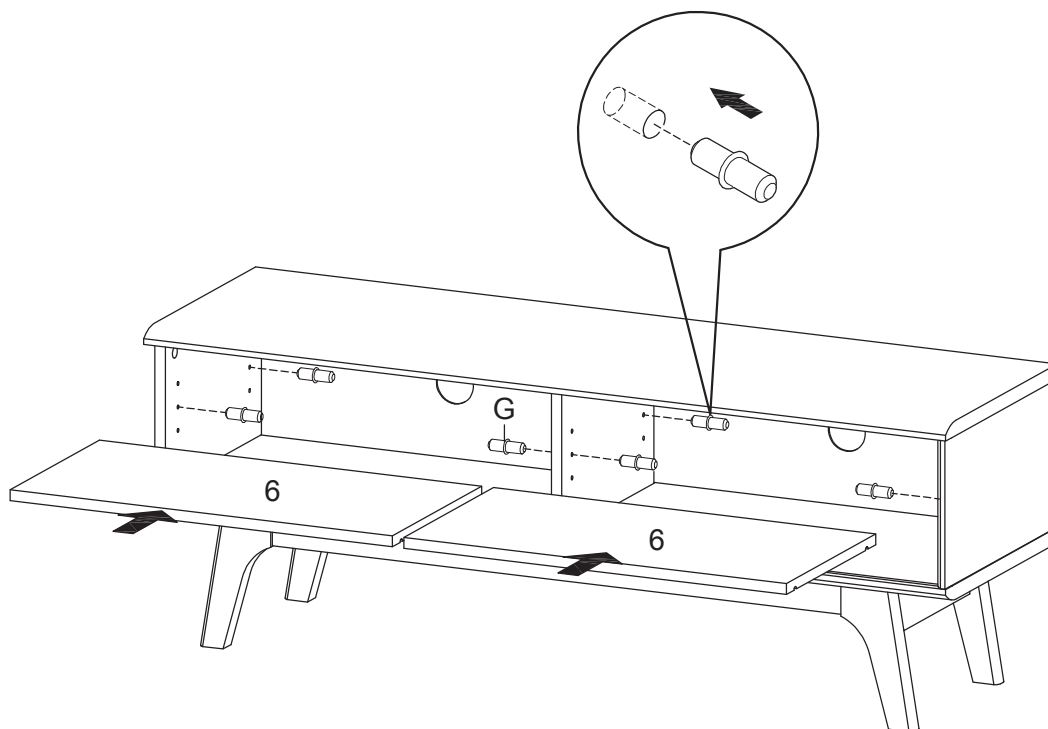

Gx8

Hardware required

  STEP 10:

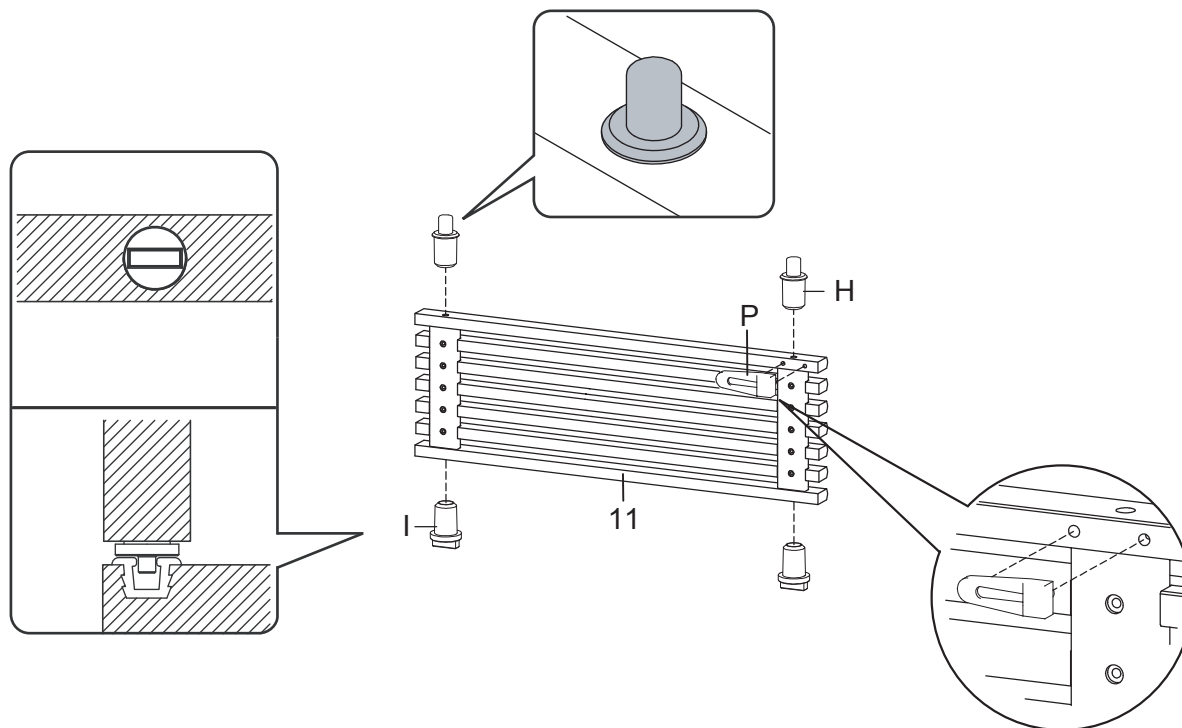


Hx2

Ix2

Px1

Hardware required



 
STEP 11:

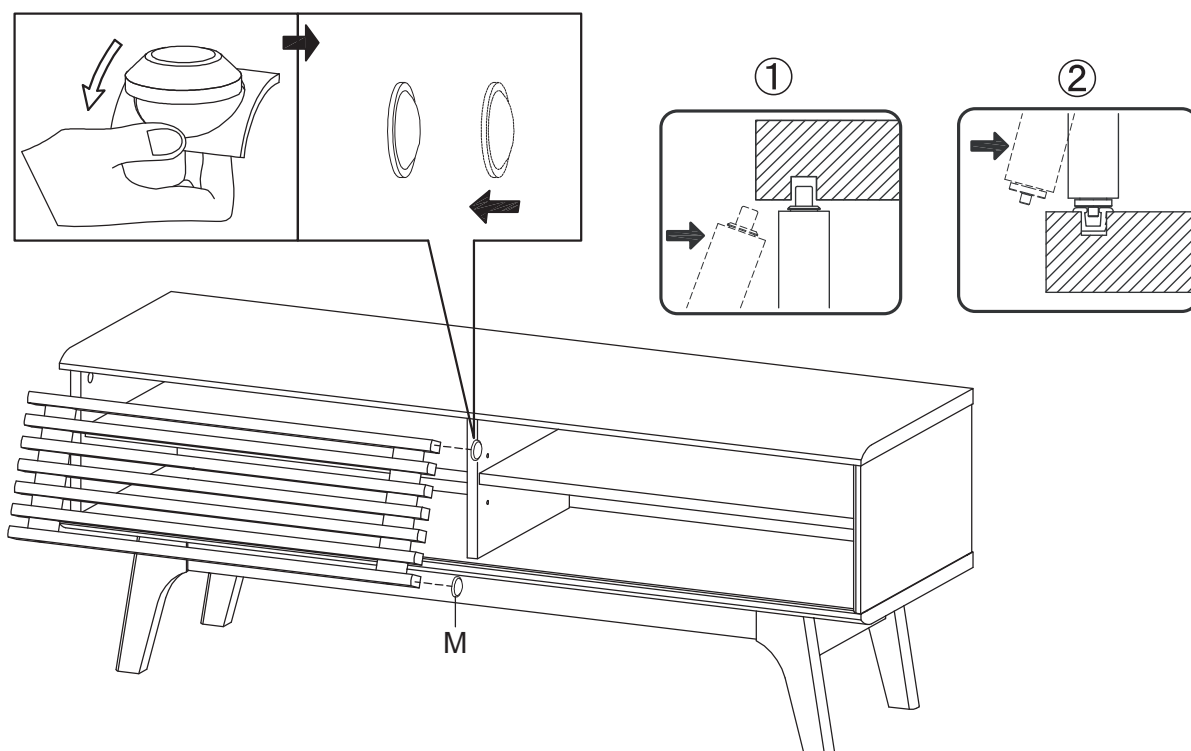

Mx2

Hardware required

   STEP 12:

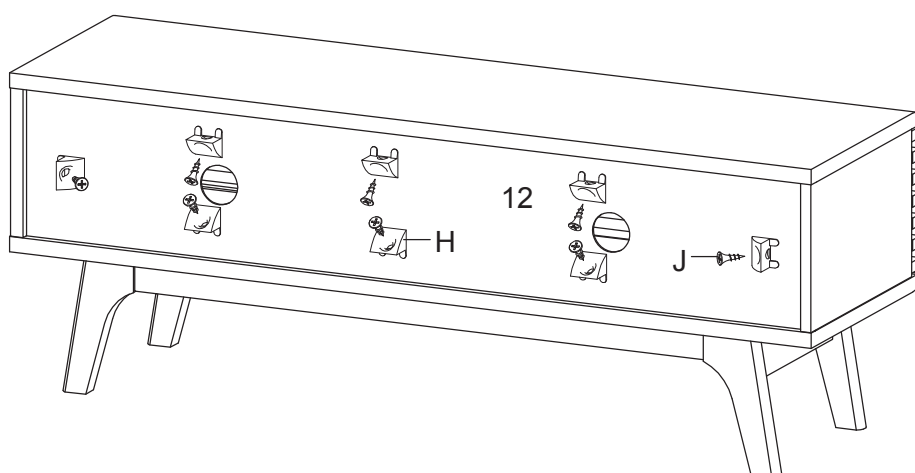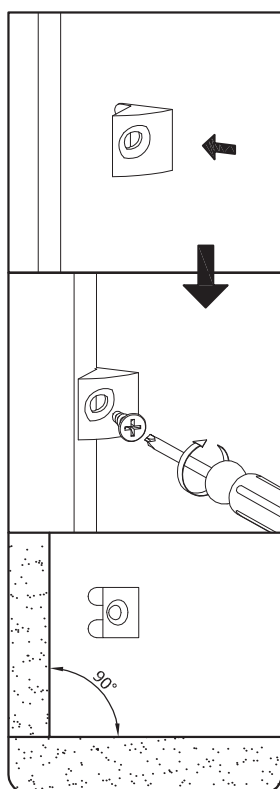


Jx8

Kx8

Qx1

Hardware required. Screwdriver not included

 STEP 13:

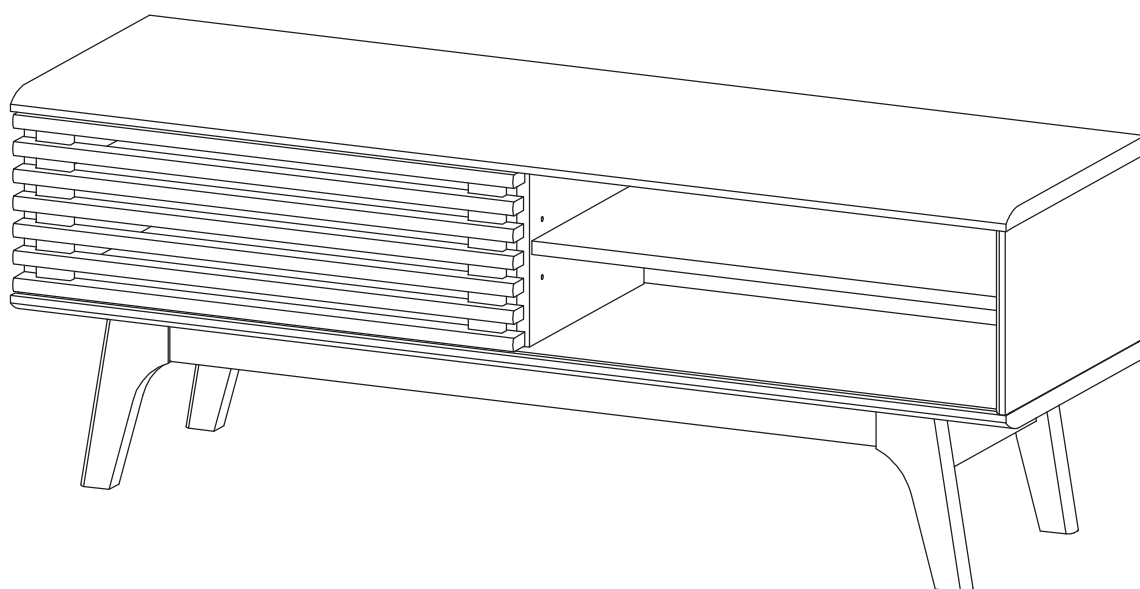

Assembly is complete. The TV Stand is ready to enjoy now !