 


Thank you for purchasing the **MODWAY TV STAND!**

Before you start, here are some helpful advice:

 
1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the TV Stand, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.

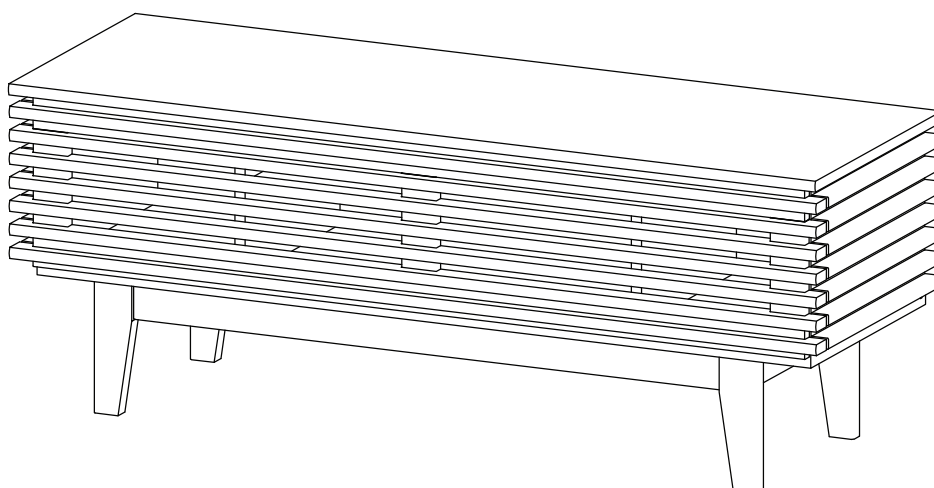

## Hardware :

 
<b>A)</b> Cambolt/Metal  $\varnothing$ 6 x 35 mm x 10	<b>B)</b> CamLock /Metal  $\varnothing$ 15 mm x 10	<b>C)</b> Dowel /Wood  $\varnothing$ 8 x 30 mm x 26	<b>D)</b> Screw/Metal  M 12 x 55 mm x 8	<b>E)</b> Lidstay/Metal,Plastic  207 x 45.6 x 20.5 mm x 2
<b>F)</b> Hinge Flappy/Metal  41 x 39.5 x 5.5 mm x 3	<b>G)</b> Screw/Metal  M 6.5 x 12 mm x 18	<b>H)</b> Screw/Metal  M 3.5 x 13 mm x 4	<b>I)</b> Screw/Metal  M 6 x 13 mm x 8	<b>J)</b> Stopper Clamp/Plastic  x 2
<b>K)</b> Shelf Pin/Metal  $\varnothing$ 5 x 15 mm x 4	<b>L)</b> Wedge/Plastic  9 x 14 x 10 mm x 10	<b>M)</b> Screw/Metal  M 3.5 x 15.5 mm x 10	<b>N)</b> Foam Pad/Spon  19 x 33 x 2 mm x 4	<b>O)</b> Screw/Metal  M 7 x 50 mm x 6
<b>P)</b> Key/Metal  L 4 x 1	<b>Q)</b> Screw Cup/Plastic  $\varnothing$ 15 mm x 6	<b>R)</b> x 1  Screwdriver (Not Include)		

## Components:

 
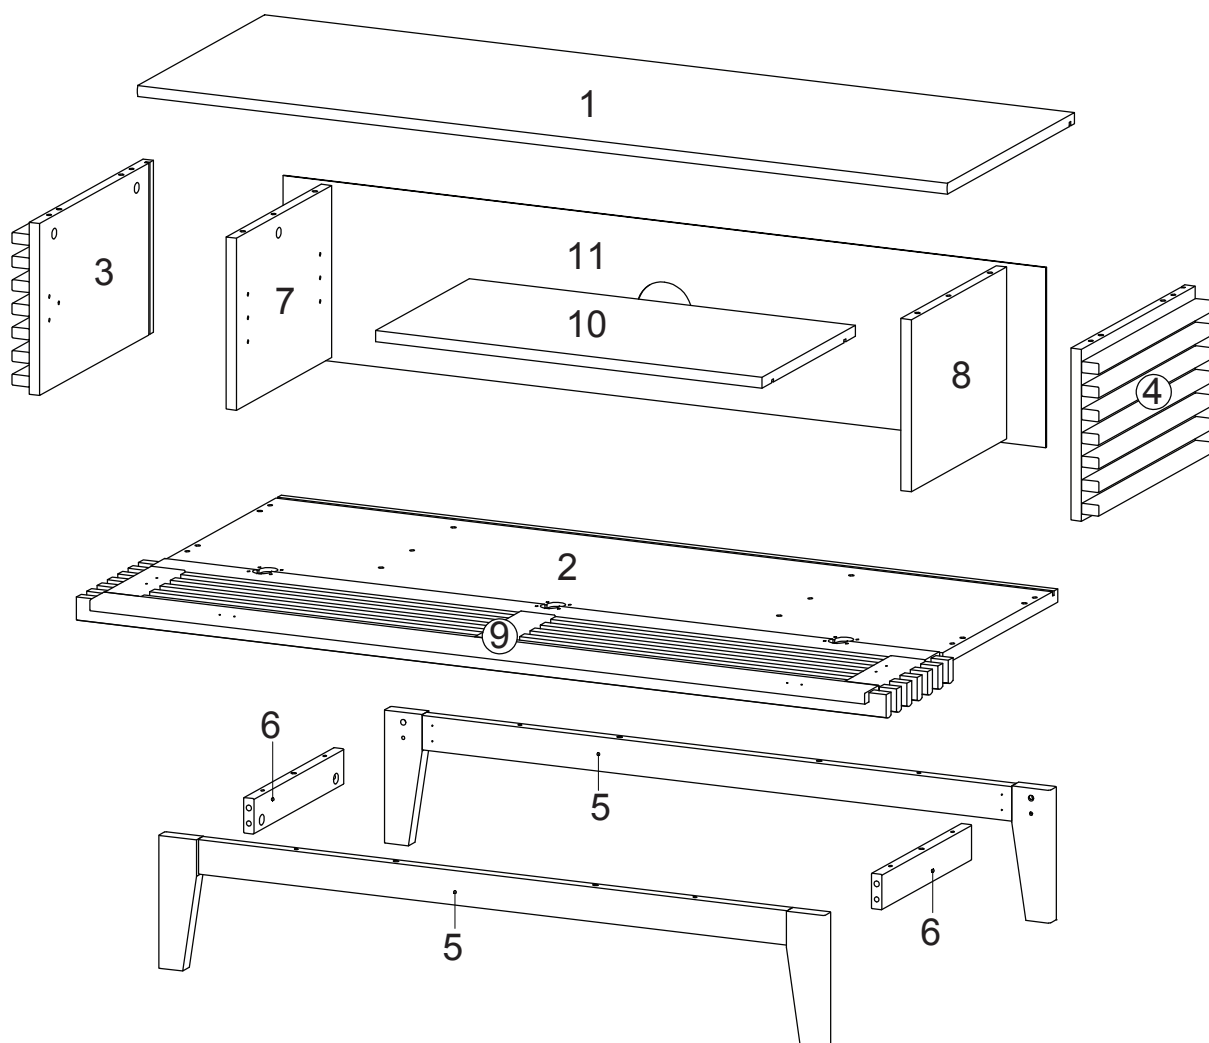 

 
 
 
 


1	Top Board	x1	2	Bottom Board	x1	3	Side Board Left	x1	4	Side Board Right	x1
5	Assembly Leg	x2	6	Support Board	x2	7	Centre Board Left	x1	8	Centre Board Right	x1
9	Frame Door	x2	10	Adjustable	x1	11	Back Board	x1			

 
## STEP 1:

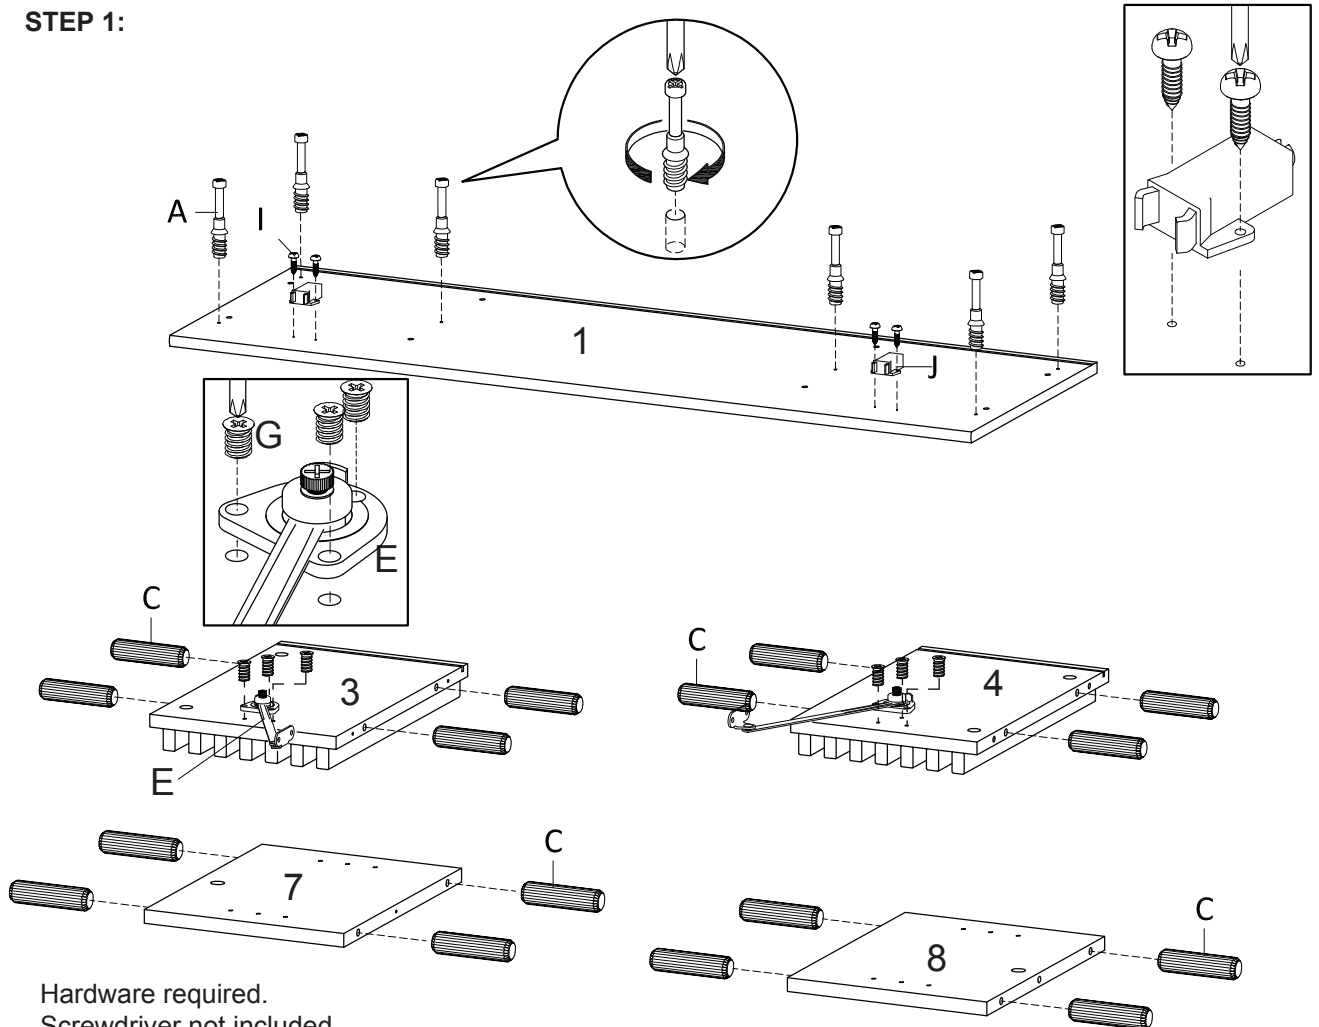
 
 


Hardware required.  
Screwdriver not included

						
Ax6	Cx16	Ex2	Gx6	Ix4	Jx2	Rx1

 
## STEP 2:

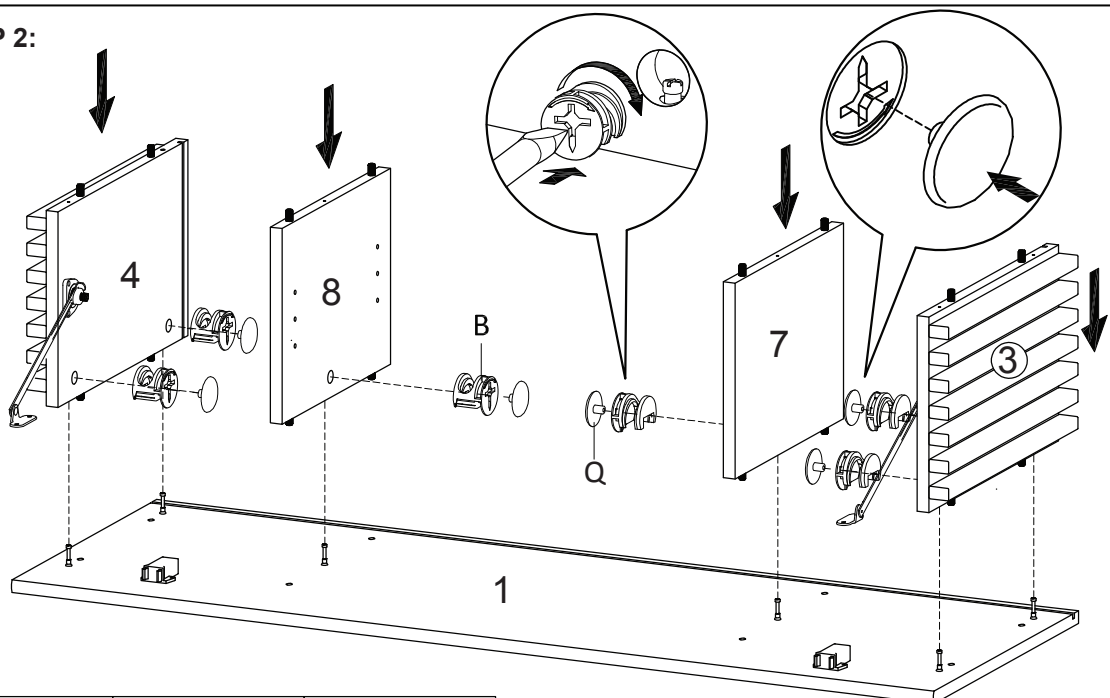

 
		
Bx6	Qx6	Rx1

Hardware required.  
Screwdriver not included

 
## STEP 3:

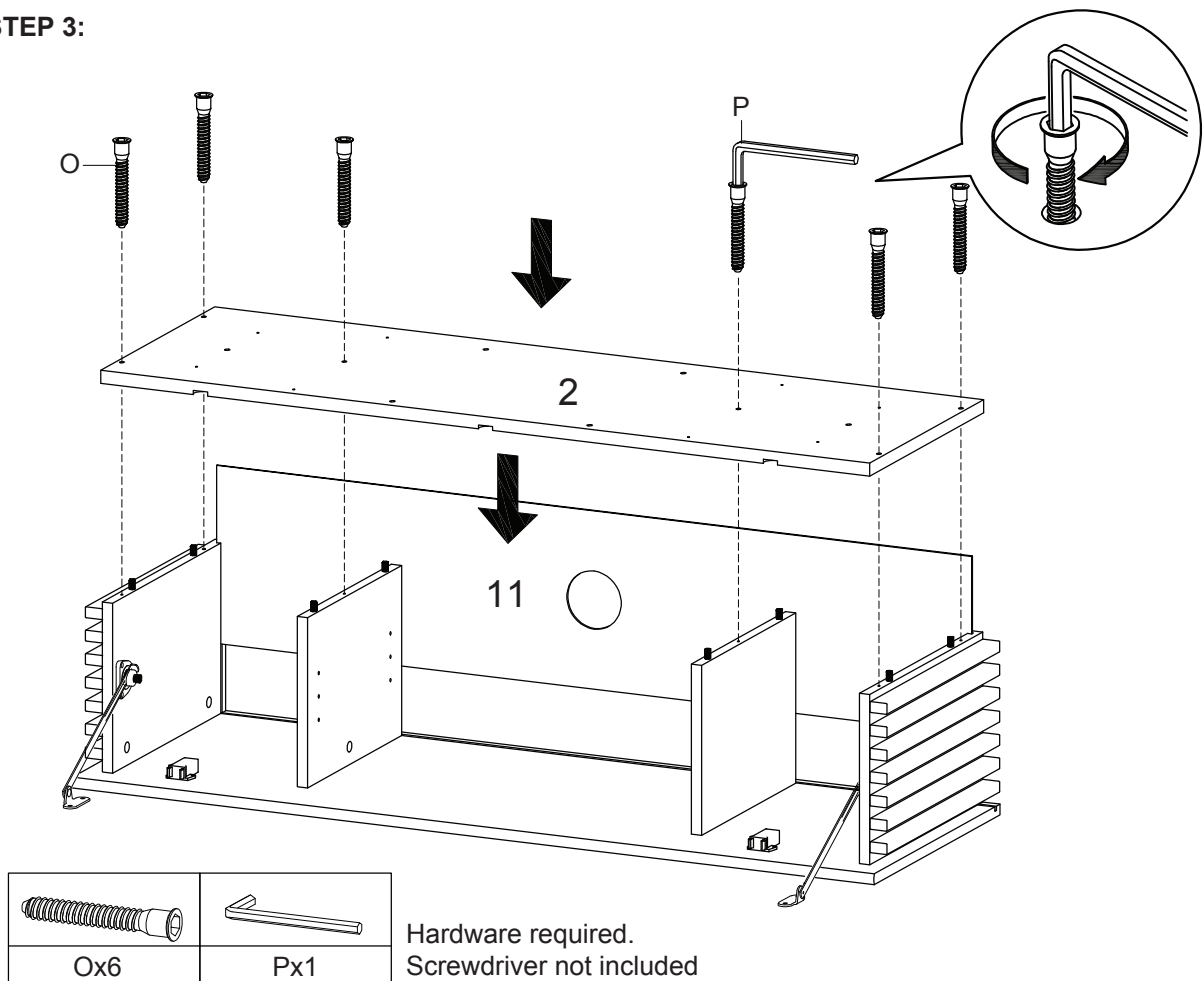

## STEP 4:

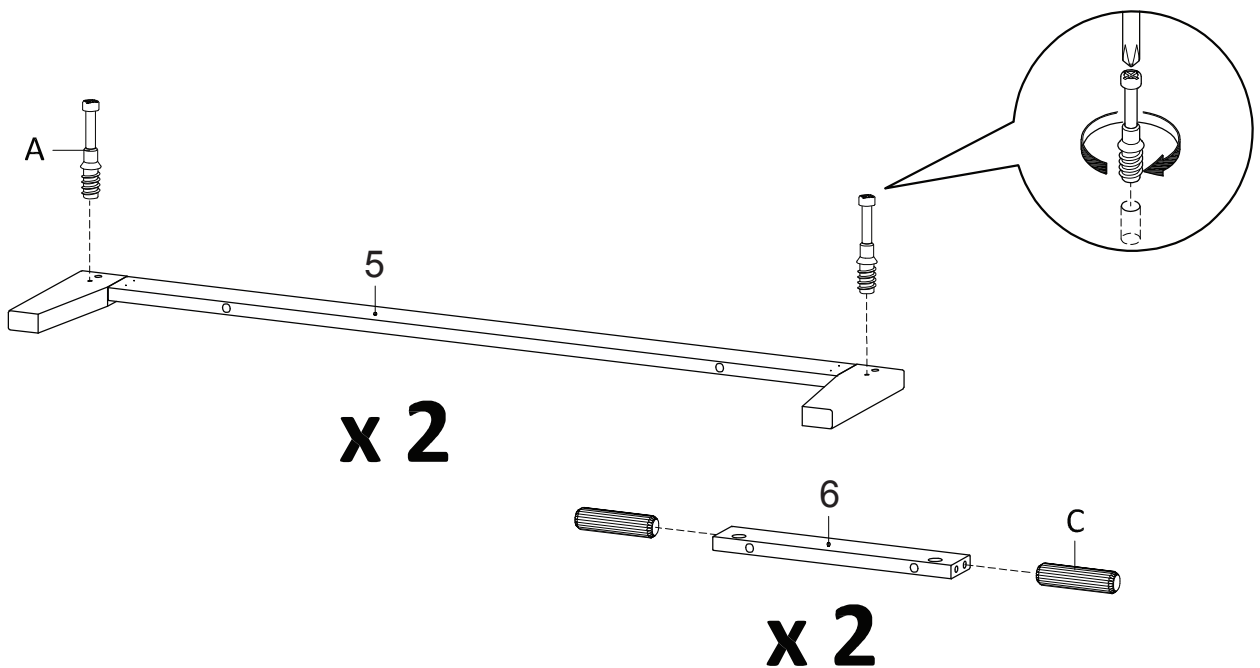

 
## STEP 5:

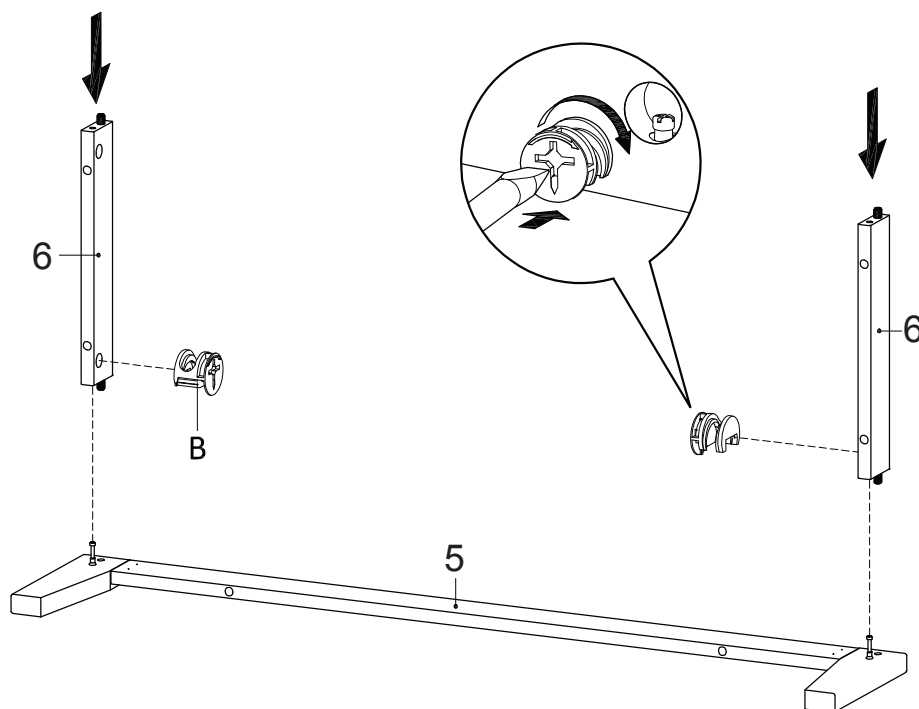

Bx2	Rx1

Hardware required.  
Screwdriver not included

 
 
## STEP 6:

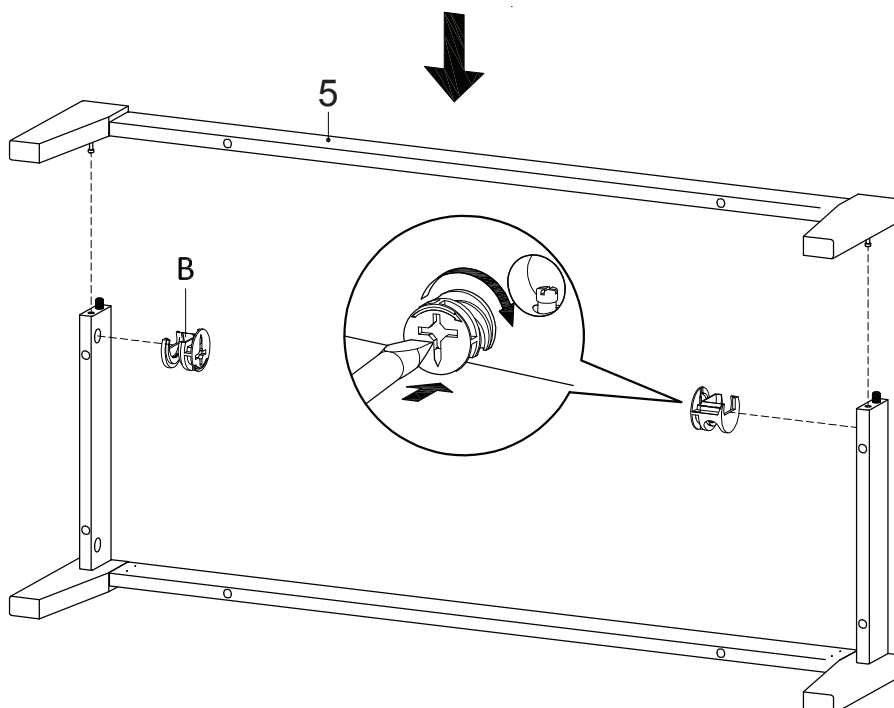

Bx2	Rx1

Hardware required.  
Screwdriver not included

 
 
## STEP 7:

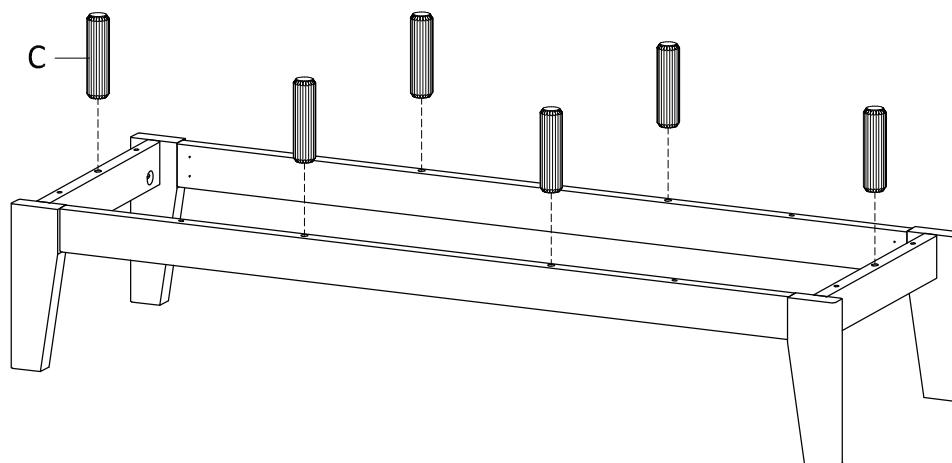

Cx6

Hardware required.

## STEP 8:

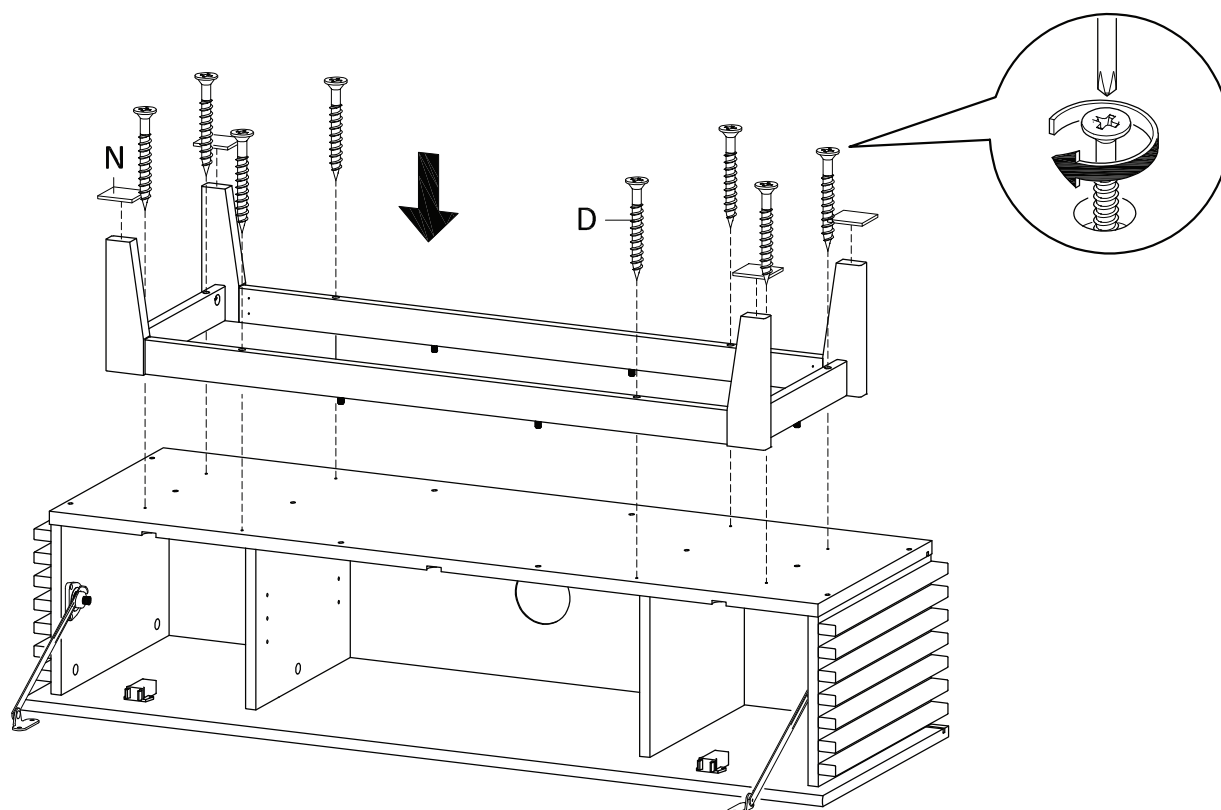

 
 
Dx8

Nx4

Rx1

 
Hardware required.  
Screwdriver not included


 

 
 
STEP 9:

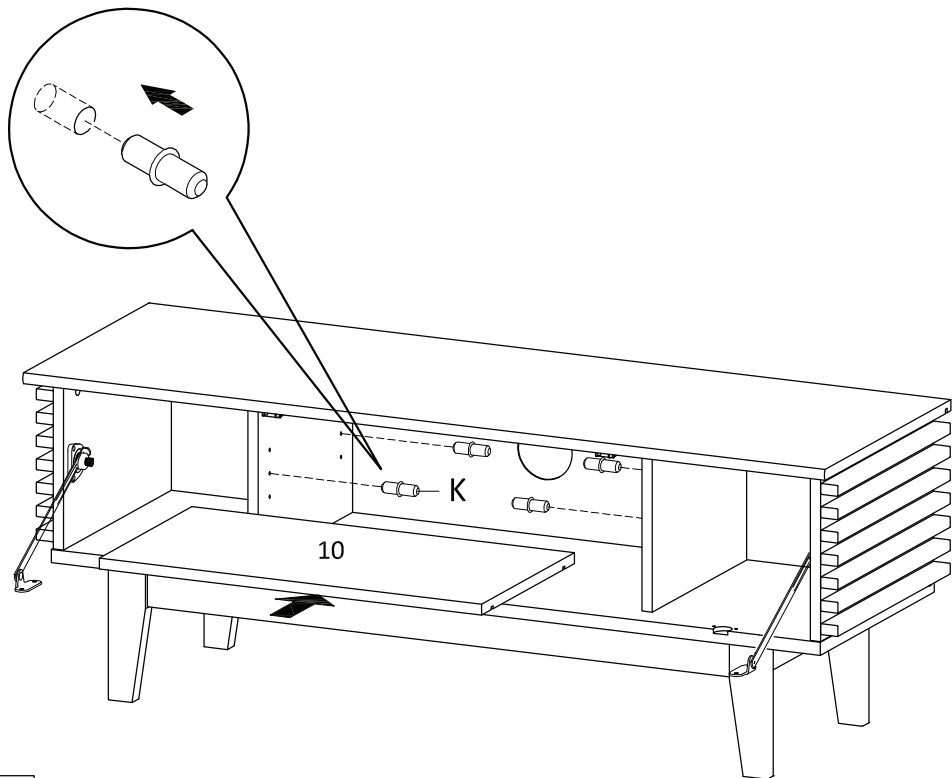

Hardware required.

 
STEP 10:

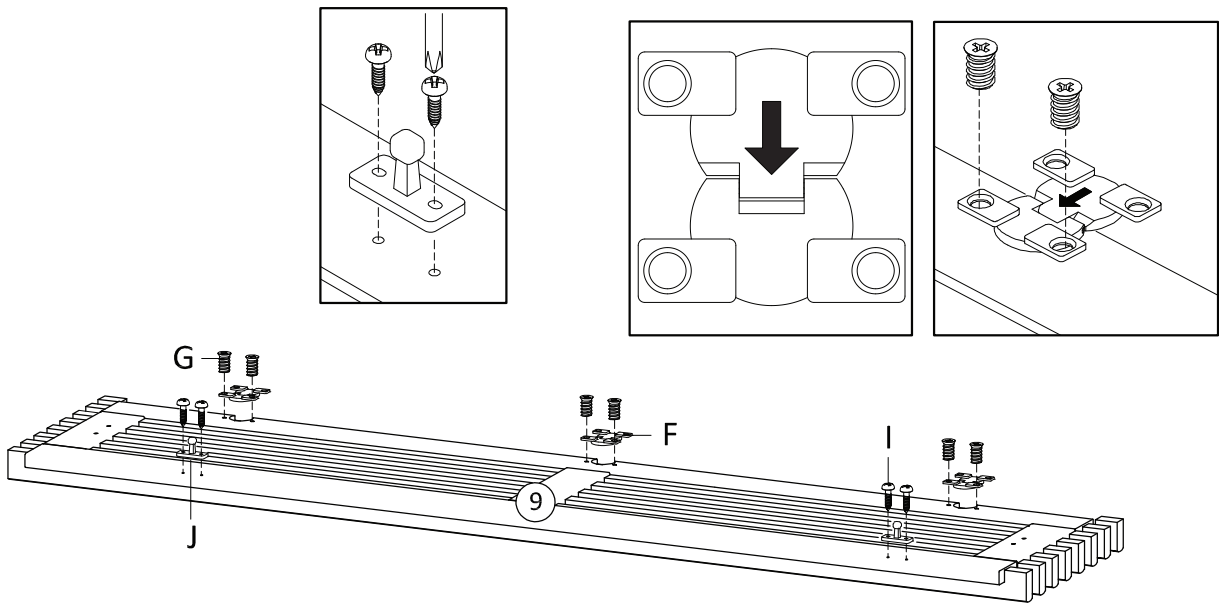




				
Fx3	Gx6	Ix4	Jx2	Rx1

Hardware required.  
Screwdriver not included

 
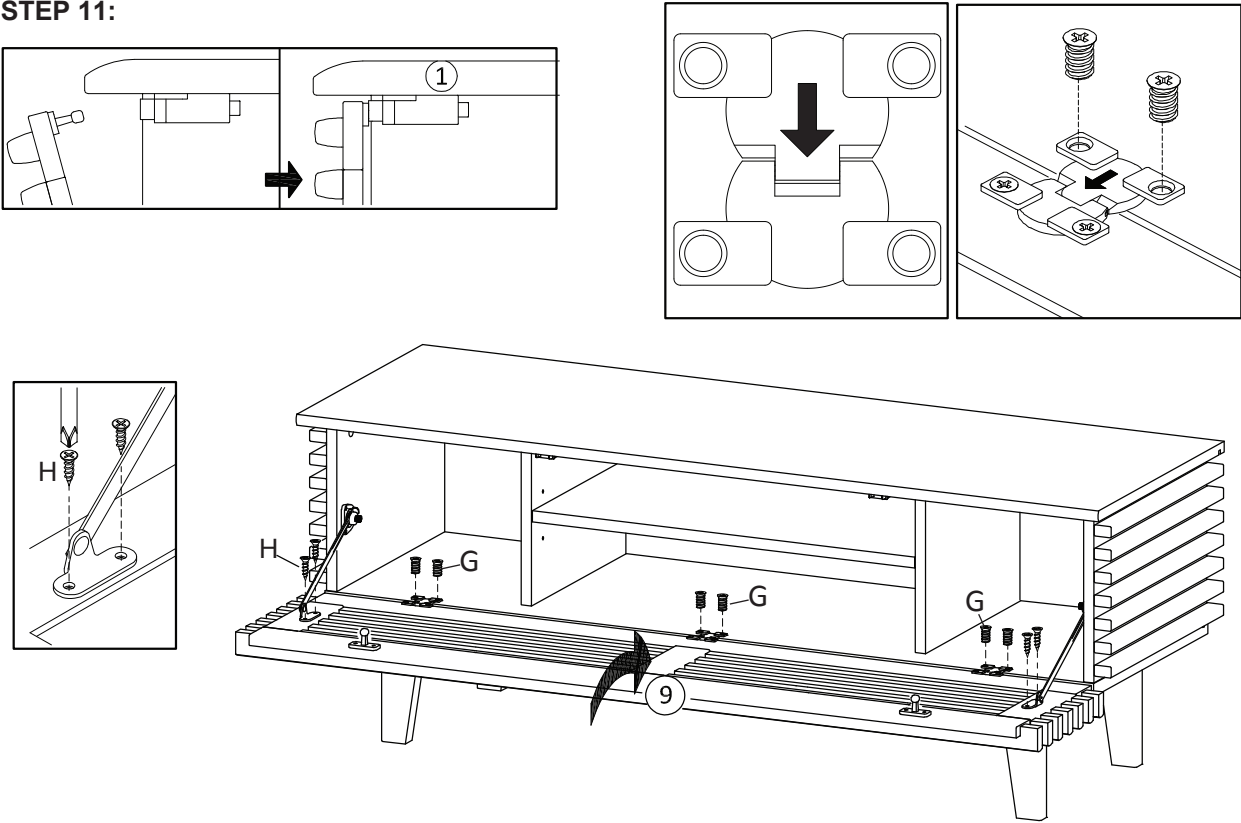 
STEP 11:






		
Gx6	Hx4	Rx1

Hardware required.  
Screwdriver not included

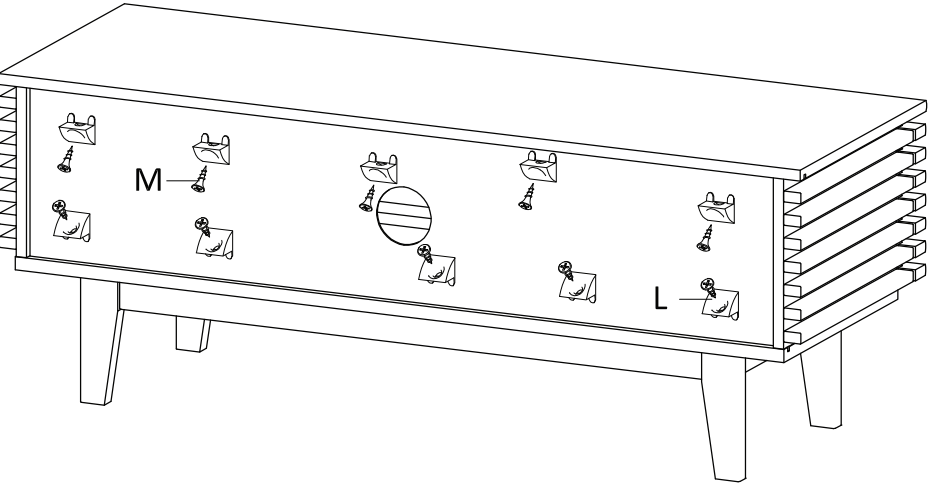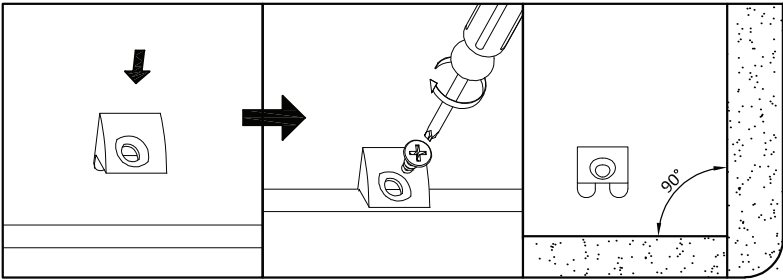STEP 12:

 


		
Lx10	Mx10	Rx1

Hardware required.  
Screwdriver not included



## STEP 13:

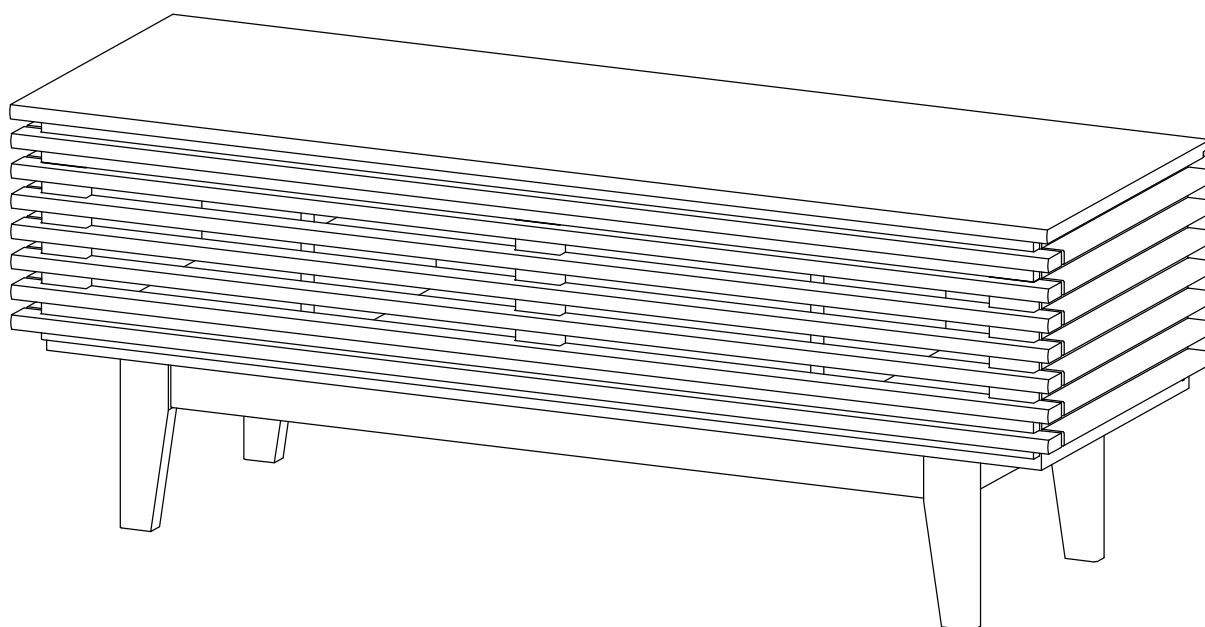

**Assembly is completed. The TV Stand is ready to enjoy now!**

