 


 


 
 




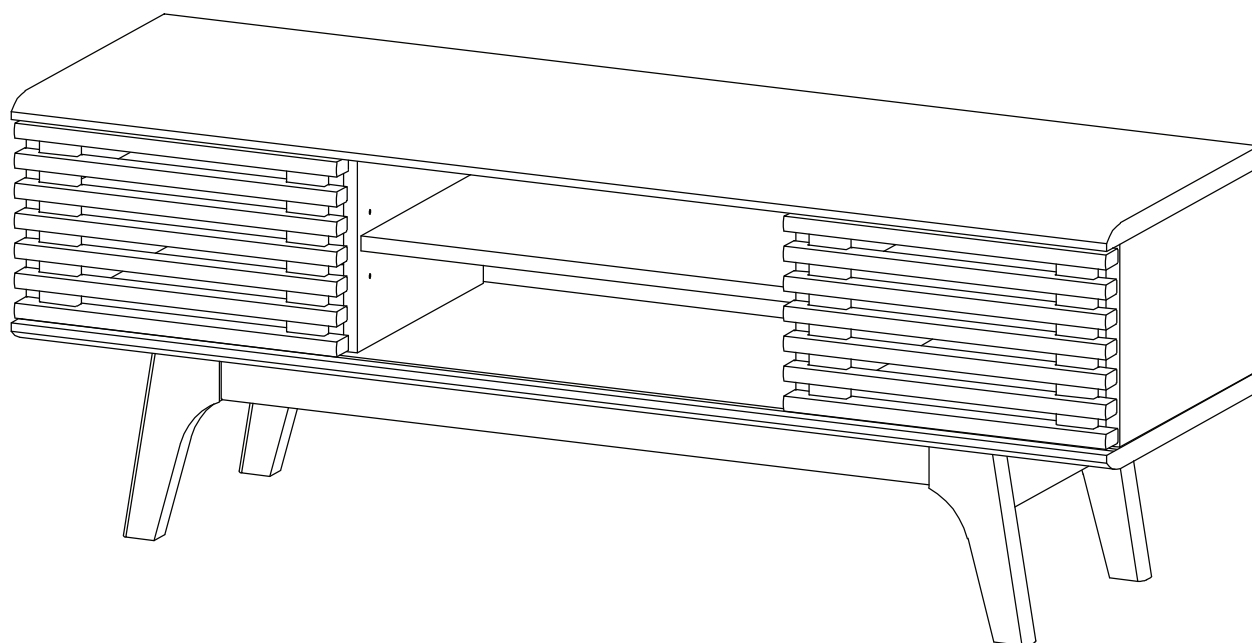


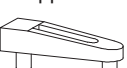



Thank you for purchasing the **MODWAY TV Stand** !

Before you start, here are some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the TV Stand, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.



Hardware :


A) Cambolt/Metal  \varnothing 6 x 35 mm x 10	B) CamLock/Metal  \varnothing 15 mm x 10	C) Dowel/Wood  \varnothing 8 x 30 mm x 40	D) Screw/Metal  M 12 x 35 mm x 6	E) Screw/Metal  M 7 x 50 mm x 6
F) Shelf Pin/Metal  \varnothing 5 x 15 mm x 12	G) Screw/Metal  M 3.5 x 15.5 mm x 10	H) Wedge/Plastic  9 x 14 x 10 mm x 10	I) Foam Pad/Spon  25 x 25 x 2 mm x 4	J) Key/Metal  L 4 x 1
K) Pin Sliding Top/Plastic  \varnothing 8 x 19 mm x 4	L) Buffer/Rubber  \varnothing 8 mm x 1	M) Stopper/Plastic  42 x 14 x 8 mm x 2	N) Pin Sliding Bottom/Plastic  \varnothing 8 x 16 mm x 4	O) Screw Cup/Plastic  \varnothing 15 mm x 6
P) x 1  Screwdriver (Not Include)				

 Components:

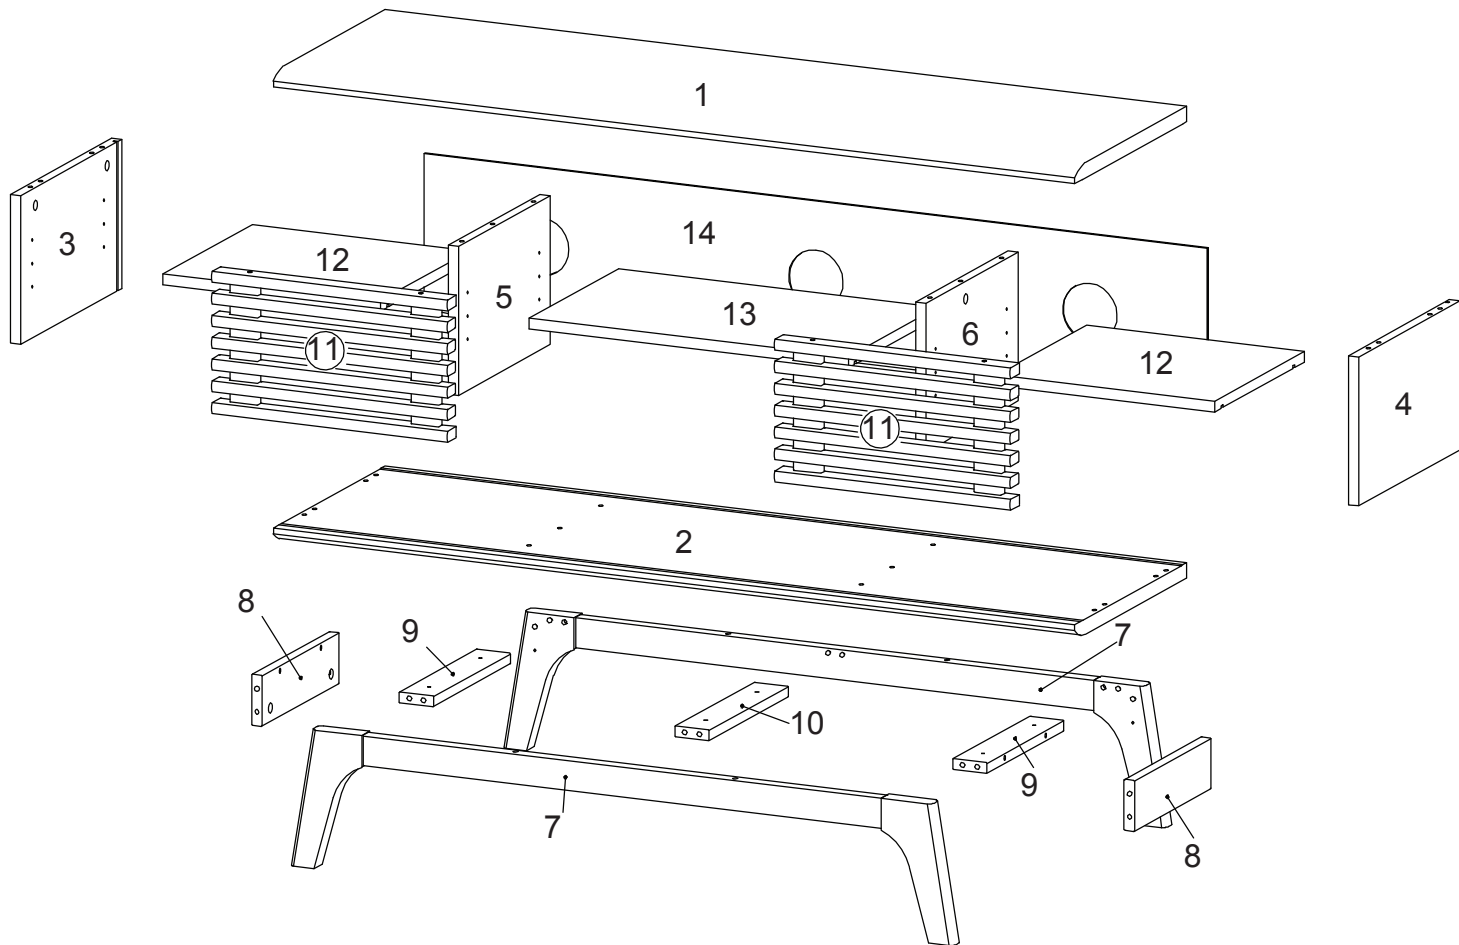


1	Top Board	x1	2	Bottom Board	x1	3	Side Board Left	x1	4	Side Board Right	x1
5	Center Board 1	x1	6	Center Board 2	x1	7	Leg	x2	8	Support Board 1	x2
9	Support Board 2	x2	10	Support Board 3	x1	11	Door	x2	12	Adjustable Shelf 1	x2
13	Adjustable Shelf 2	x1	14	Back Board	x1						

 
 
STEP 1:

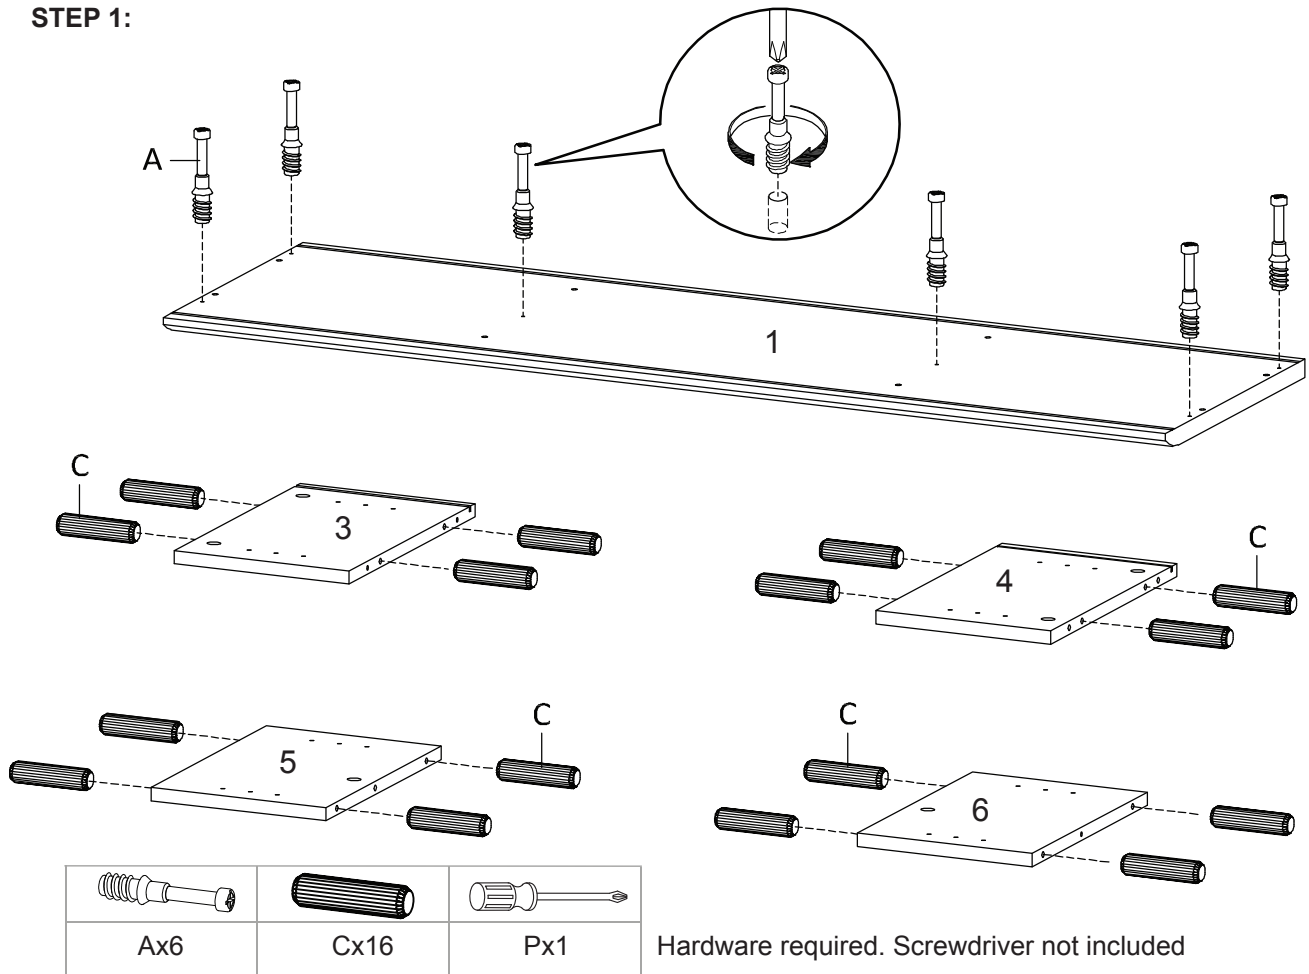

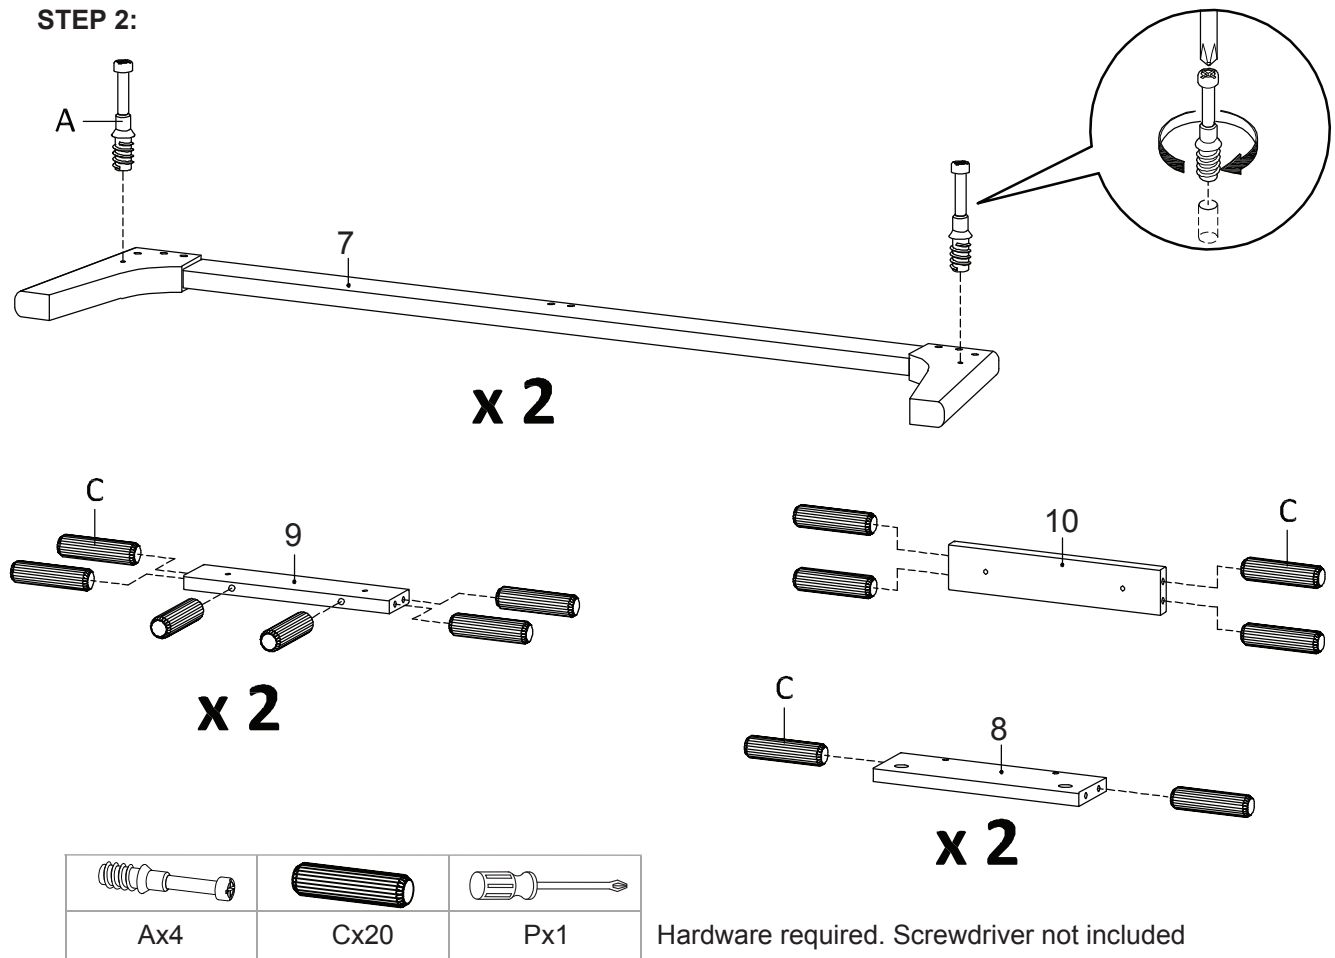

  STEP 2:

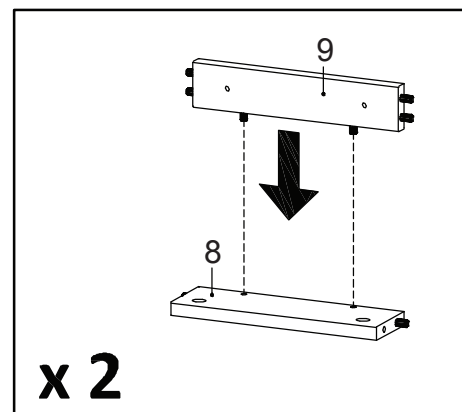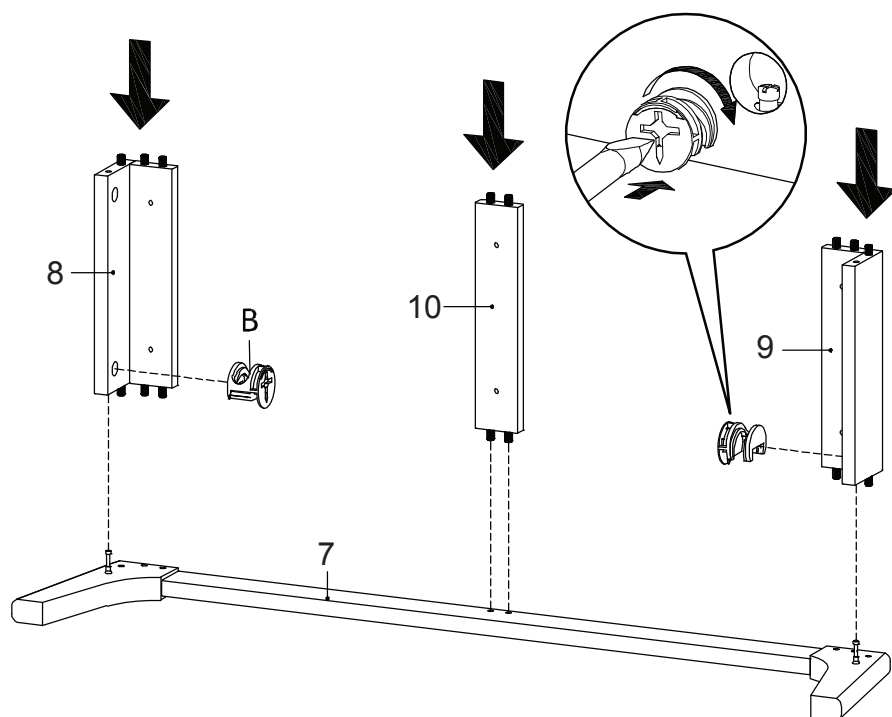


STEP 3:





	
Bx2	Px1

 Hardware required. Screwdriver not included

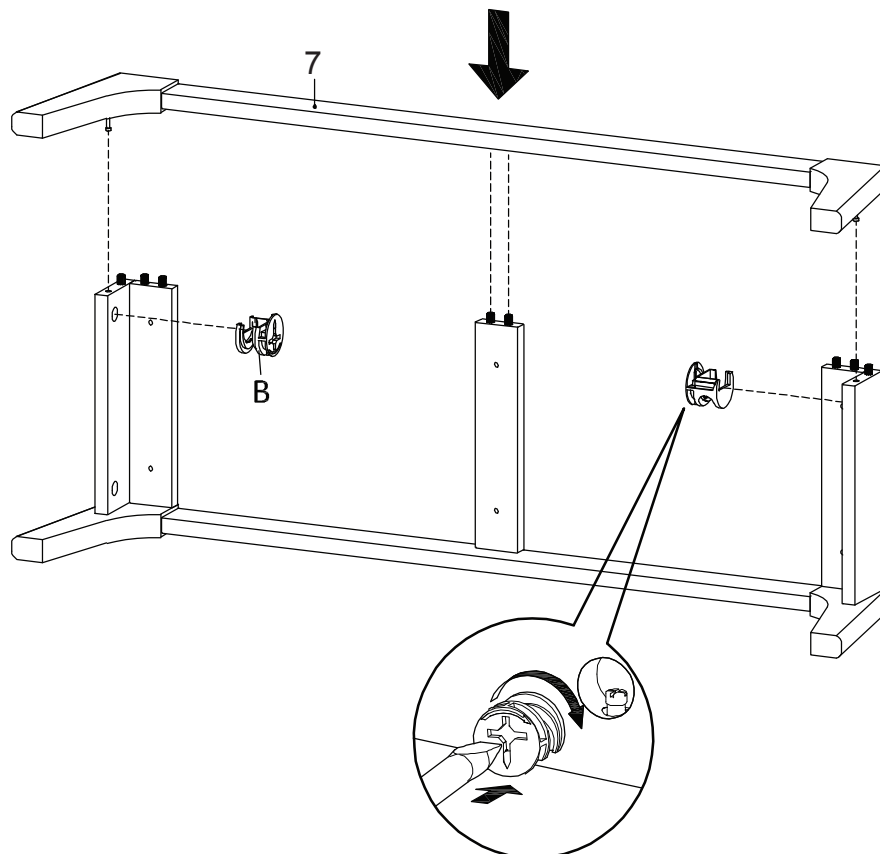STEP 4:





	
Bx2	Px1

Hardware required. Screwdriver not included

STEP 5:

 
 
To be continued to Step 8

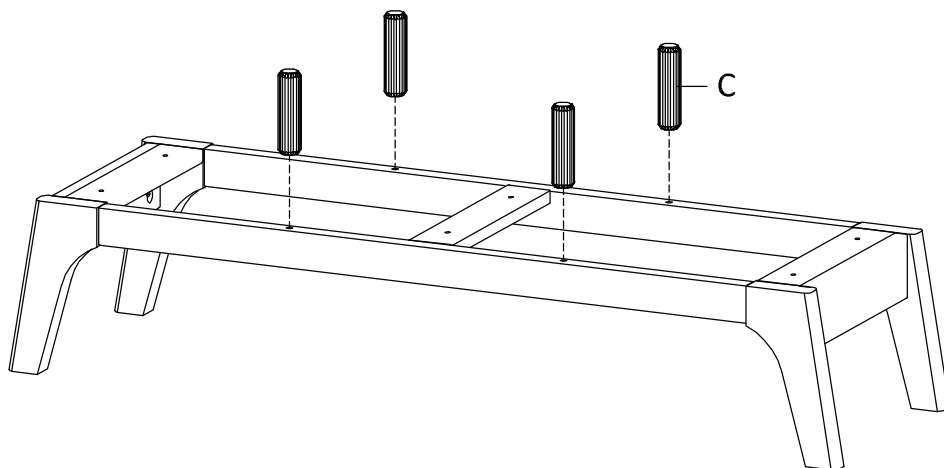

Cx4

Hardware required

  STEP 6:

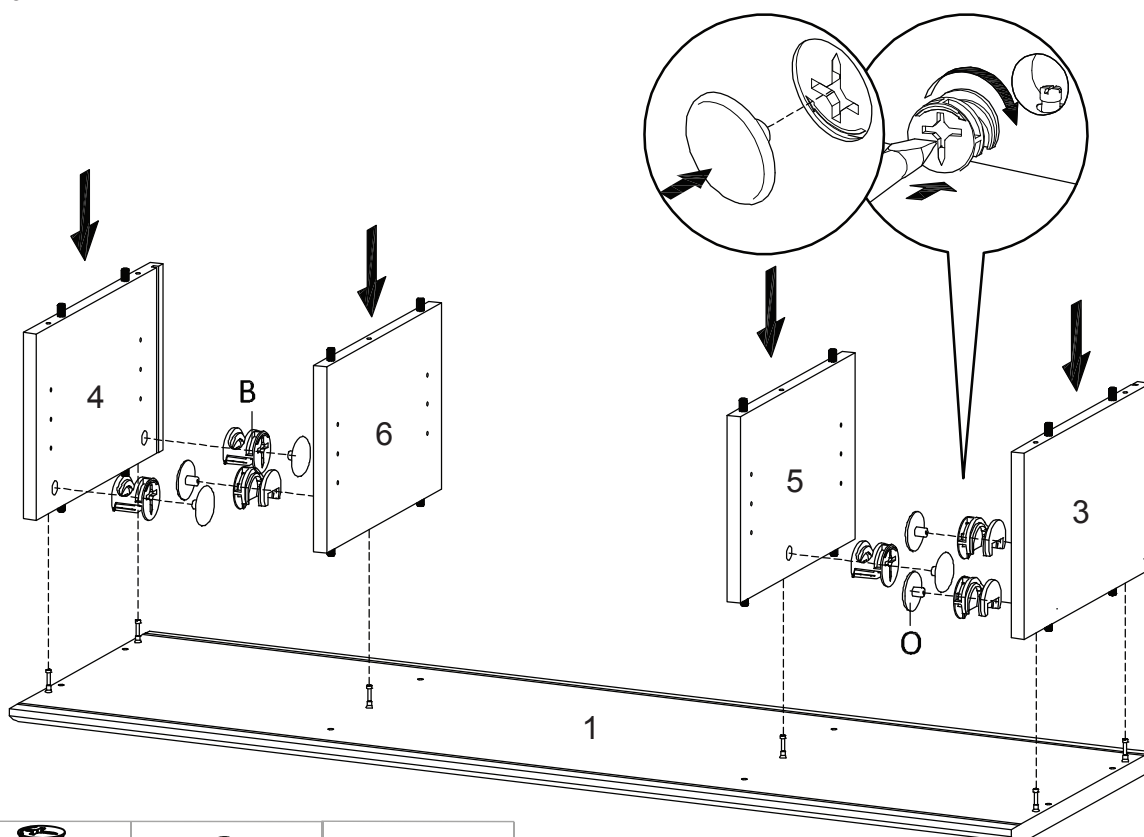


Bx6

Ox6


Px1

Hardware required. Screwdriver not included


 
STEP 7:

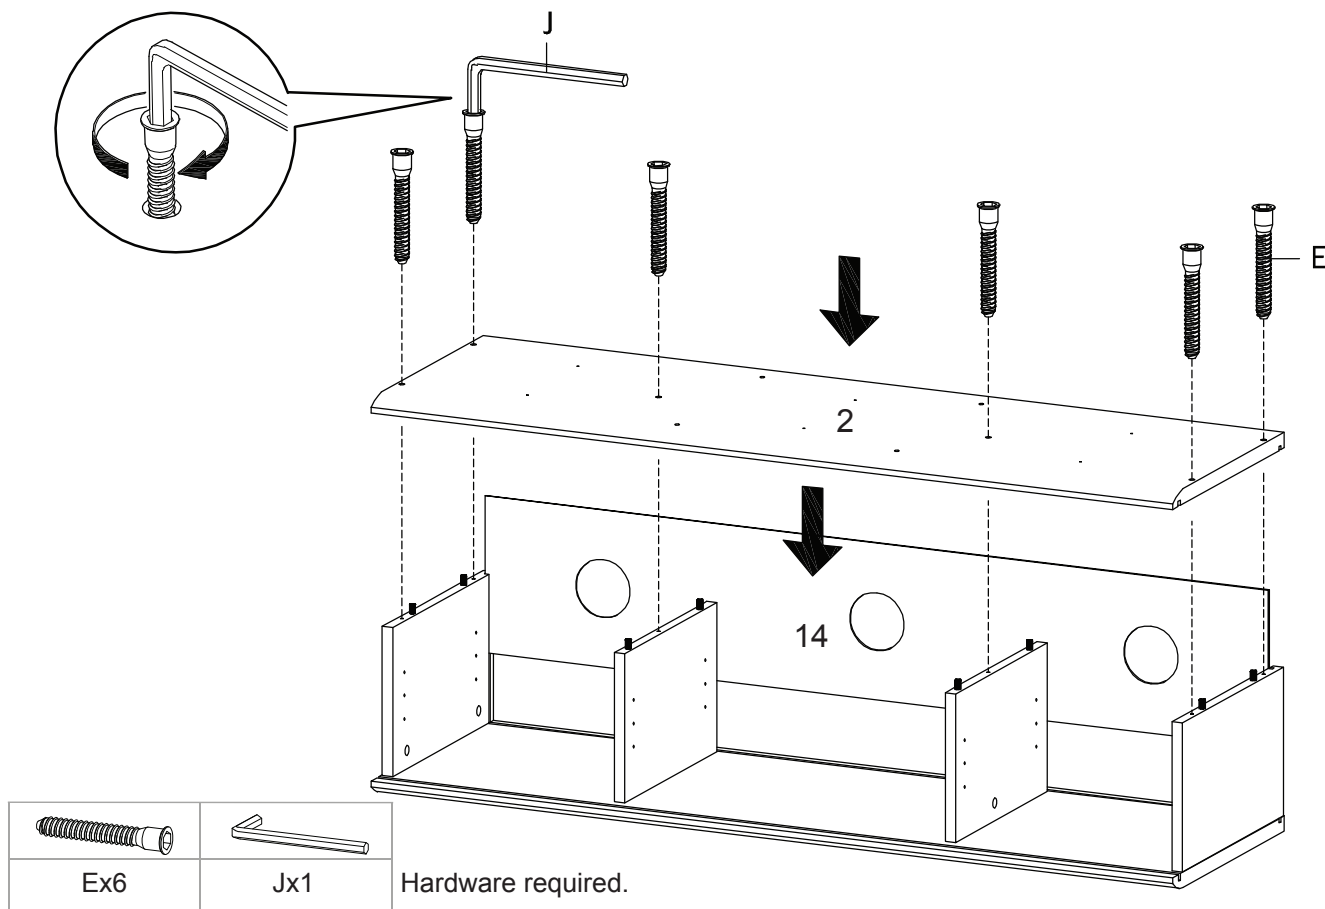

 STEP 8:

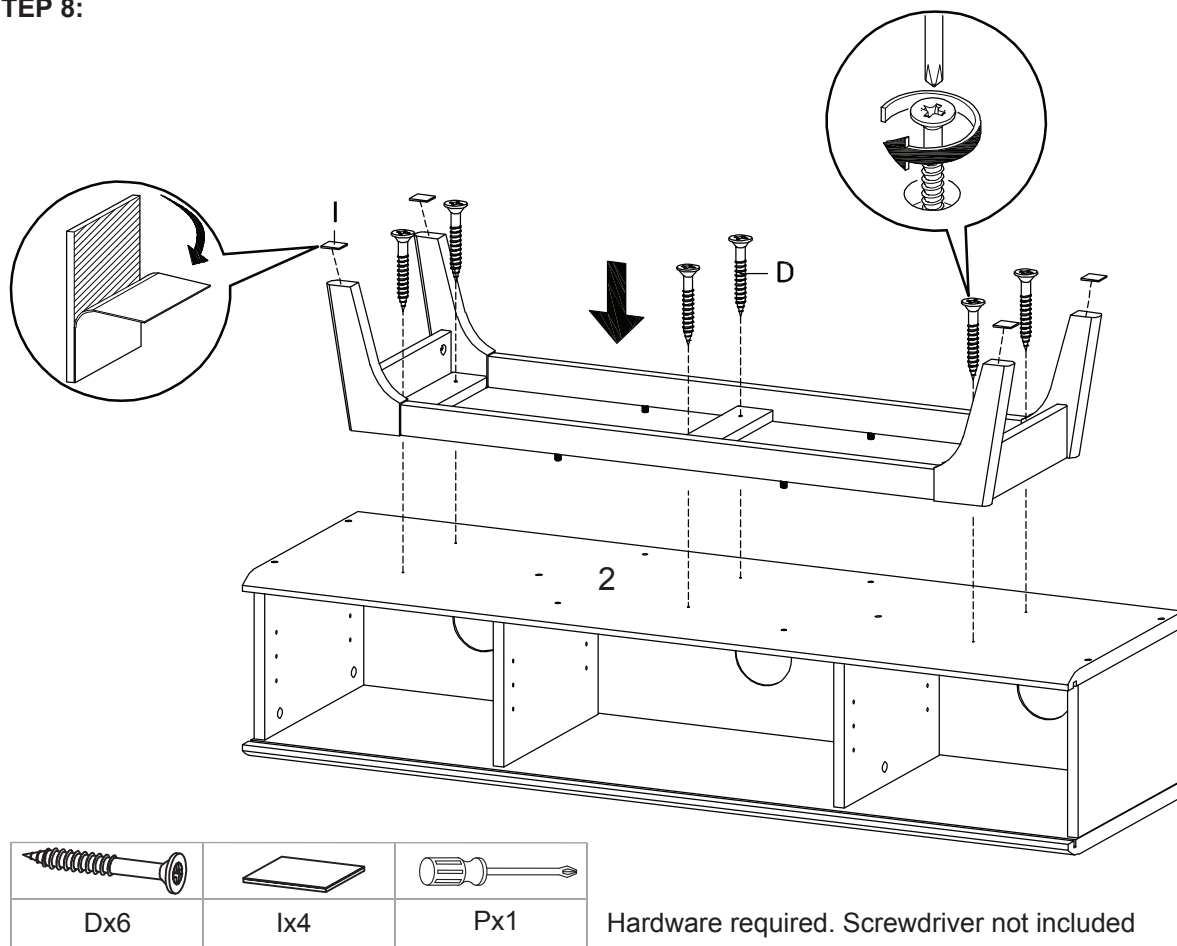

 
 
STEP 9:

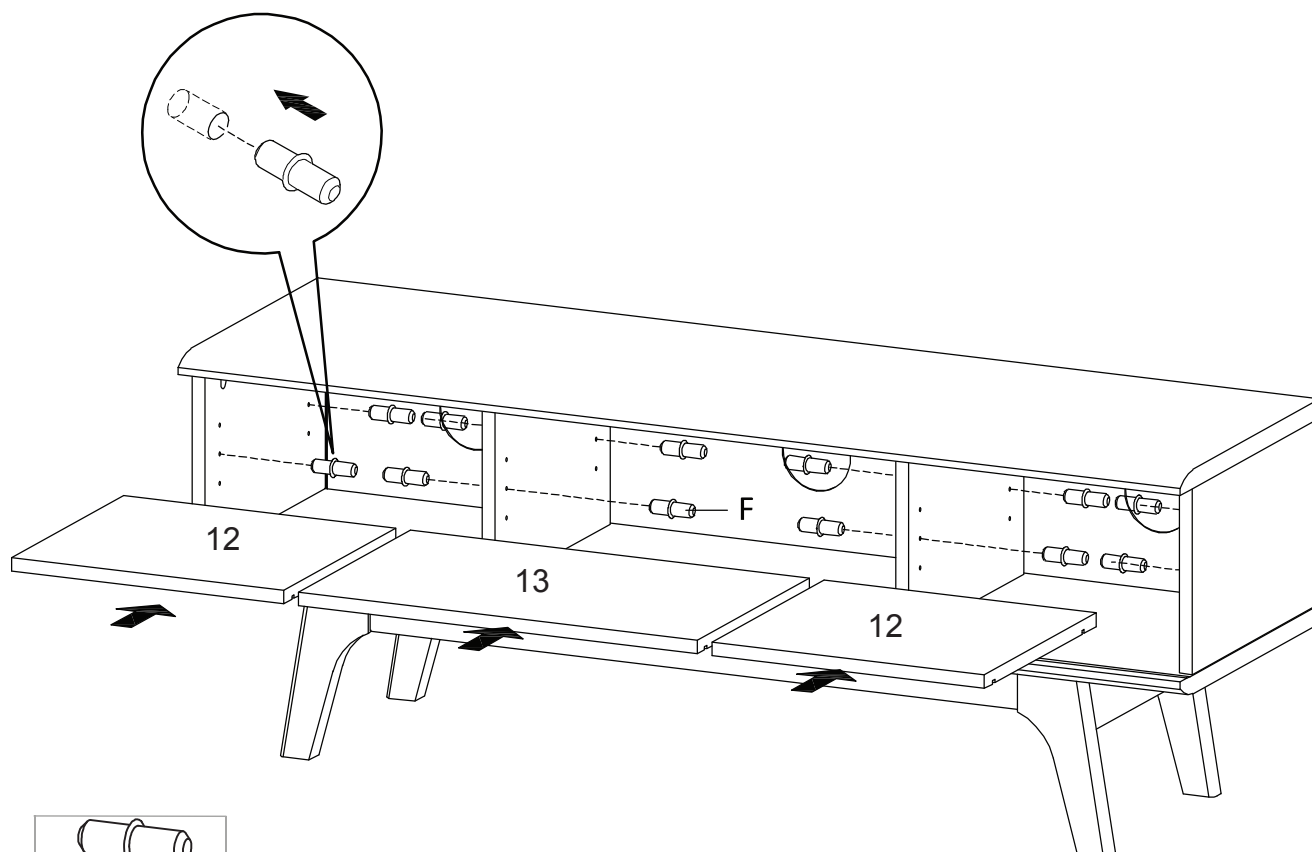

Fx12

Hardware required

  STEP 10:

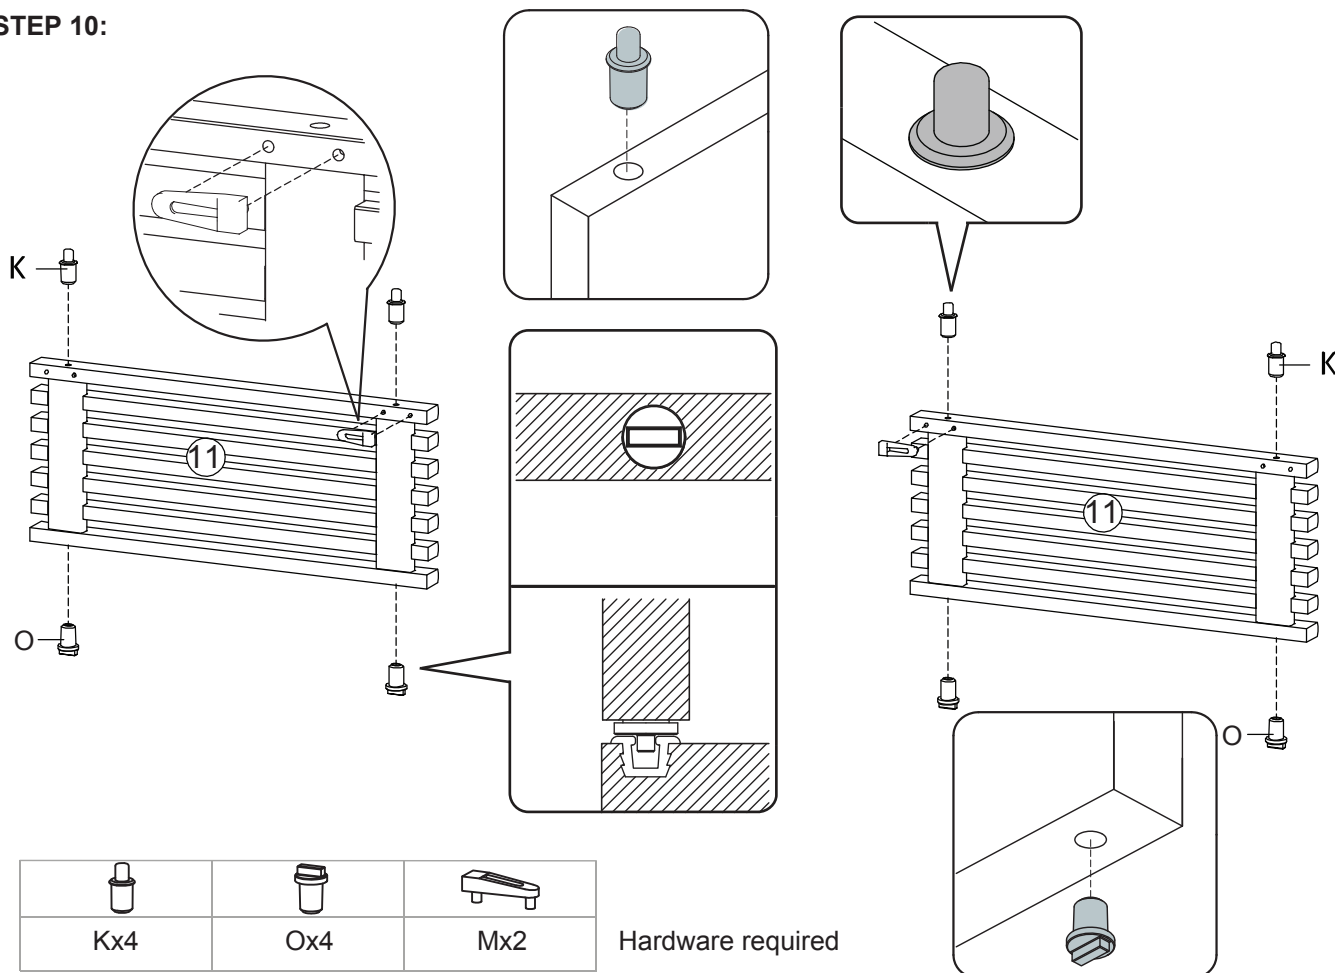


Kx4

Ox4


Mx2

Hardware required

 
STEP 11:

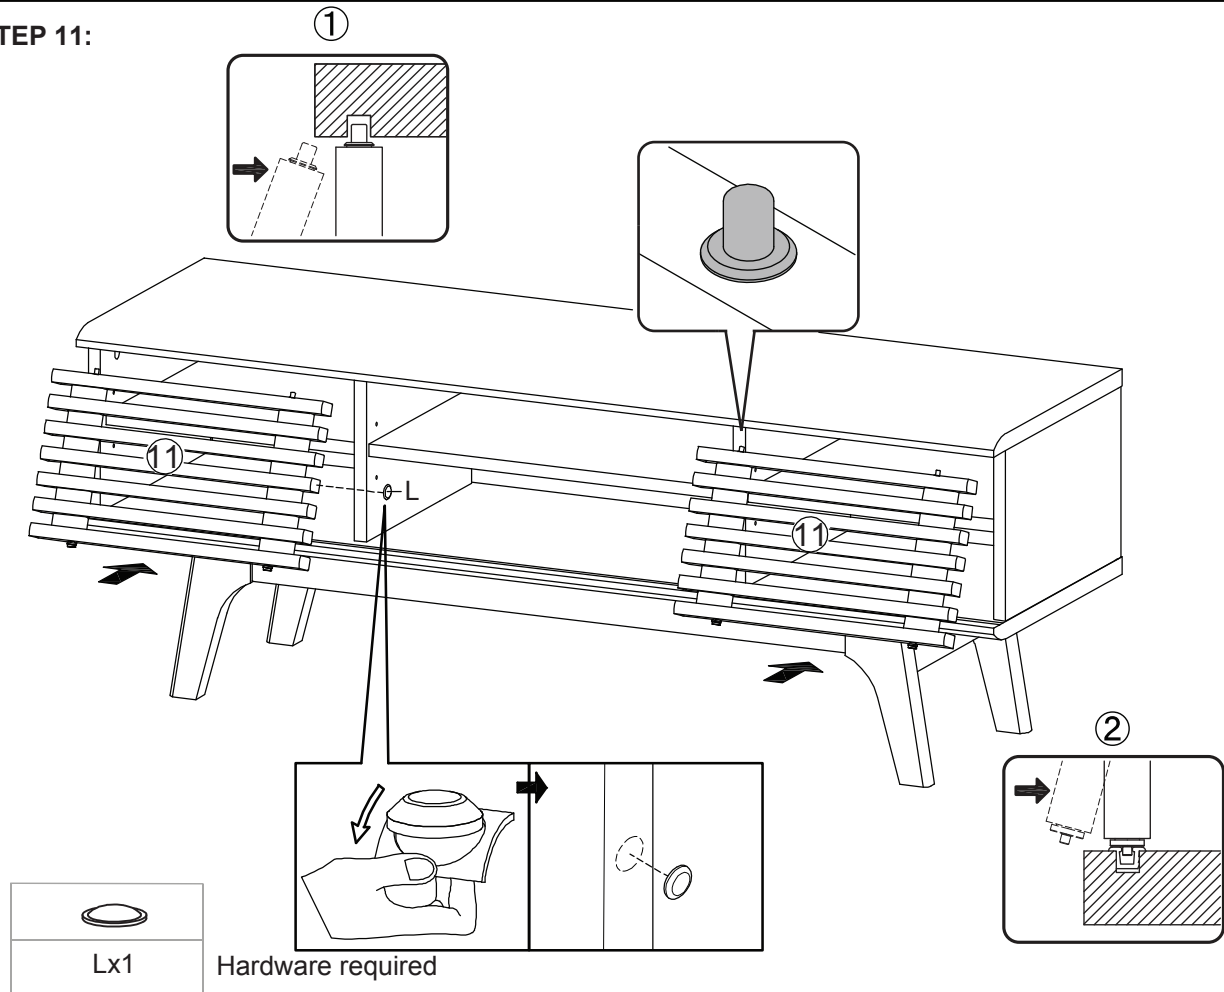

 STEP 12:

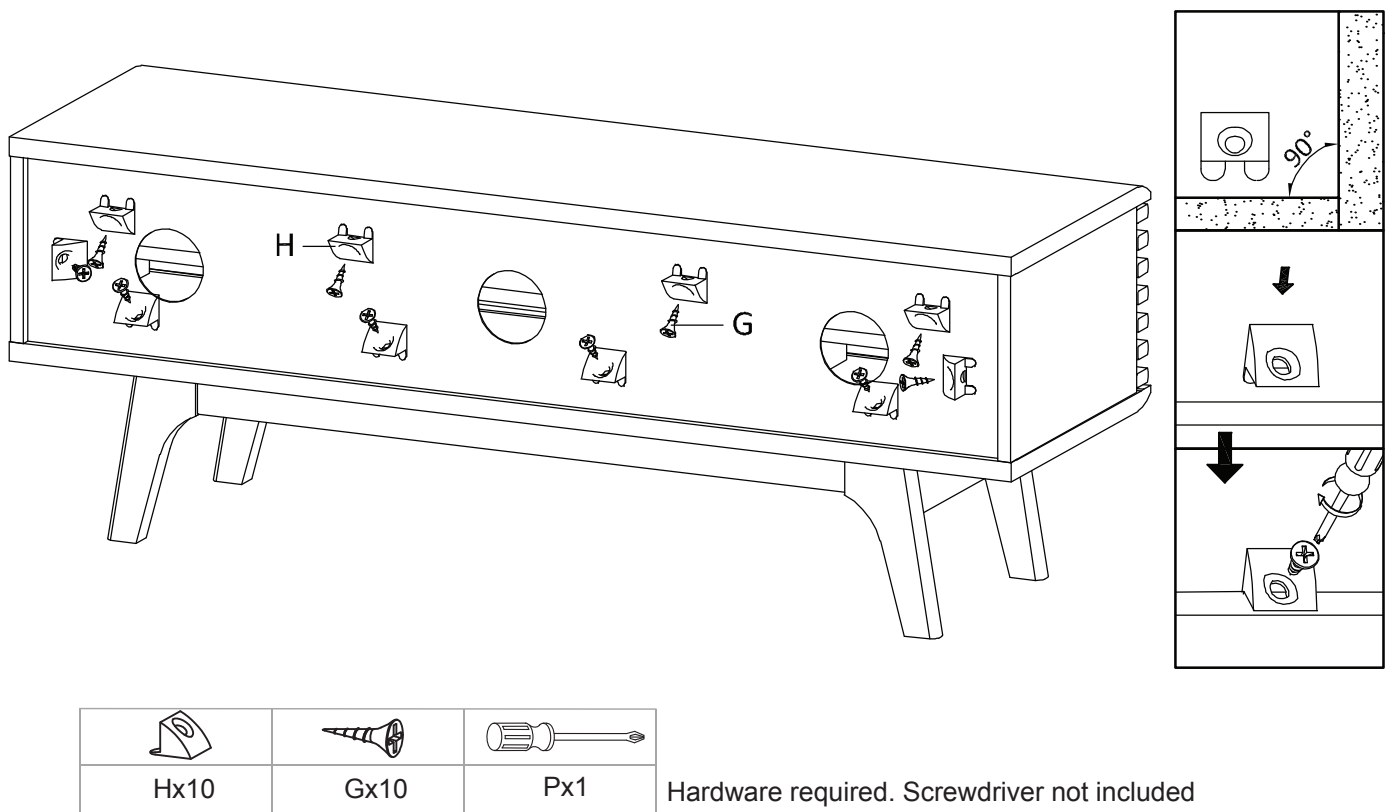

 STEP 13:

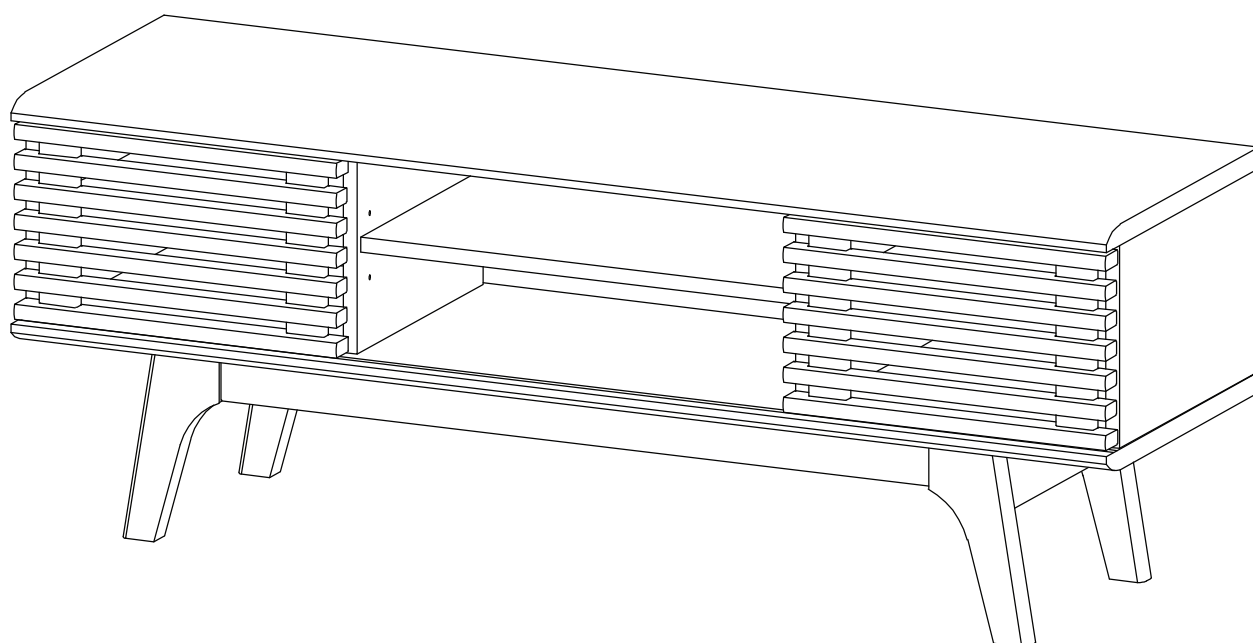

Assembly is complete. The TV Stand is ready to enjoy now !