


Thank you for purchasing the MODWAY TV STAND!


Before you start, here are some helpful advice:


- 1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
- 2. Owing to the size and weight of the TV Stand, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 120 minutes.
- 3. Please do not use any tools other than those provided or recommended in these instructions.
- 4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
- 5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
- 6. Please keep all pieces out of reach of children.

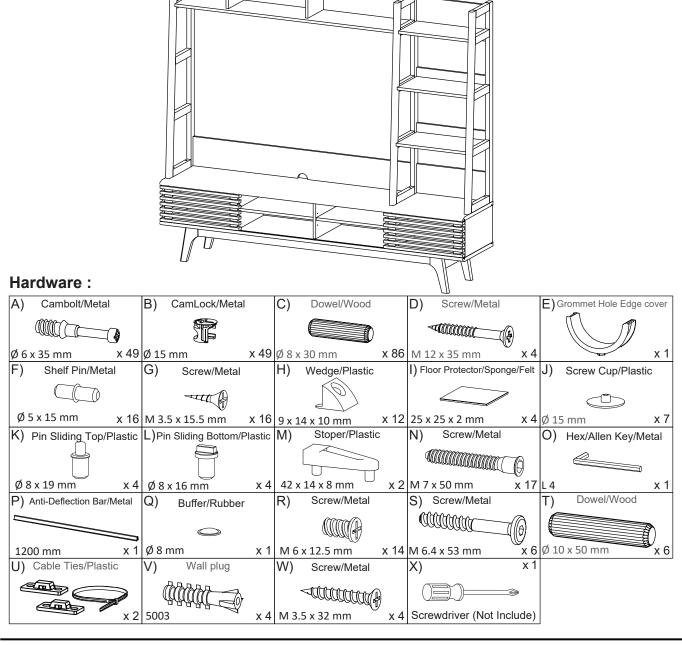






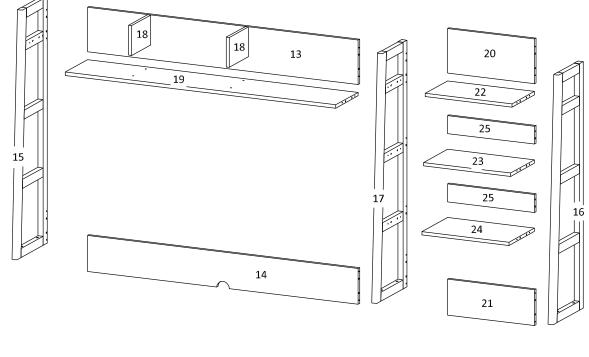


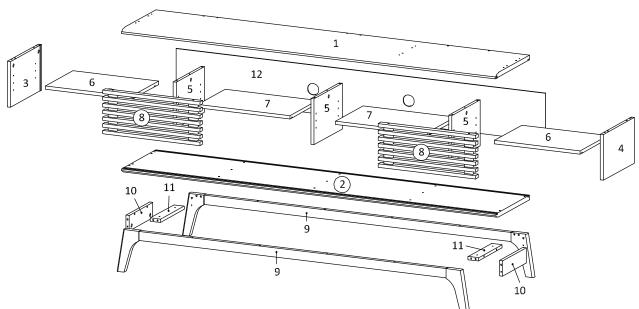

	1	Top Board	x1	2 Bottom Board	x1	3 Side Board Left	x1	4 Side Board Right	x1
	5	Center Board	х3	6 Adjustable Shelf 1	x2	7 Adjustable Shelf 2	x2	8 Frame Door	x2
	9	Assembly leg	x2	10 Support Board 1	x2	11 Support Board 2	x2	12 Back Board	x1
	13	Back Board 1 (Hutc	h) x1	14 Back Board 2 (Hutch)	x1	15 Frame Left (Hutch)	x1	16 Frame Right (Hutch)	x1
	17	Frame Middle (Huto	:h) x1	18 Divider Board (Hutch)	x2	19 Top Board 1 (Hutch)	x1	20 Back Board 3 (Hutch)	x1
21 Back Board 4 (Hutch) x1			h) x1	22 Top Board 2 (Hutch)	x 1	23 Top Board 3 (Hutch)	x1	24 Top Board 4 (Hutch)	x1
25 Back Board 3 (Hutch) x1									



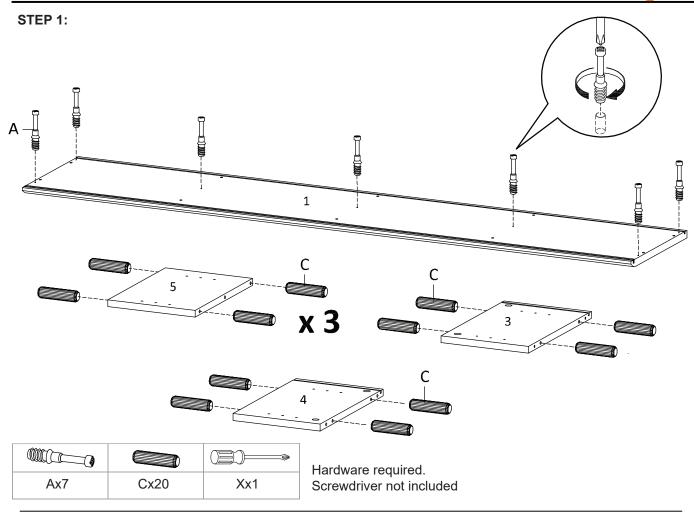

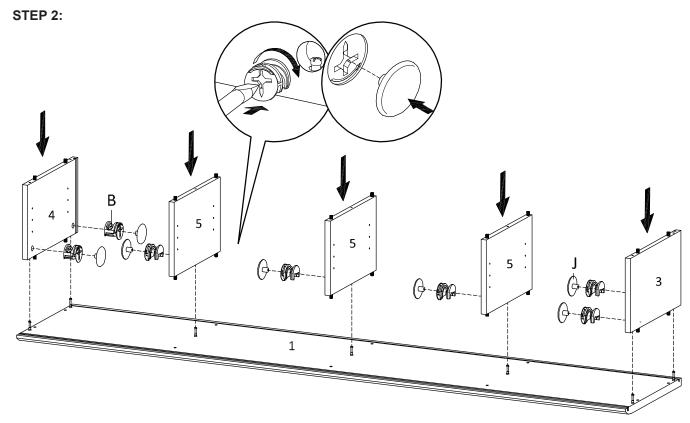

Hardware required.


Screwdriver not included

Jx7


Xx1

Bx7



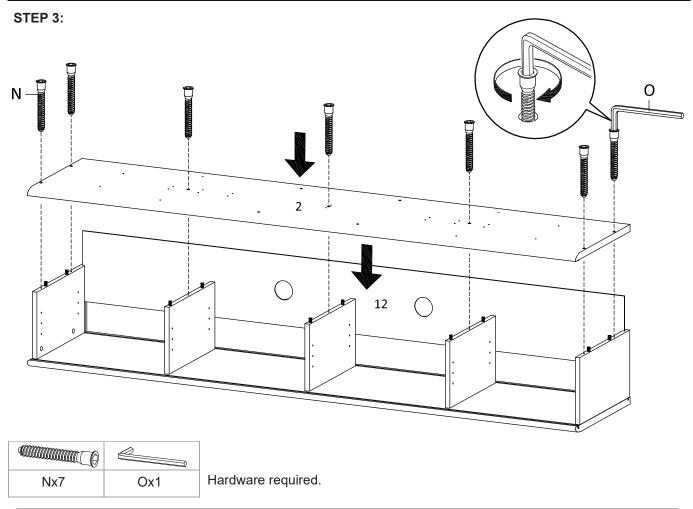


STEP 4:

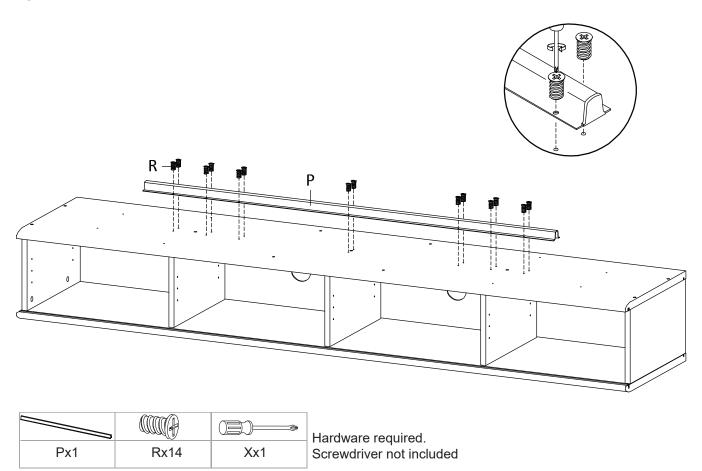




STEP 5:

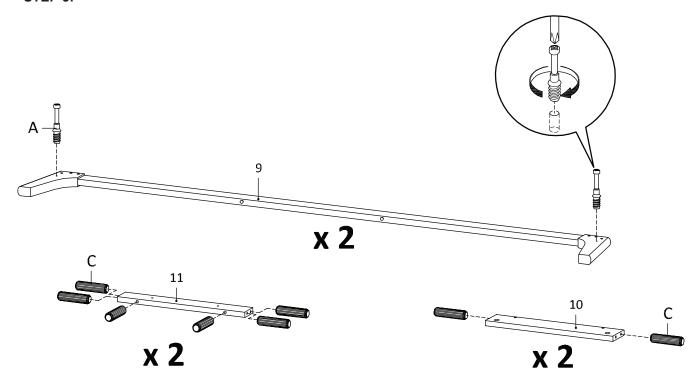

Ax4	Cx16	Xx1	

Hardware required. Screwdriver not included

STEP 6:

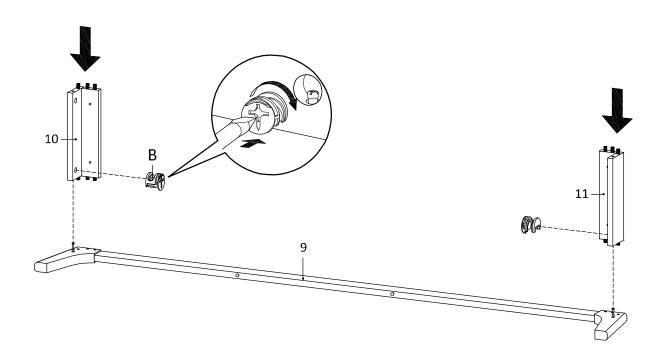


Bx2	Xx1

Hardware required. Screwdriver not included




STEP 7:

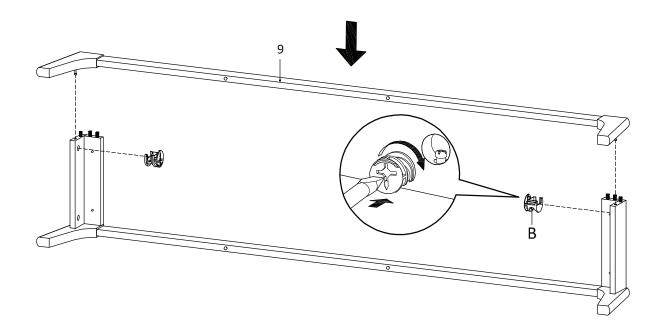


Bx2	Xx1

Hardware required. Screwdriver not included

 
STEP 8:

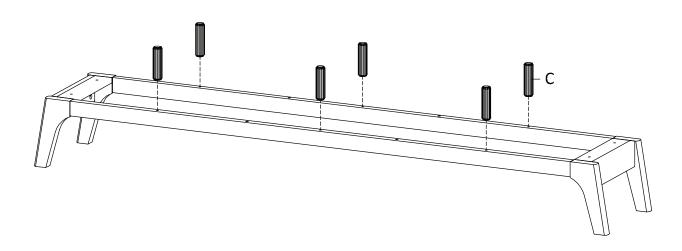





Hardware required.



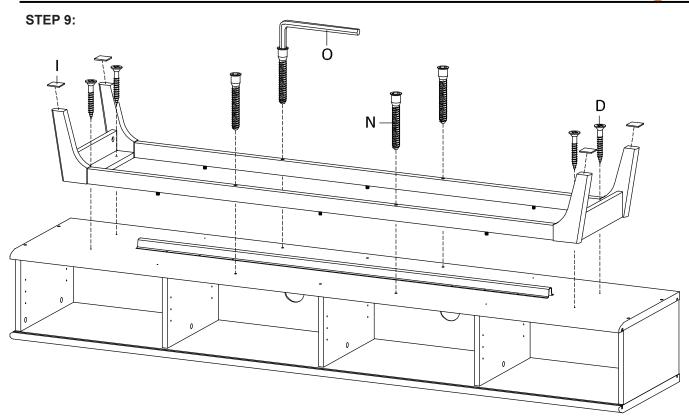


 


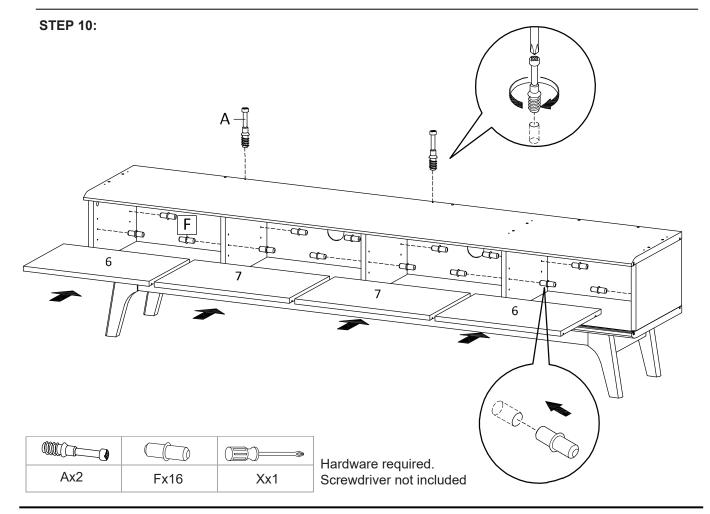




STEP 11:

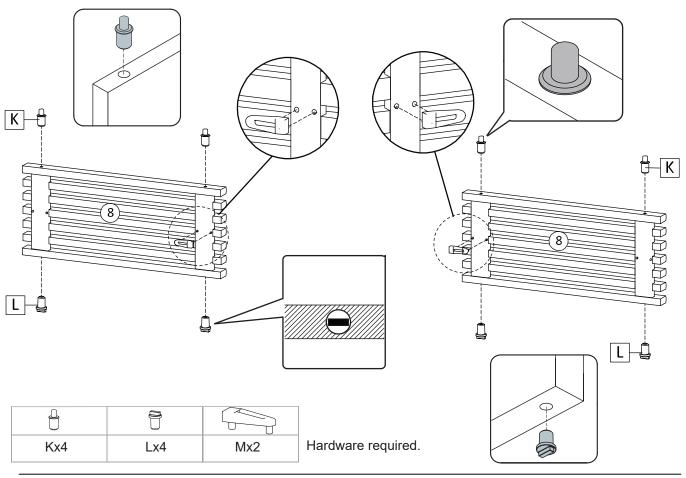

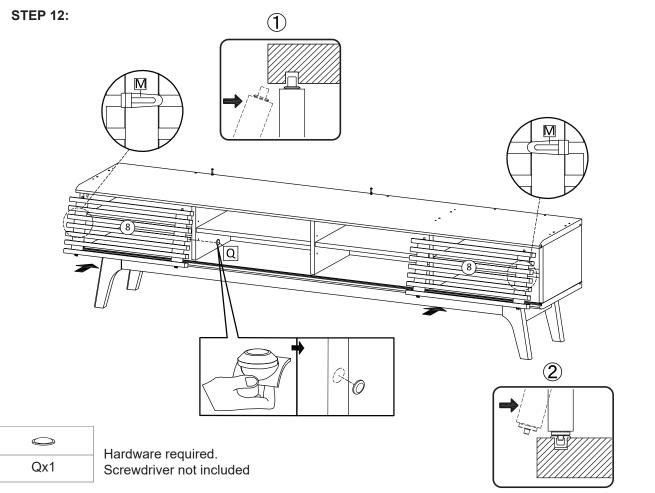





STEP 13:

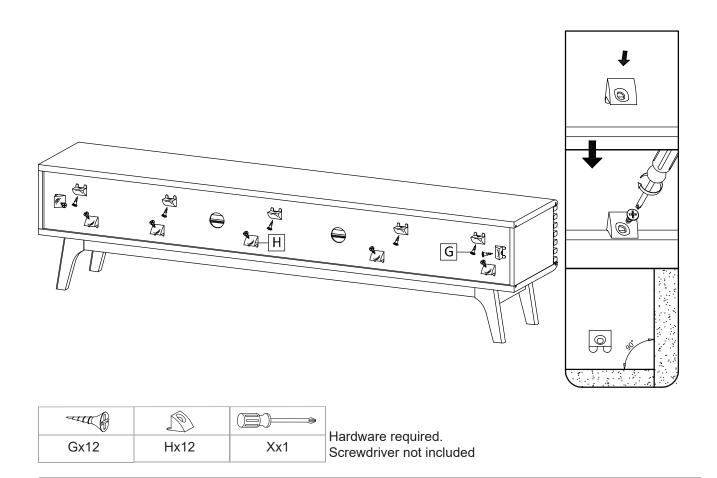

STEP 14:

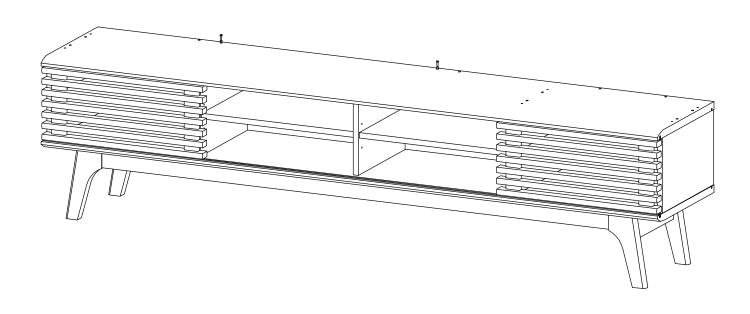



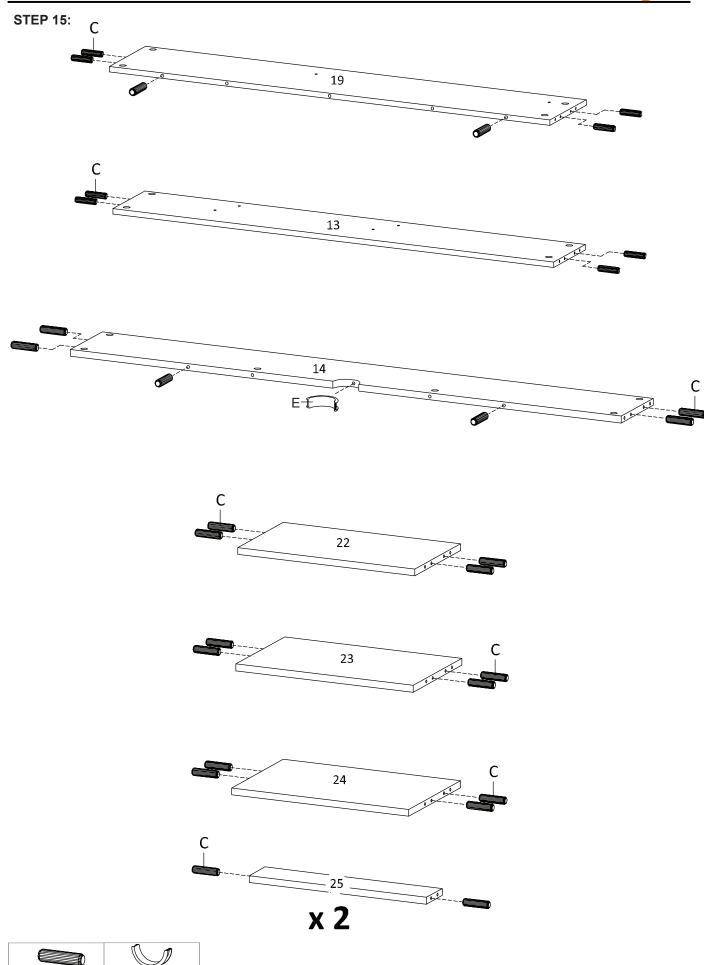



Ex1


Cx32

  
Hardware required.



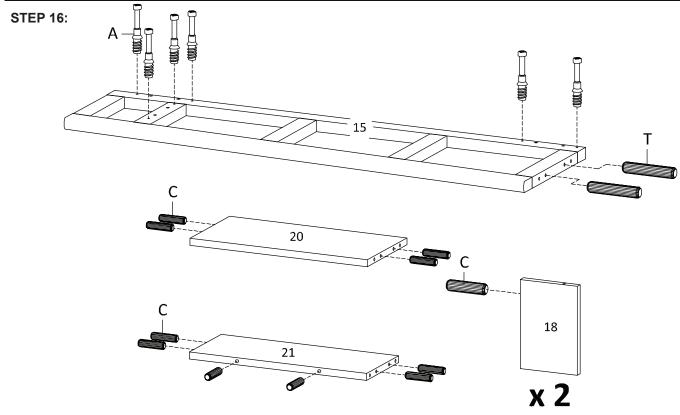



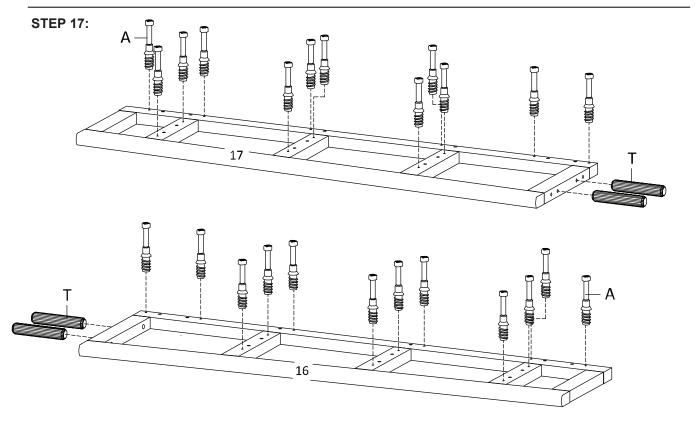




Hardware required. Screwdriver not included




STEP 18:

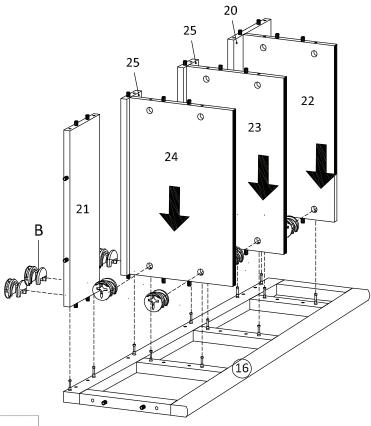

Bx12	Xx1

Hardware required. Screwdriver not included

STEP 19:

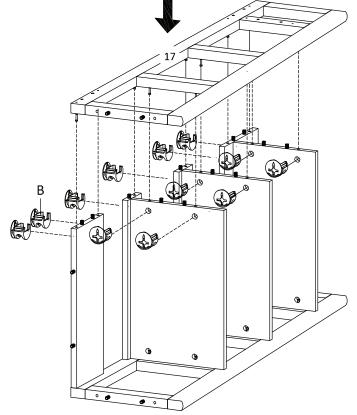


Ĩ			
Bx12	Xx1		


Hardware required. Screwdriver not included



STEP 20:

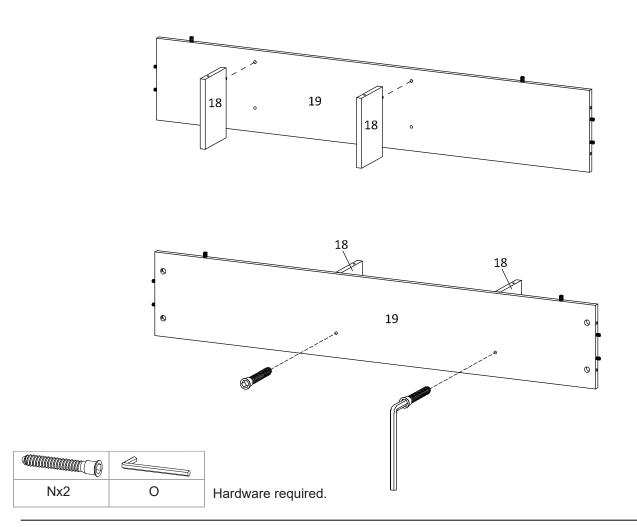


STEP 21:

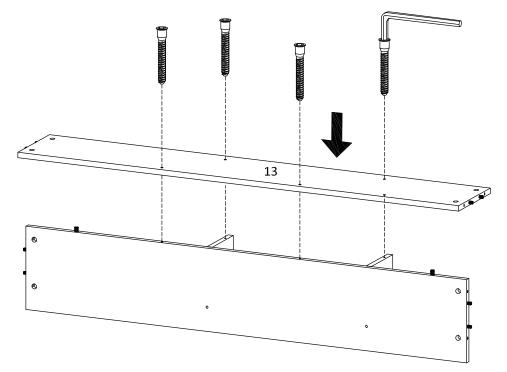


Nx4	0

Hardware required.




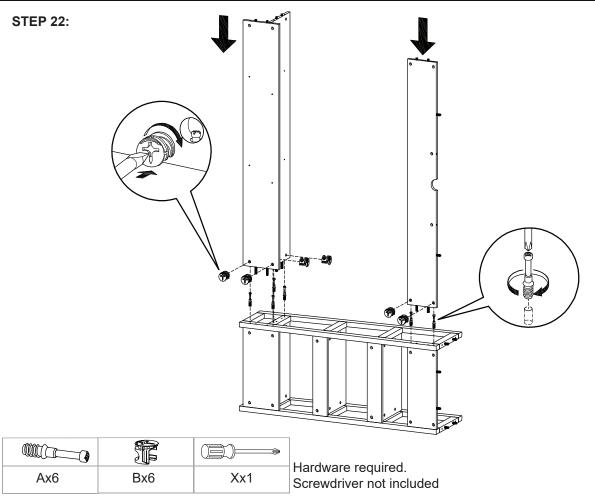


STEP 23:

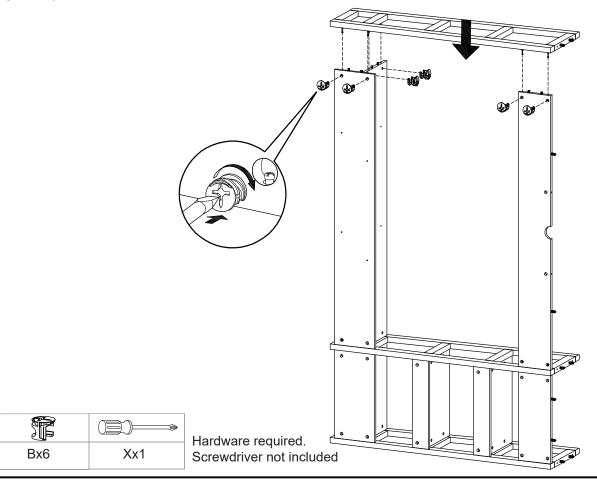




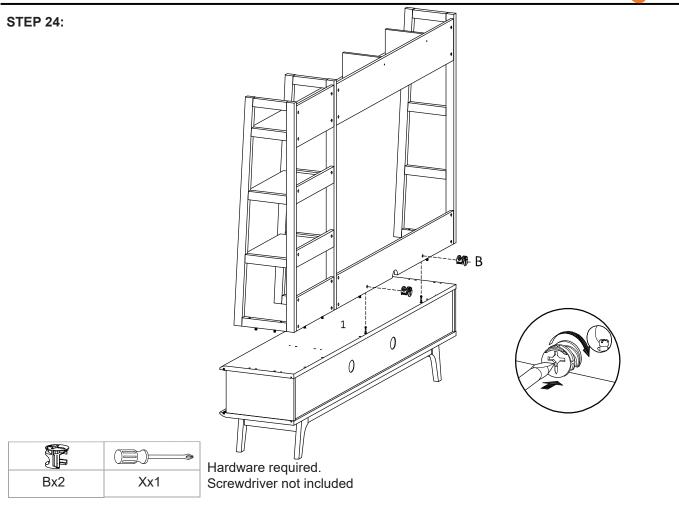

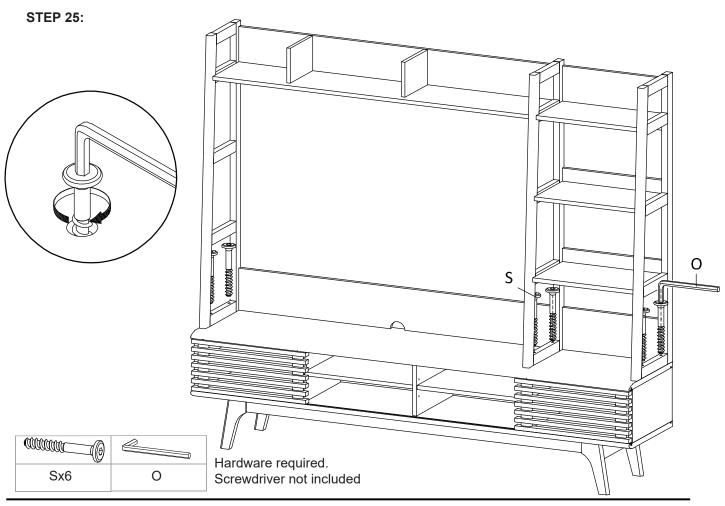





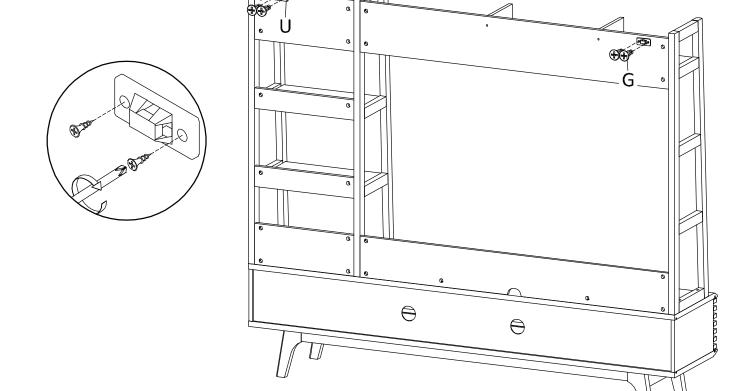

Hardware required.


Screwdriver not included

STEP 27:

Ux2


Gx4

Xx1

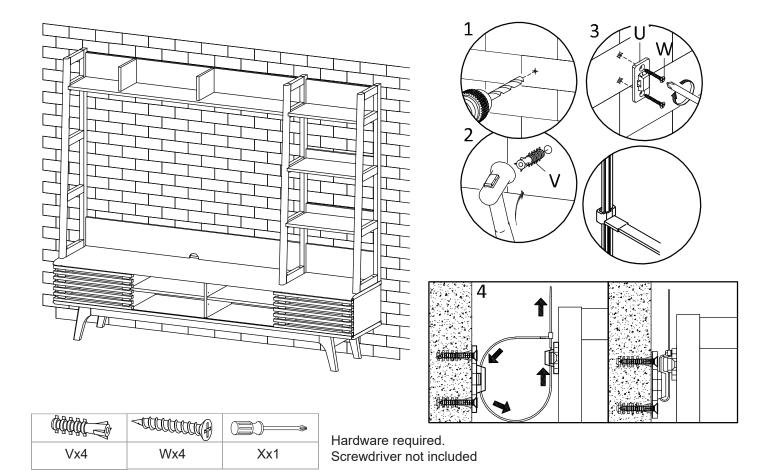



STEP 23:

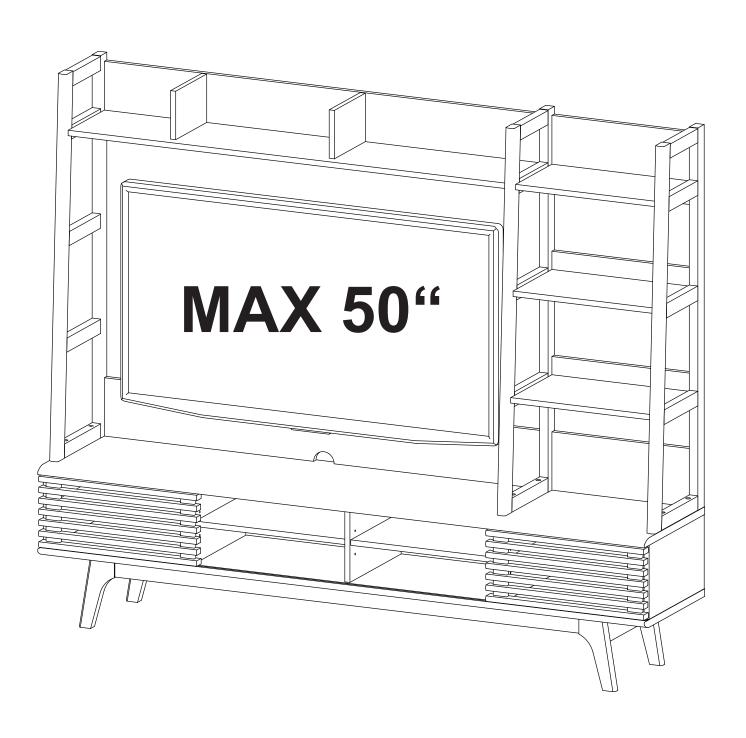

Assembly is complete. The TV Stand is ready to enjoy now!