 


email: info@riverside-furniture.com

Sophie Dining Room Assembly Instructions

Components and Hardware List




Anti-tipping restraint




1 pc.


Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

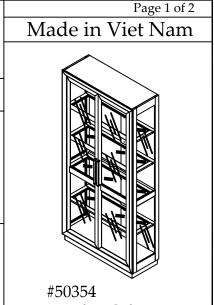

Display Cabinet

The Light installed in the top of the cabinet is controlled by a Touch Switch connected to the top hinge of the Right Hand Door.

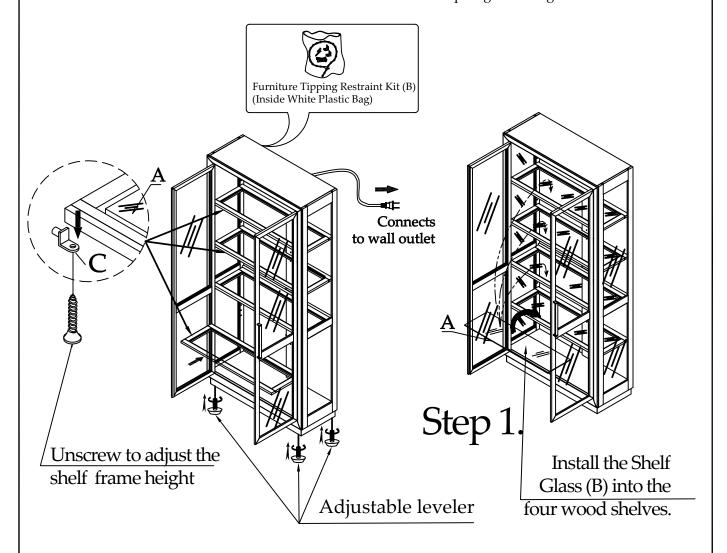

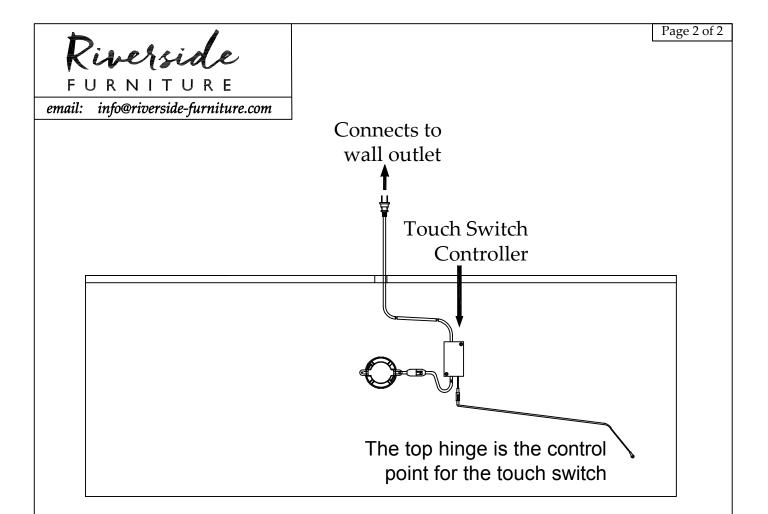

The light in this cabinet is a very energy efficient Light Emitting Diode (LED) fixture which is engineered to have a normal life expectancy of several years when used in a typical home.

The entire fixture set has been checked at the factory to verify operation. After connecting the power cord to a working electrical wall outlet, if the light fails to operate, the most common problem is probably a loose connection within the wiring. Verify that all wiring connections are secure.

The 'bulb' or LED contained within the fixture is not a replaceable component part within the light fixture. If required the fixture would need to be replaced.

If the light fails to operate after verifying power to the wall receptacle and checking all electrical wiring connections, contact Customer Service.