armen LIVING
FURNITURE FOR CONTEMPORARY LIFESTYLES

# Product Assembly Instructions

# BUSH-KB202

| | | | |
|---|---|---|---|
| 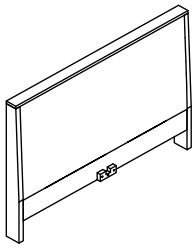 A: Headboard x1 | 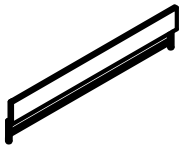 B: Footboard x1 | 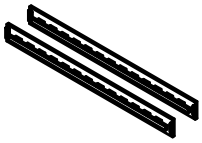 C: Side Rall (L+R) x2 | G: Bolt M6*10mm x12 |
| | | | H: Allen key M5 x1 |
| | | |  I: M6*60mm x3 |
| | | | J: Allen key M4 x1 |
| 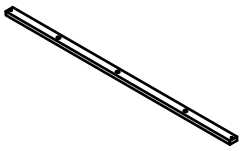 D: Middle Rall x1 | E: Center Leg x3 | F: Slat Frame x15 | K:Screw M4*30mmx32 |
| | | | L: Washer x3 |

## STEP 1

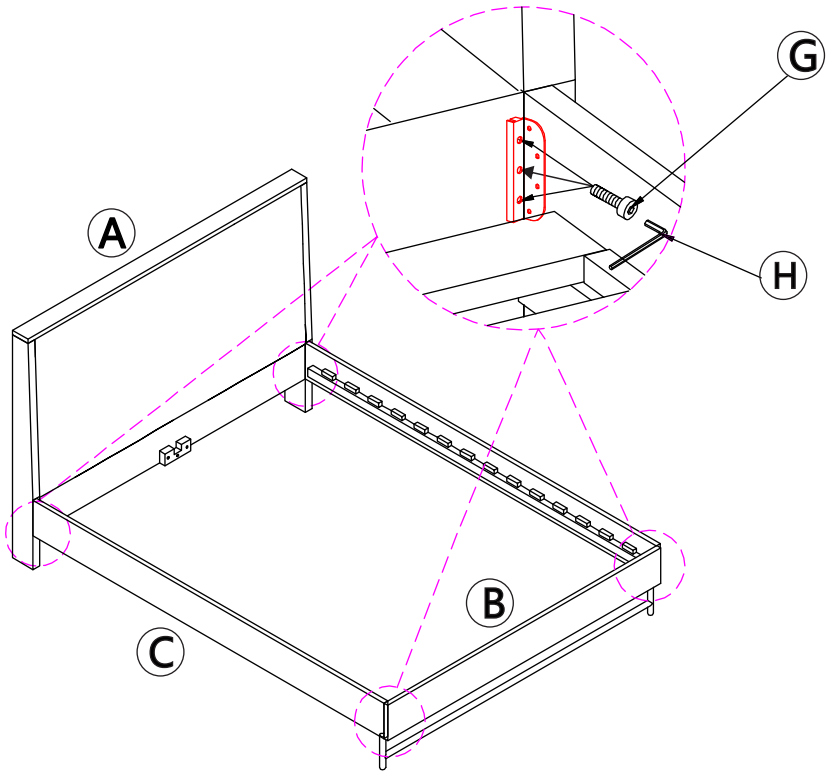

## STEP 2

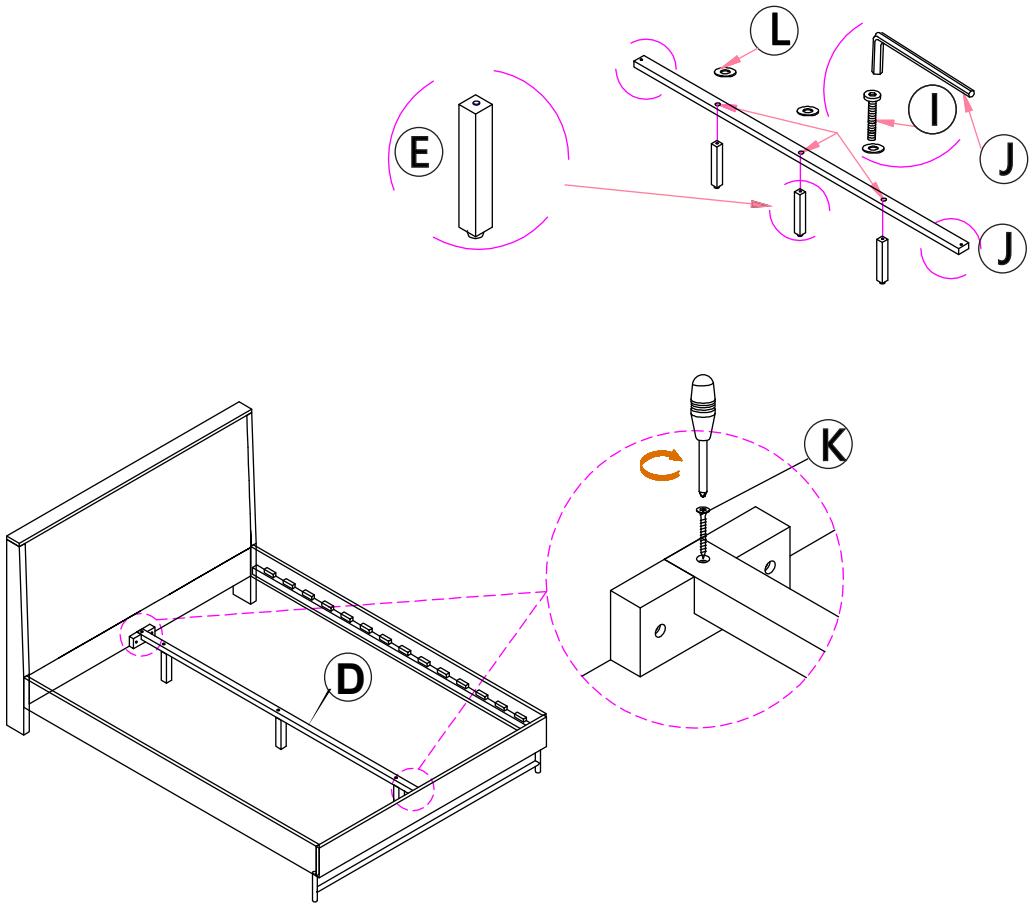


## STEP 3

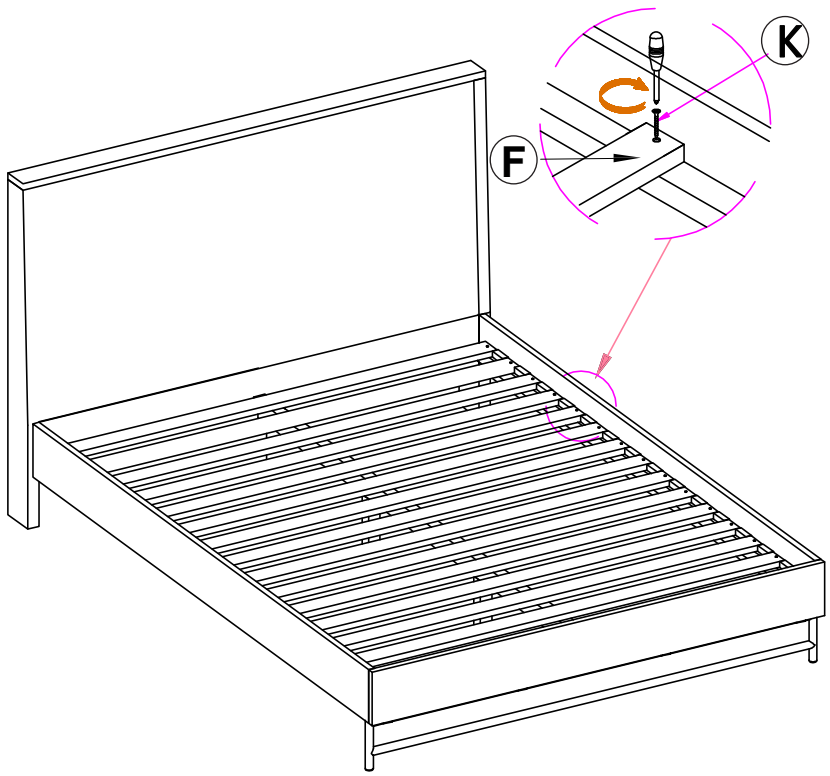

# Product Assembly Instructions

# BUSH-SB 145

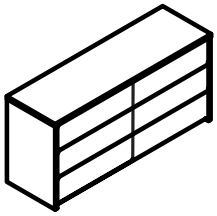

A: Chest x1

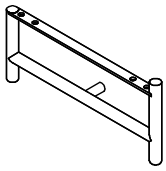

B: Left Leg x1

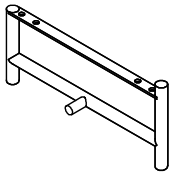

C: Right Leg x1

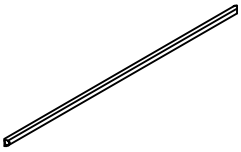

D: Bracing Betwen x1

E: Washer x8

F: Bolt M6*25mm x8

G: Allen key x1

H: Bolt M6*15mm x2

## STEP 1

Please, untight the bolts out about 1/4" for rails

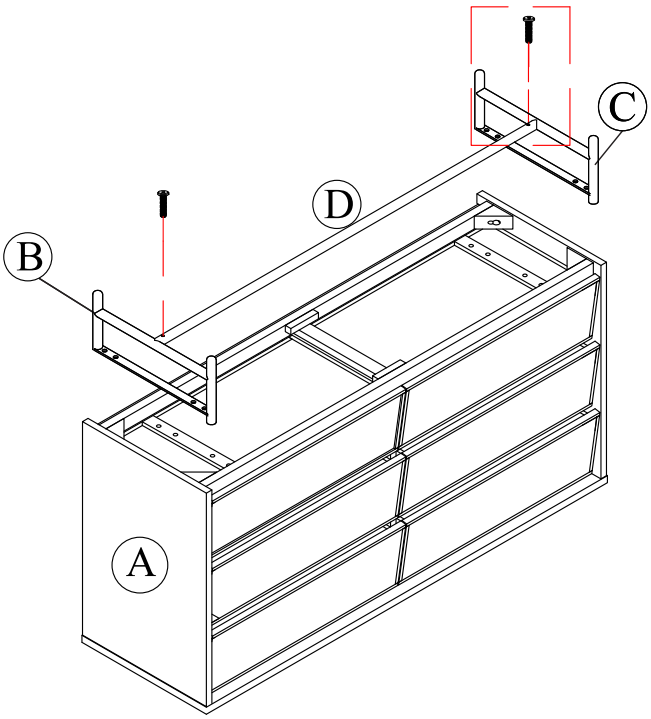


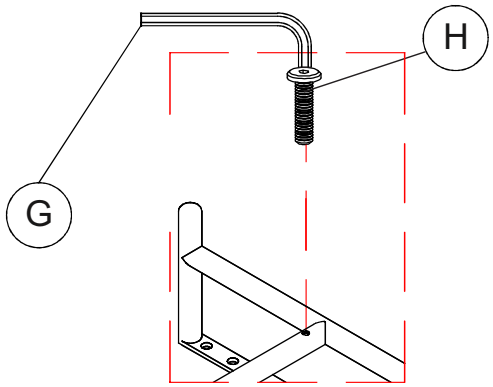

## STEP 2

Put and tighten the bolts on the right position.

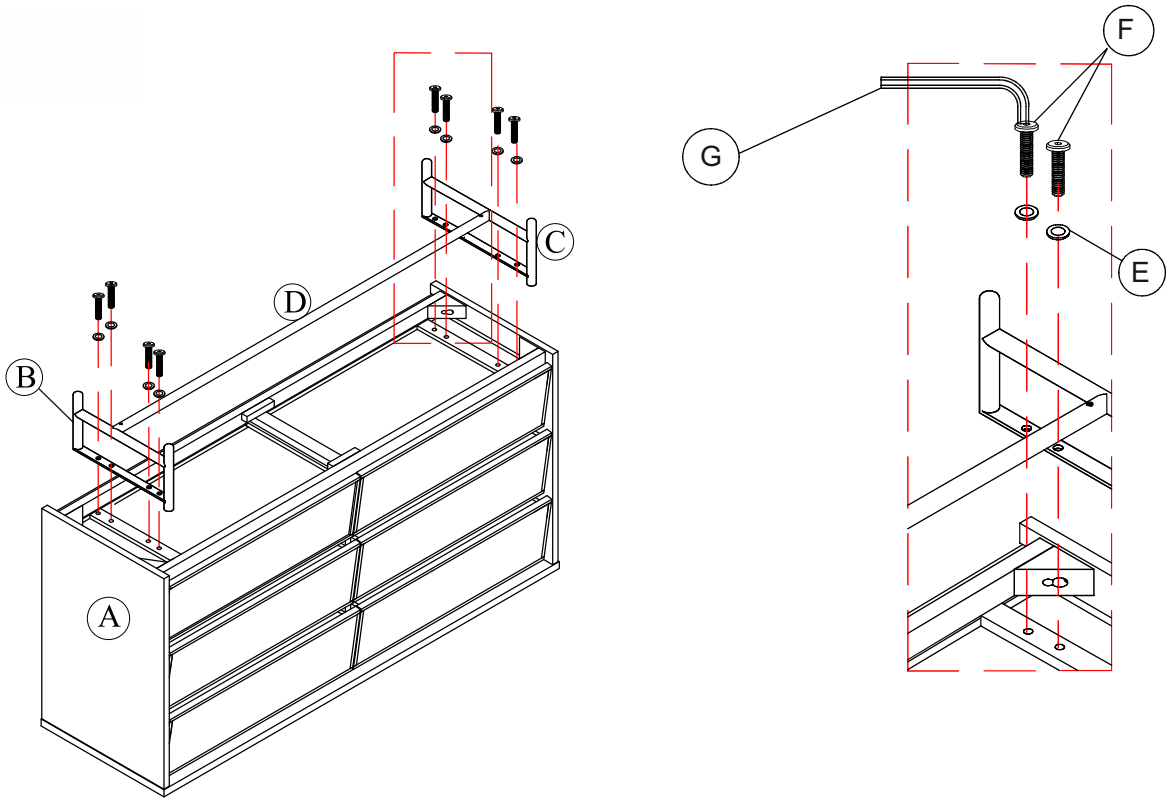


## STEP 3

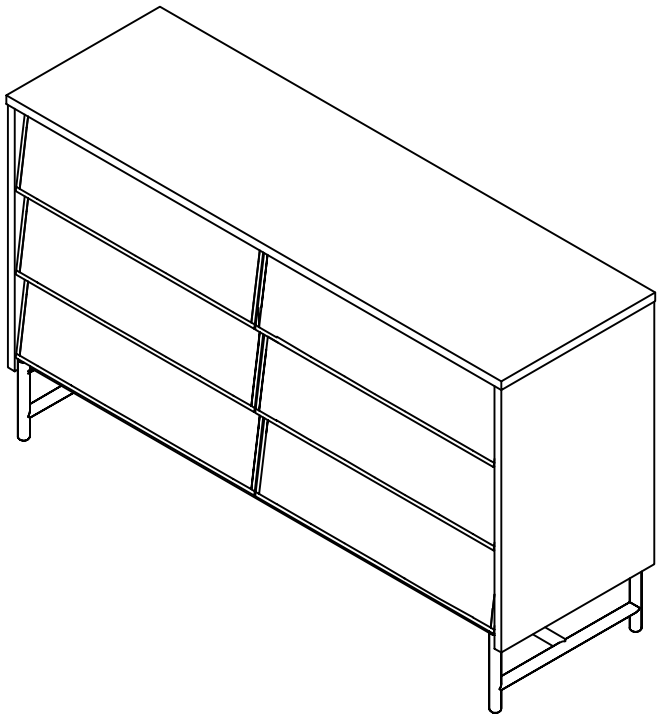

armen LIVING
FURNITURE FOR CONTEMPORARY LIFESTYLES

# Product Assembly Instructions

# BUSH-QB163

| | | | |
|---|---|---|---|
| 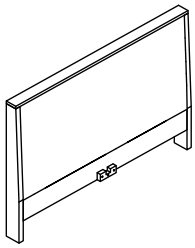 A: Headboard x1 | 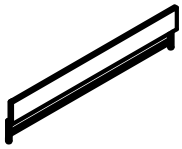 B: Footboard x1 | 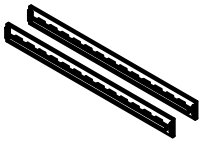 C: Side Rall (L+R) x2 | G: Bolt M6*10mm x12 |
| | | | H: Allen key M5 x1 |
| | | |  I: M6*60mm x3 |
| | | | J: Allen key M4 x1 |
| 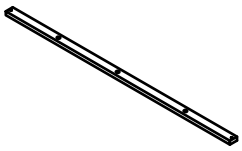 D: Middle Rall x1 | E: Center Leg x3 | F: Slat Frame x15 | K:Screw M4*30mmx32 |
| | | | L: Washer x3 |

## STEP 1

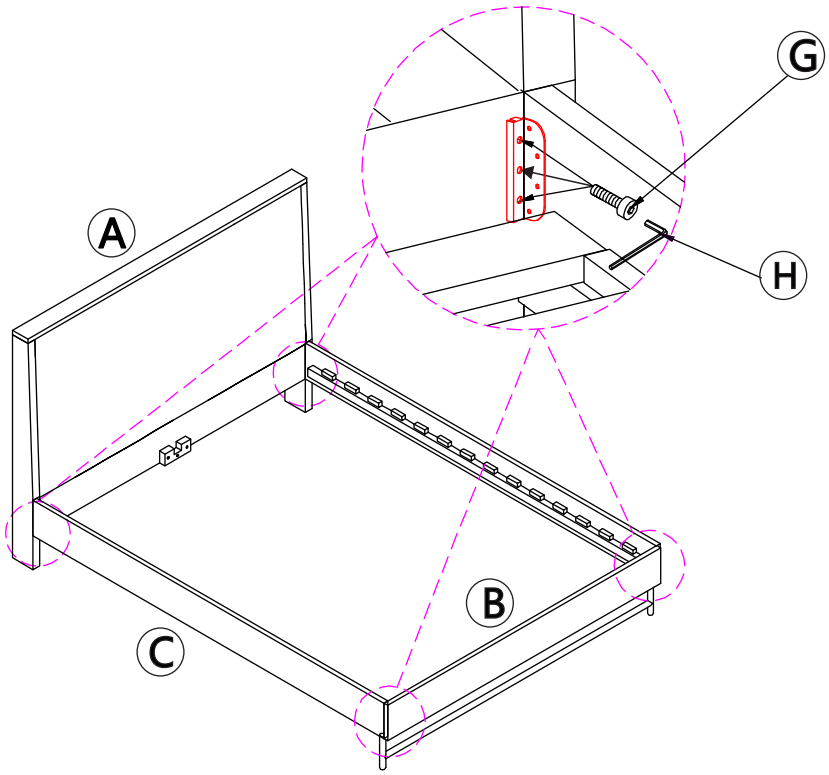

## STEP 2

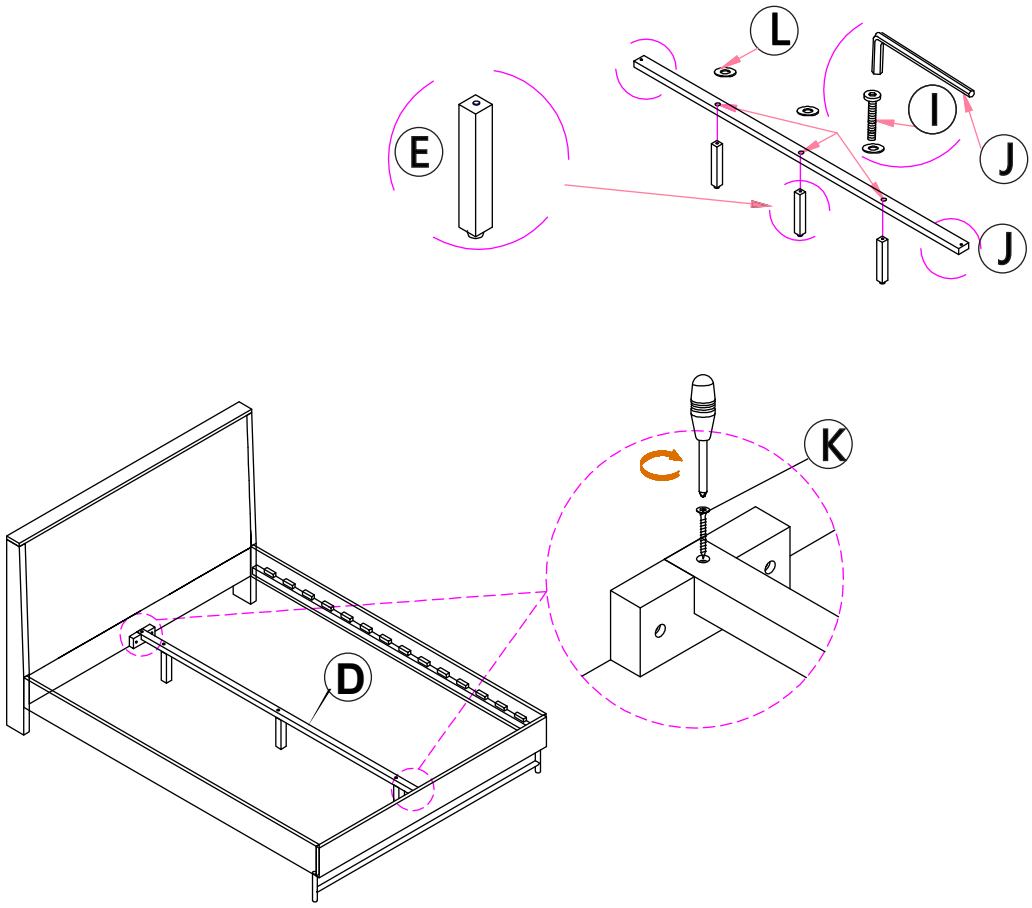

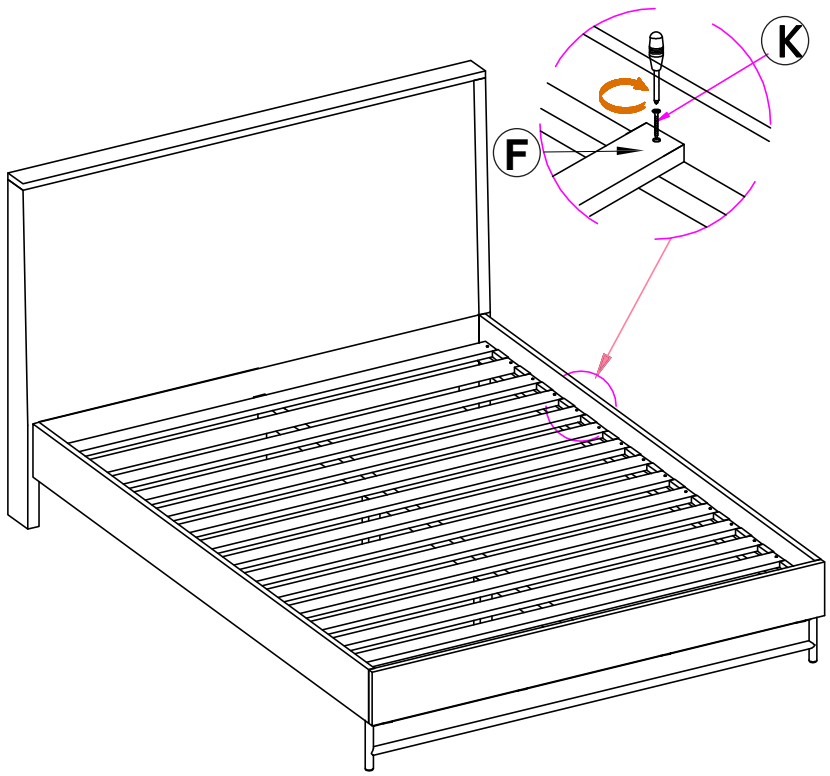
## STEP 3