



Thank you for purchasing the MODWAY SECTOR OFFICE DESK!

Before you start, here is some helpful advice:

- 1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
- 2. Owing to the size and weight of the desk, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approx assembly time: 15 minutes.
- 3. Please do not use any tools other than those provided or recommended in these instructions.
- 4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
- 5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
- 6. Please keep all pieces out of reach of small children.

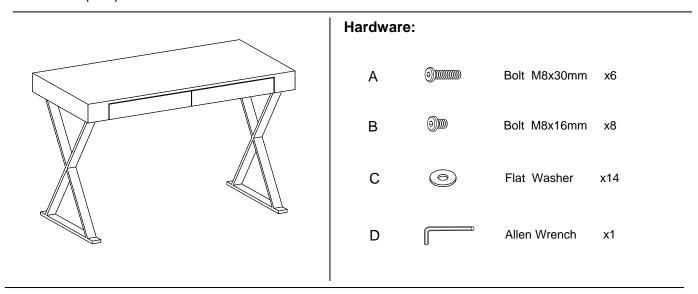

Component:

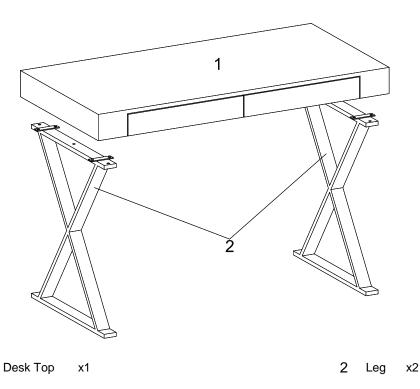



STEP 1:

Please put the desk's Top (1) upside down on a carpeted or padded surface as shown .

Attach one of Legs (2) into the bottom of Top (1) by using 4pcs Bolts (B) and 4pcs Flat Washers (C).


Do not fully tighten Bolts (B) at this time.

Note that **Bolts (B)** are used for the four protruding areas as shown in the left close-up illustration.

Attach 3pcs Bolts (A) with 3pcs Flat Washers (C) into the holes on the bottom of Top (1) through holes on Legs (2) as shown.


Use Allen Wrench (D) to tighten the Bolts (A) and Bolts (B) clockwise until secure.

Note that **Bolts (A)** are used for the three holes in the center region of each leg, as shown in the right close-up illustration. Repeat the same steps for assembling the other **Leg (2)**.

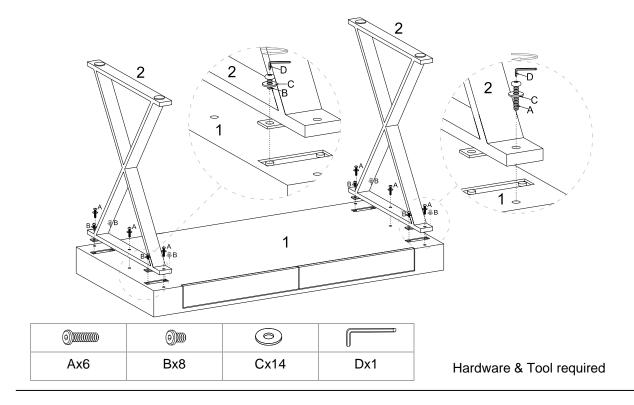

STEP 2:

Carefully turn over the desk.

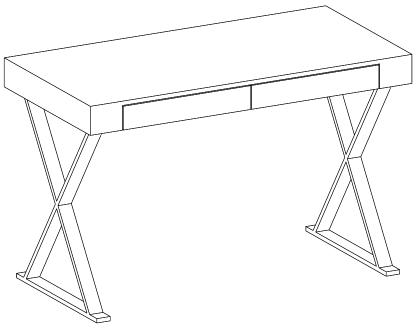

Assembly is completed. The desk is ready to enjoy now!