


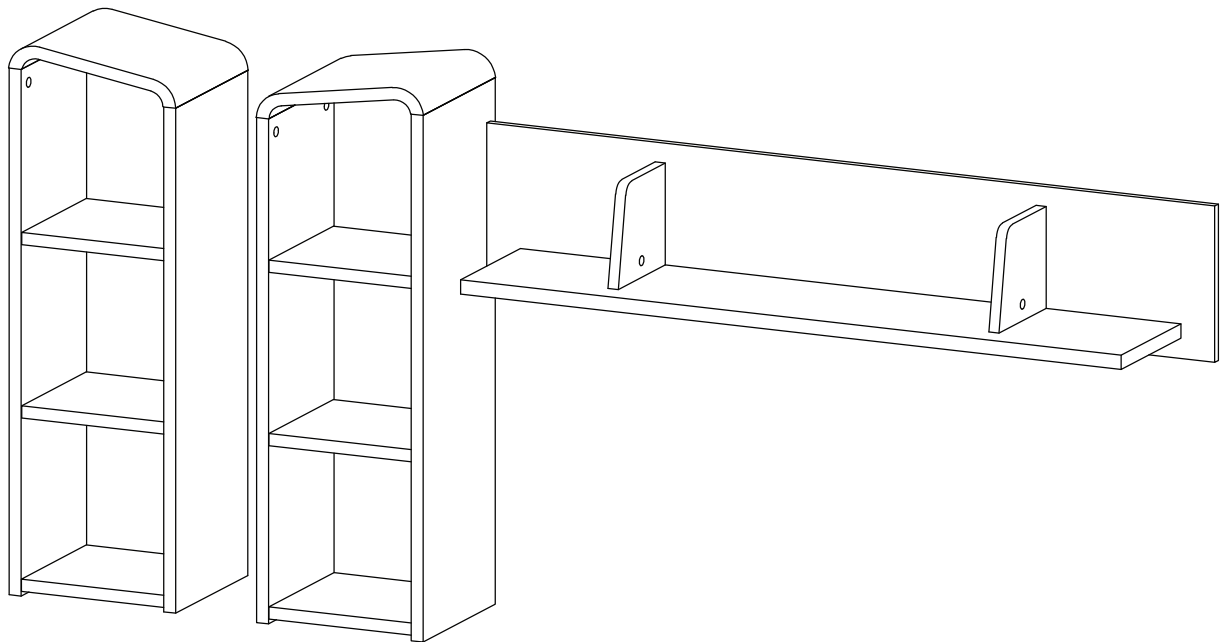











Thank you for purchasing the **MODWAY WALL UNIT** !

Before you start, here are some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the Wall Unit, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.



Hardware :


A) Cambolt/Metal  \varnothing 6 x 35 mm x 42	B) CamLock Big/Metal  \varnothing 15 mm x 42	C) Dowel/Wood  \varnothing 8 x 30 mm x 44	D) Screw/Metal  M 7 x 50 mm x 5	E) Key/Metal  L 4 x 1
F) Fisher/Plastic  SO 02 x 11	G) Screw Cup Grey/Plastic  \varnothing 15 mm x 8	H) Wedge/Plastic  9 x 14 x 10 mm x 16	I) Screw/Metal  M 3.5 x 15.5 mm x 16	J) Screw/Metal  M 12 x 45 mm x 11
K) Screw Cup Caramel/Plastic  \varnothing 15 mm x 2	L)  Screwdriver (Not Include)			

Components:

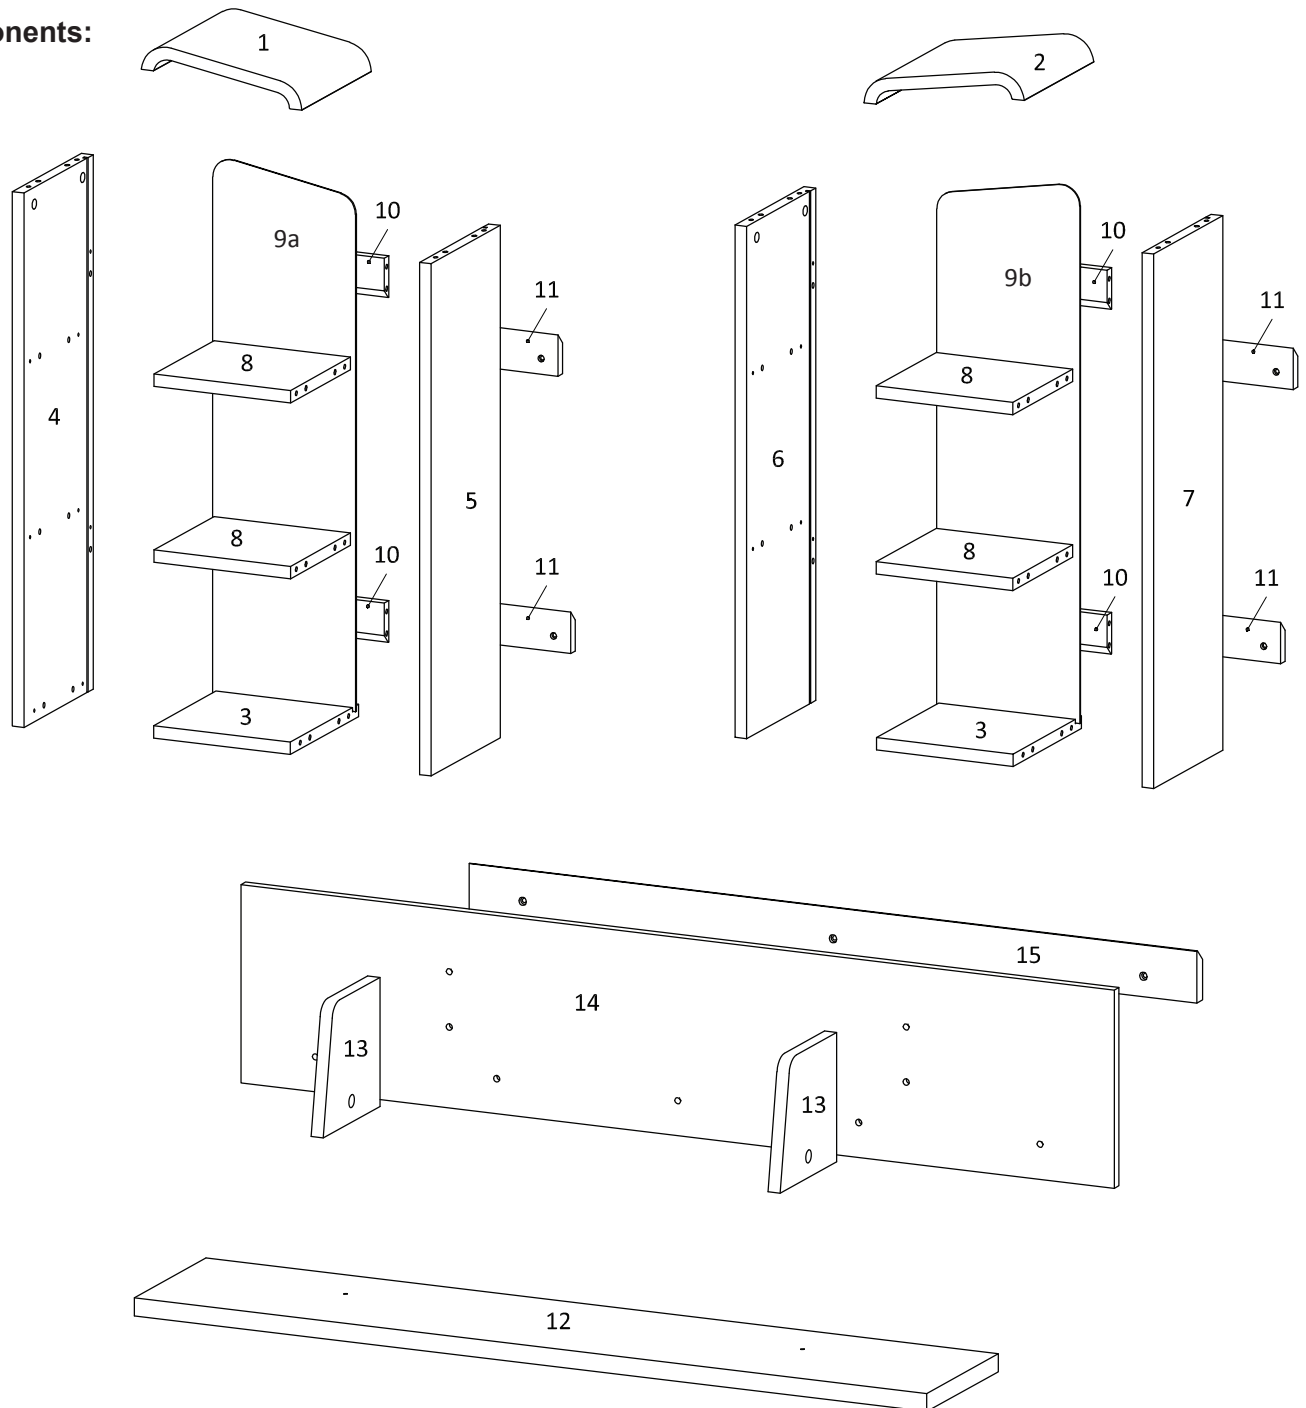

1	Top Board 1	x1	2	Top Board 2	x1	3	Bottom Board 1	x2	4	Side Board Left 1	x1
5	Side Board Right 1	x1	6	Side Board Left 2	x1	7	Side Board Right 2	x1	8	Fixed Shelf	x4
9a	Back Board 1	x1	9b	Back Board 1	x1	10	Support Board 1	x4	11	Support Board 2	x4
12	Bottom Board 2	x1	13	Centre Board	x2	14	Back Board 2	x1	15	Support Board 3	x1


STEP 1:

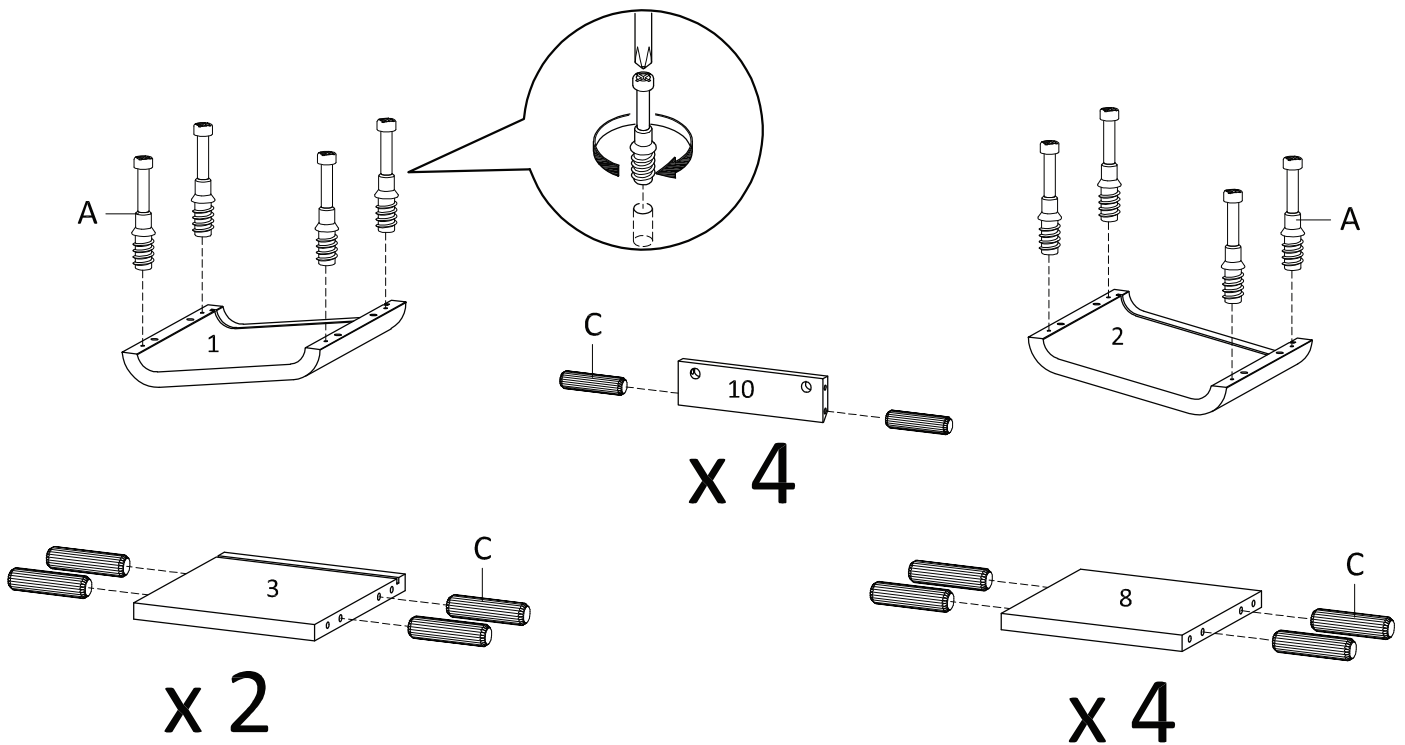

Ax8	Cx32	Lx1

Hardware required.
Screwdriver not included


STEP 2:

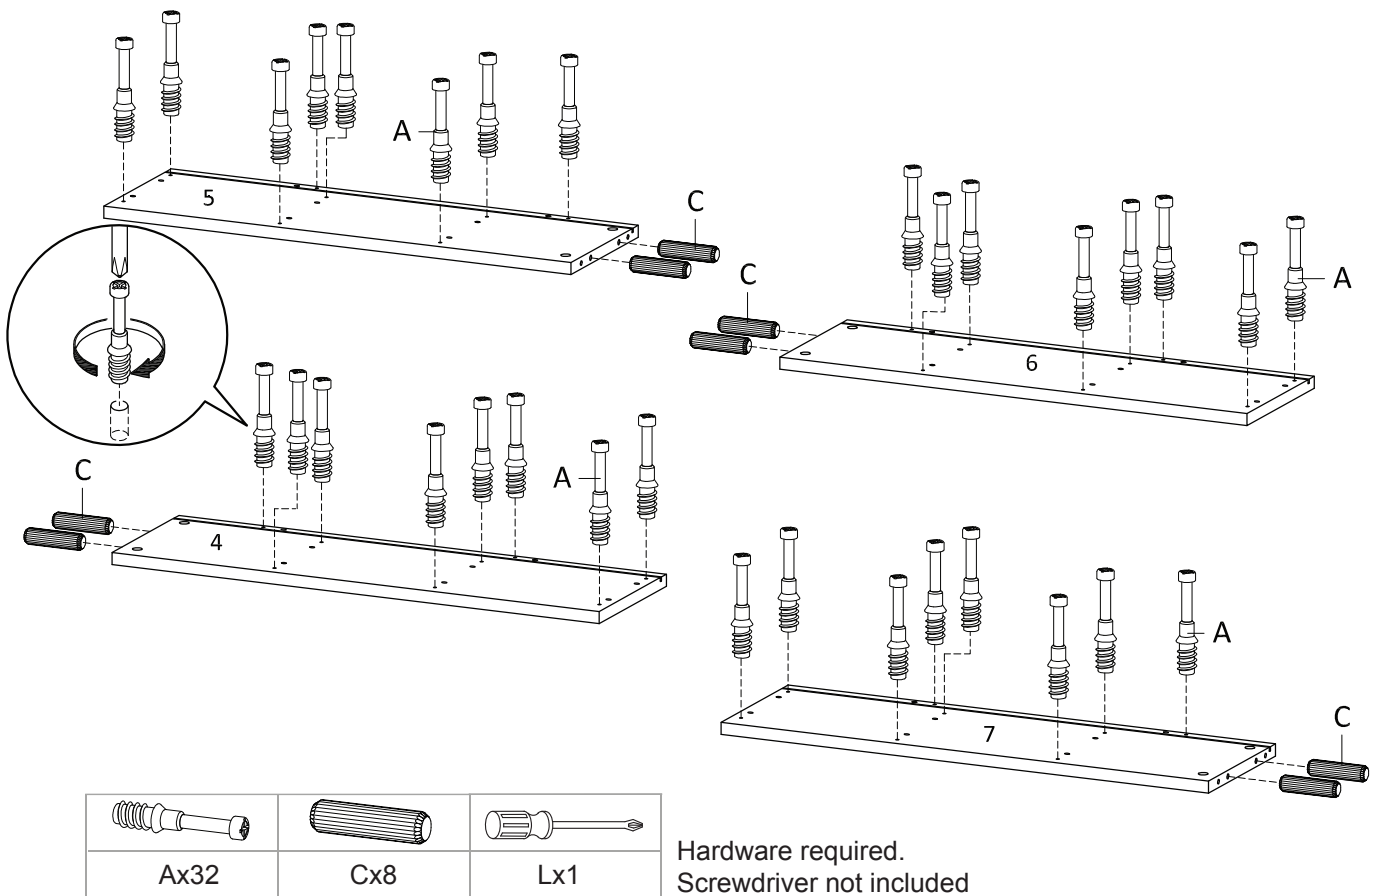


Ax32	Cx8	Lx1

Hardware required.
Screwdriver not included


STEP 3:

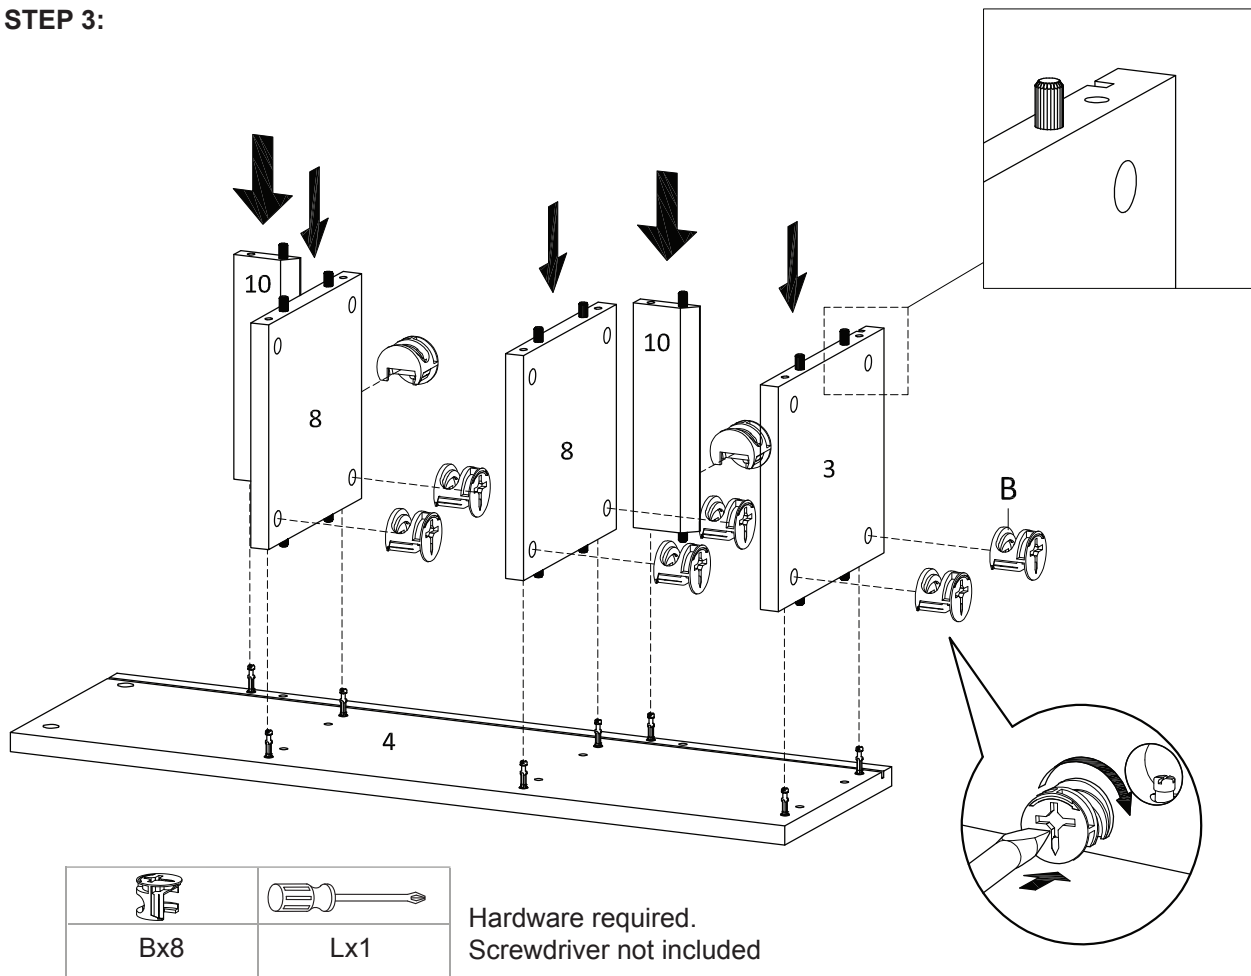


STEP 4:

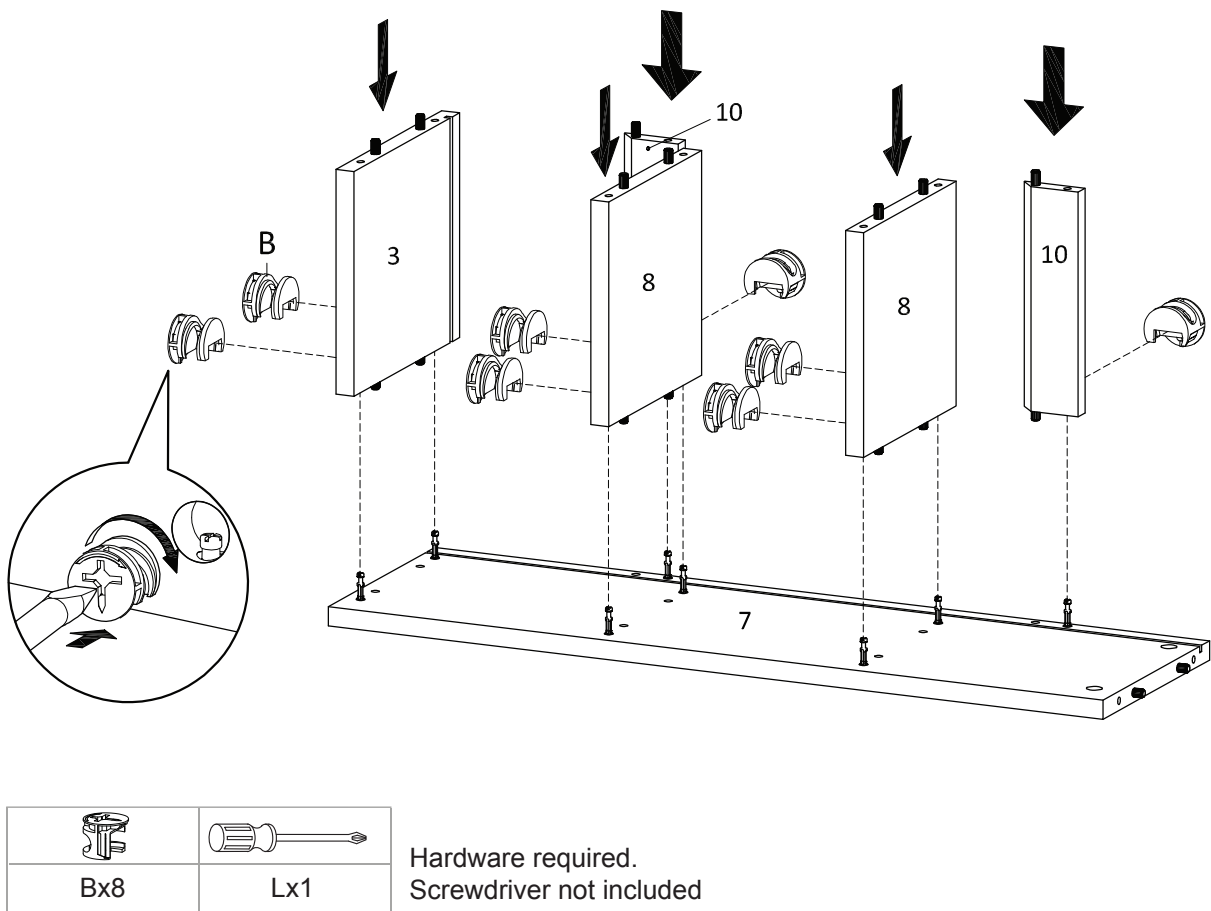


STEP 5:

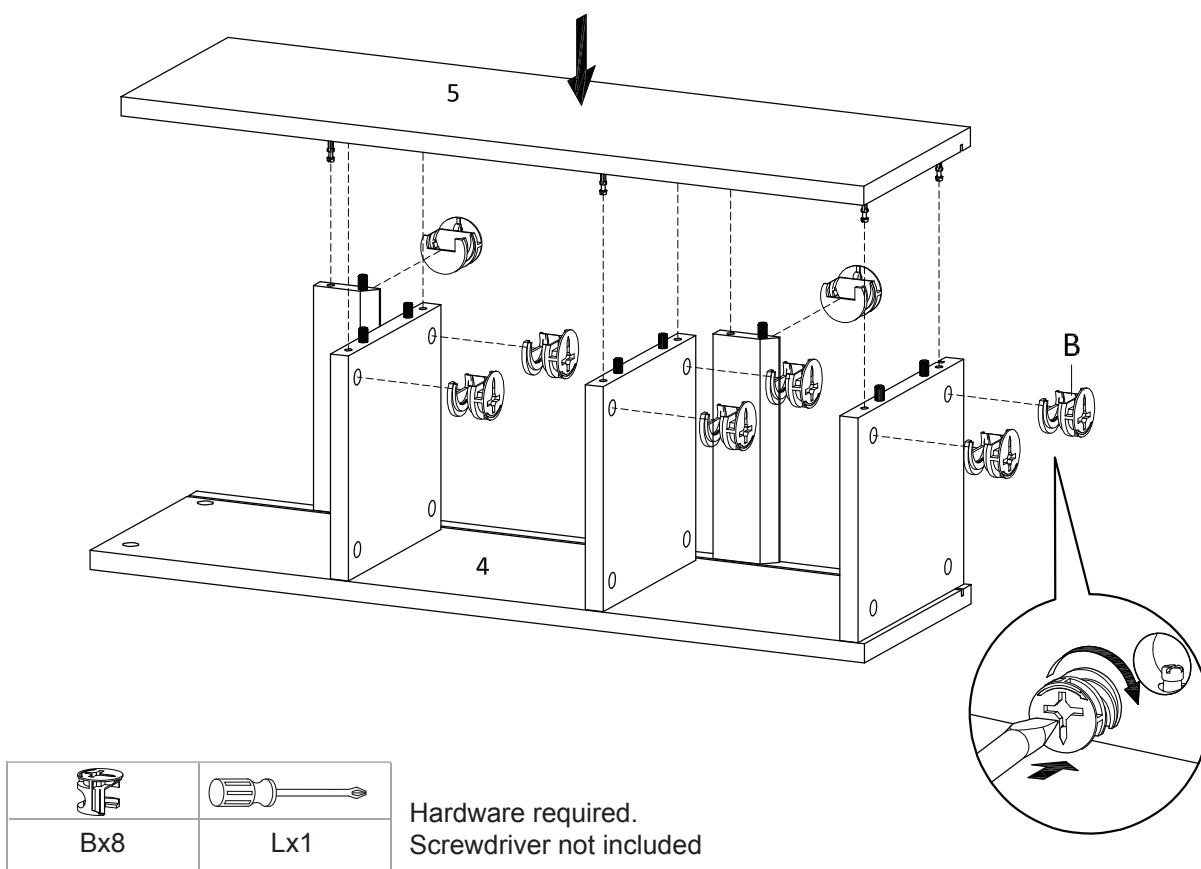

STEP 6:

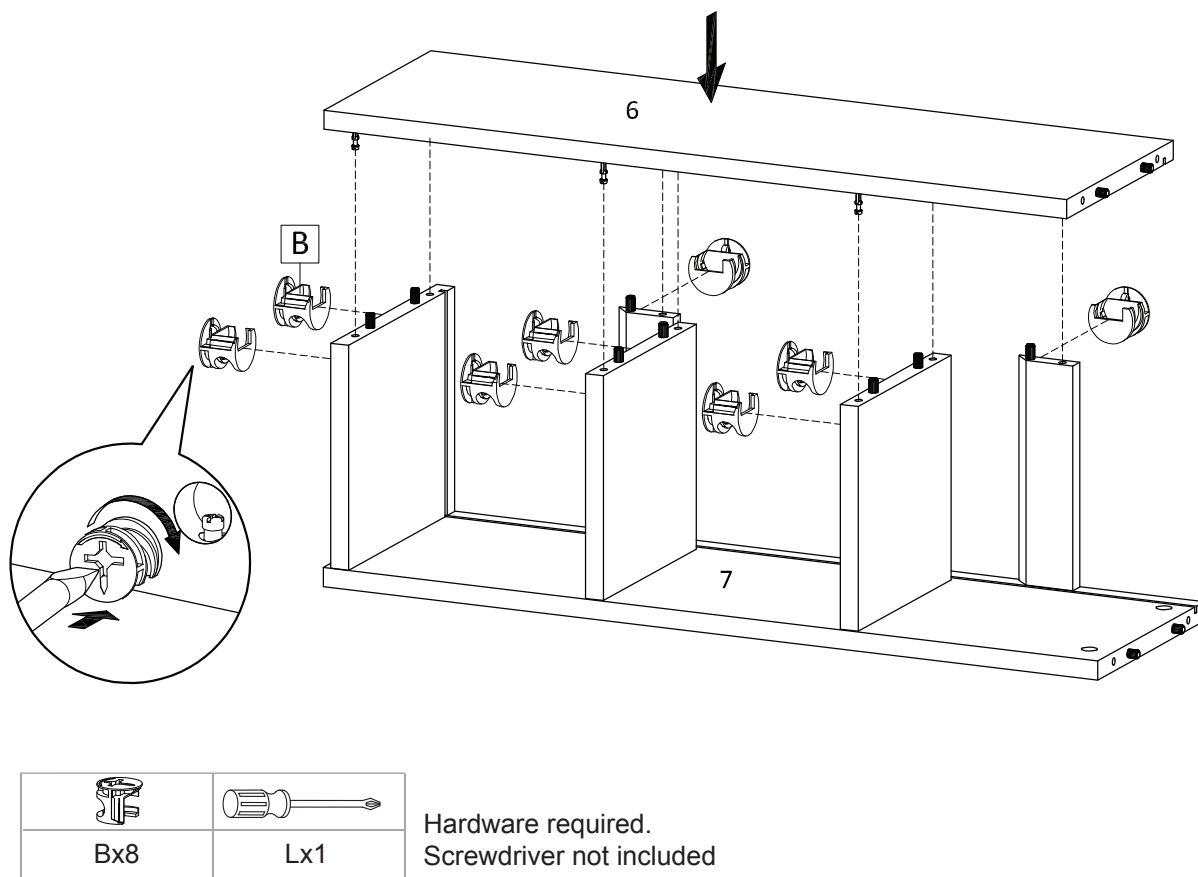


STEP 7:

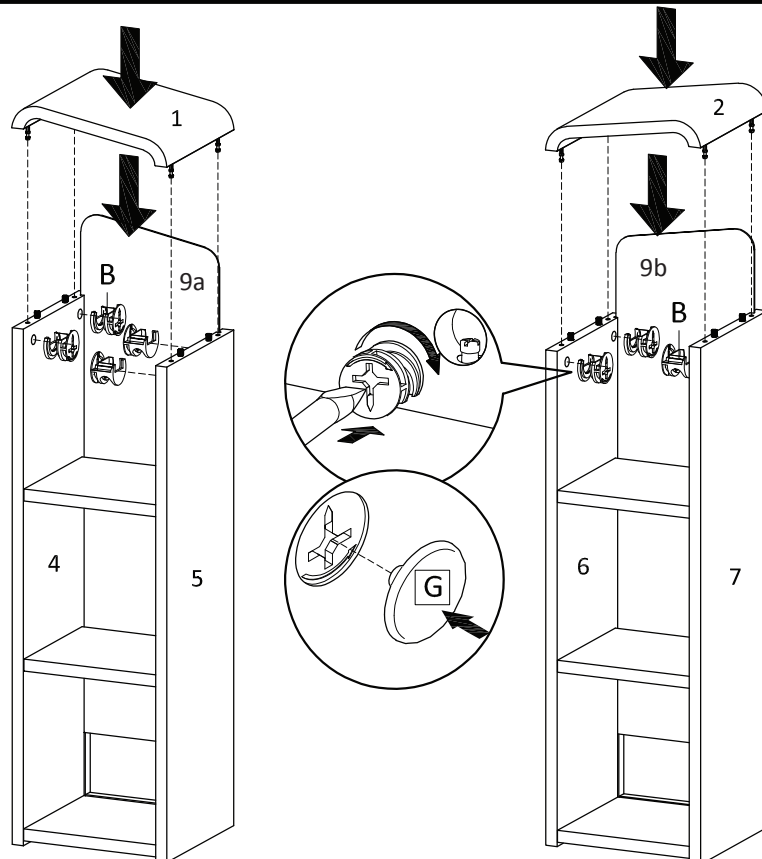

Bx8	Gx8	Lx1

Hardware required.
Screwdriver not included


STEP 8:

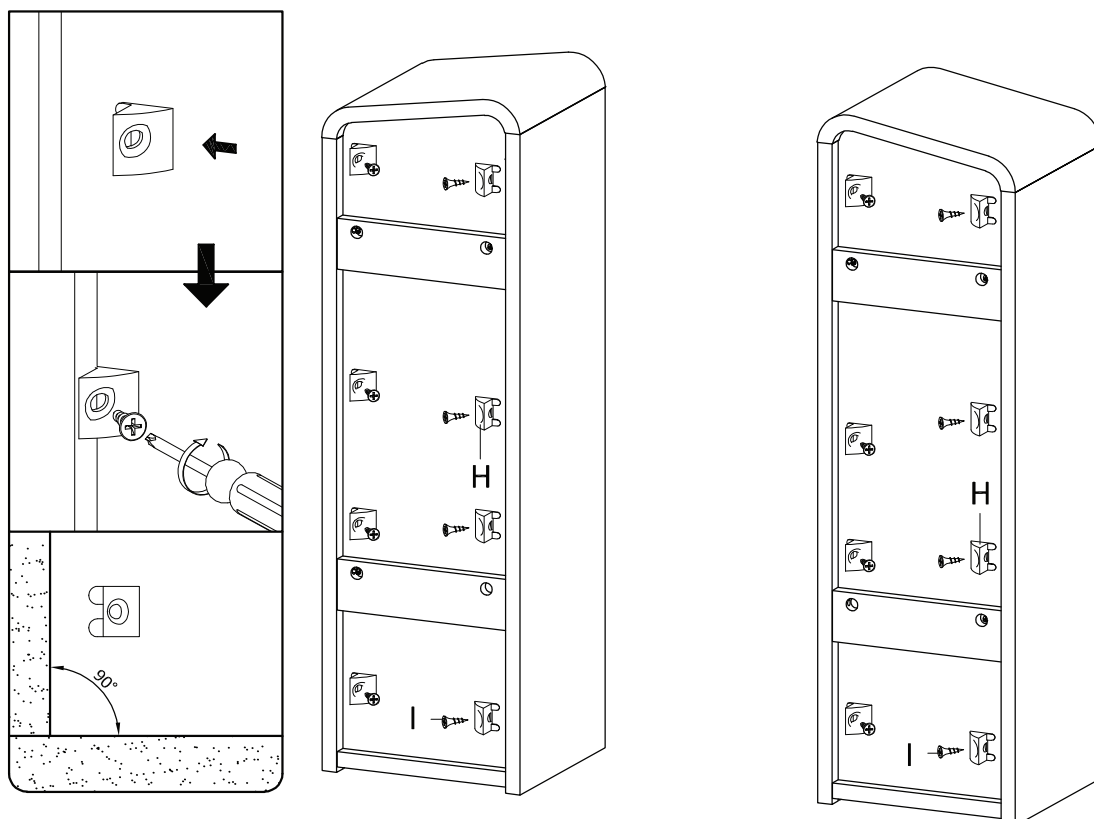




Hx16	Ix16	Lx1

Hardware required.
Screwdriver not included

STEP 9:

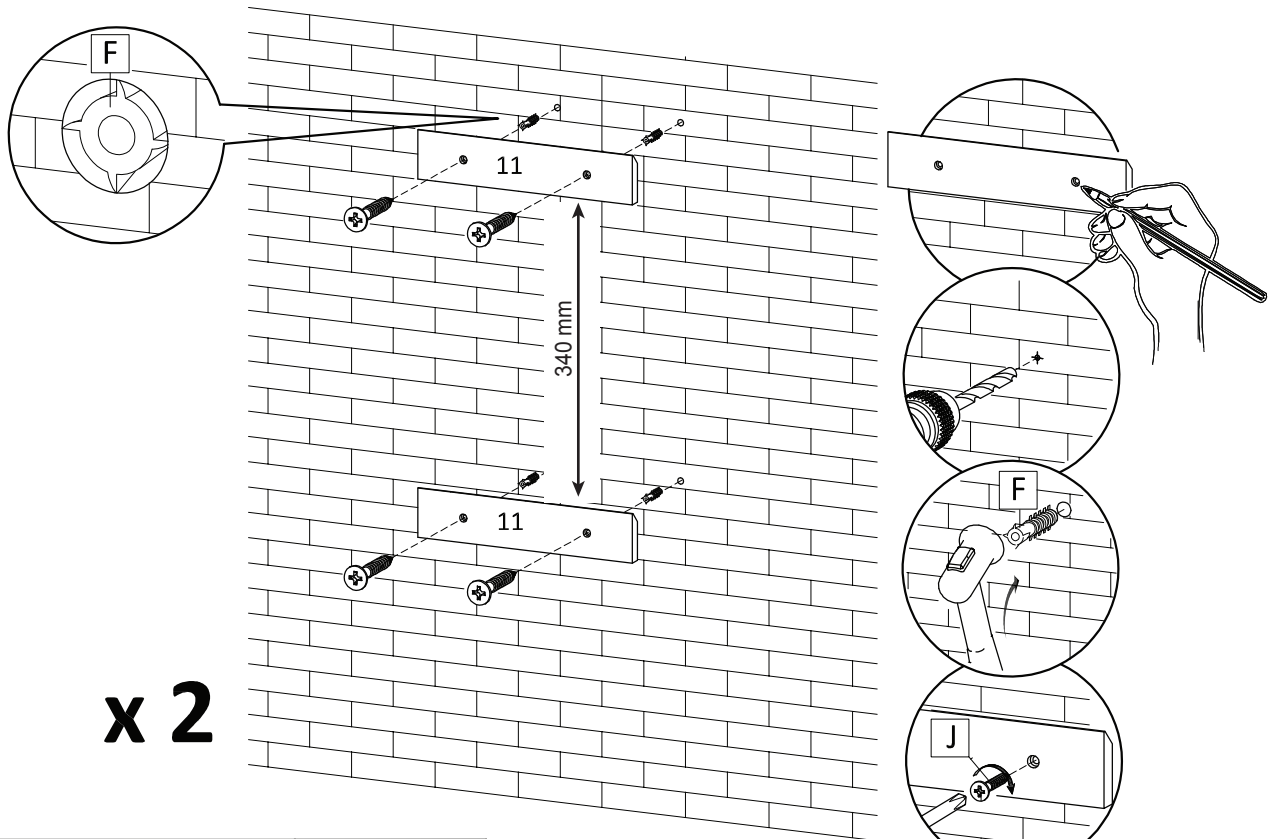


x 2


		
Fx8	Jx8	Lx1

Hardware required.
Screwdriver not included


STEP 10:

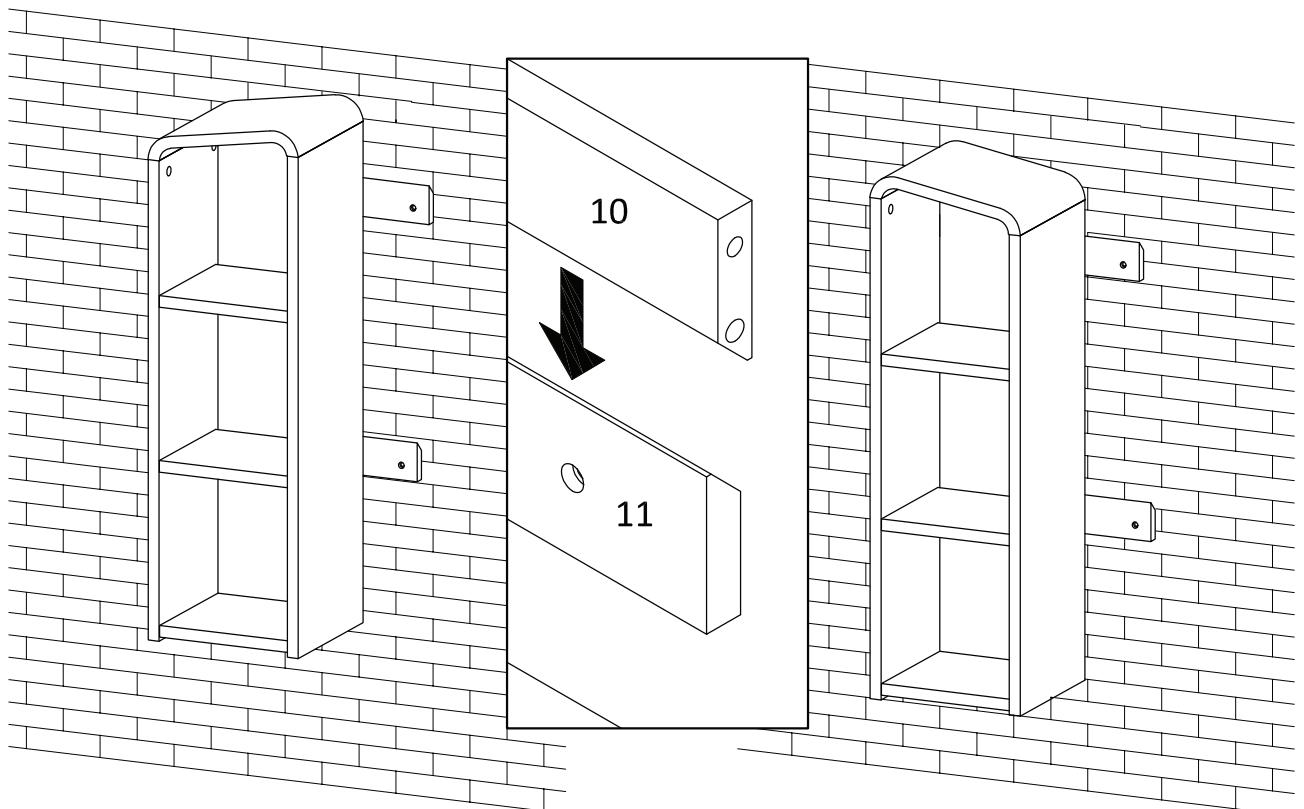


STEP 11:

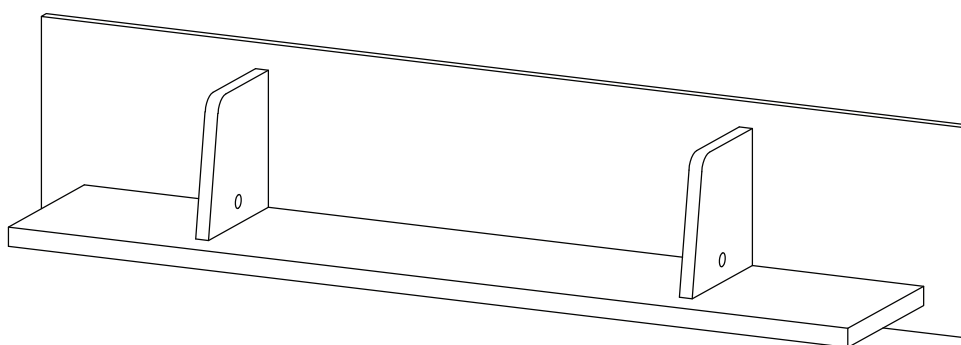




STEP 12:

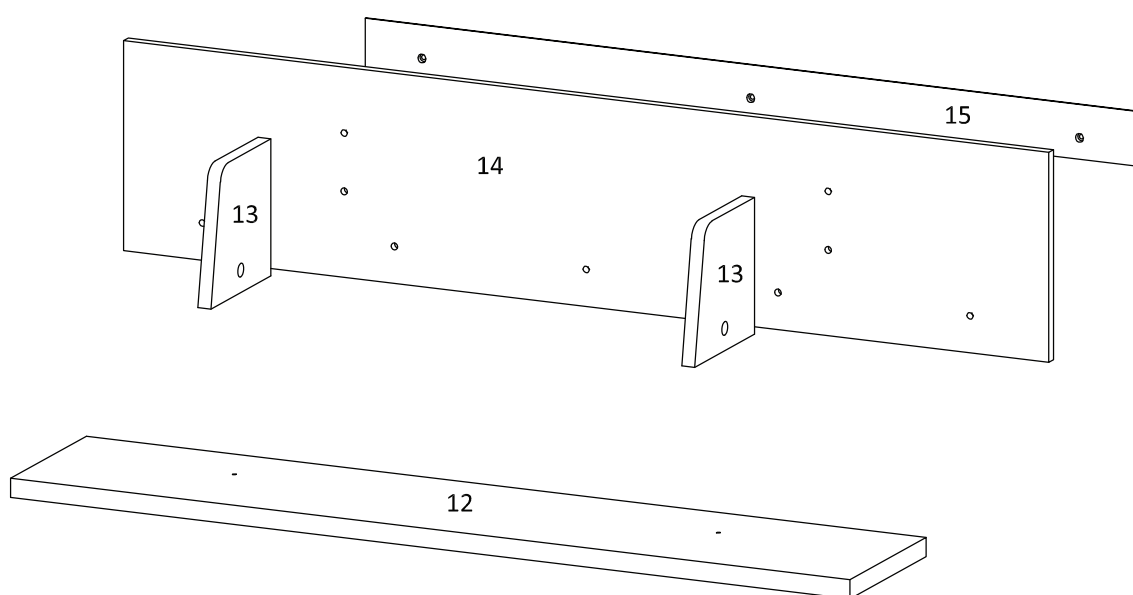


STEP 13:

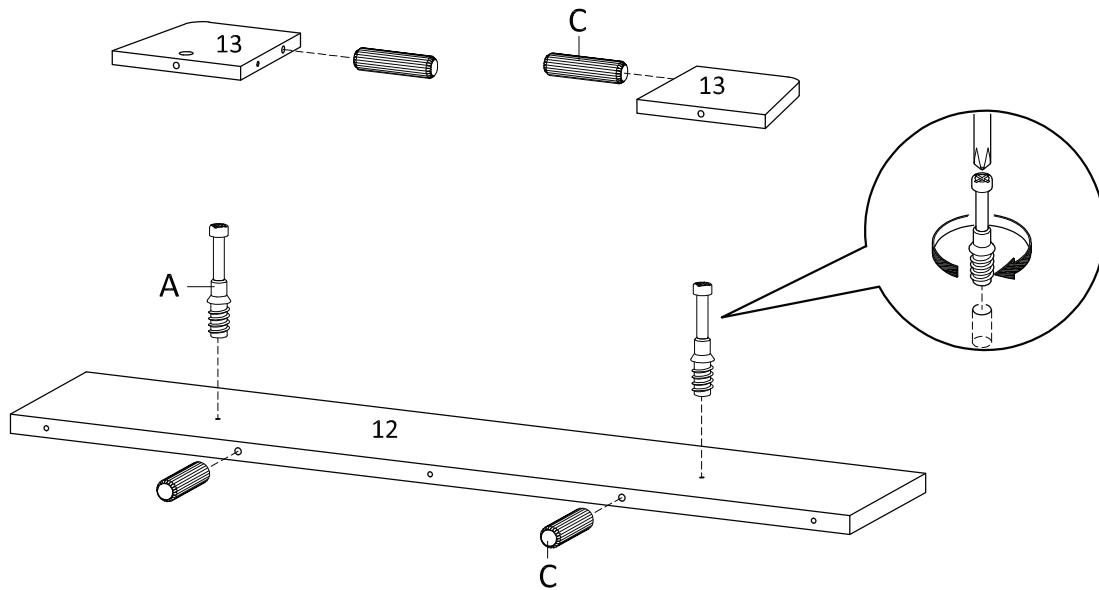




		
Ax2	Cx4	Lx1

Hardware required.
Screwdriver not included


STEP 14:

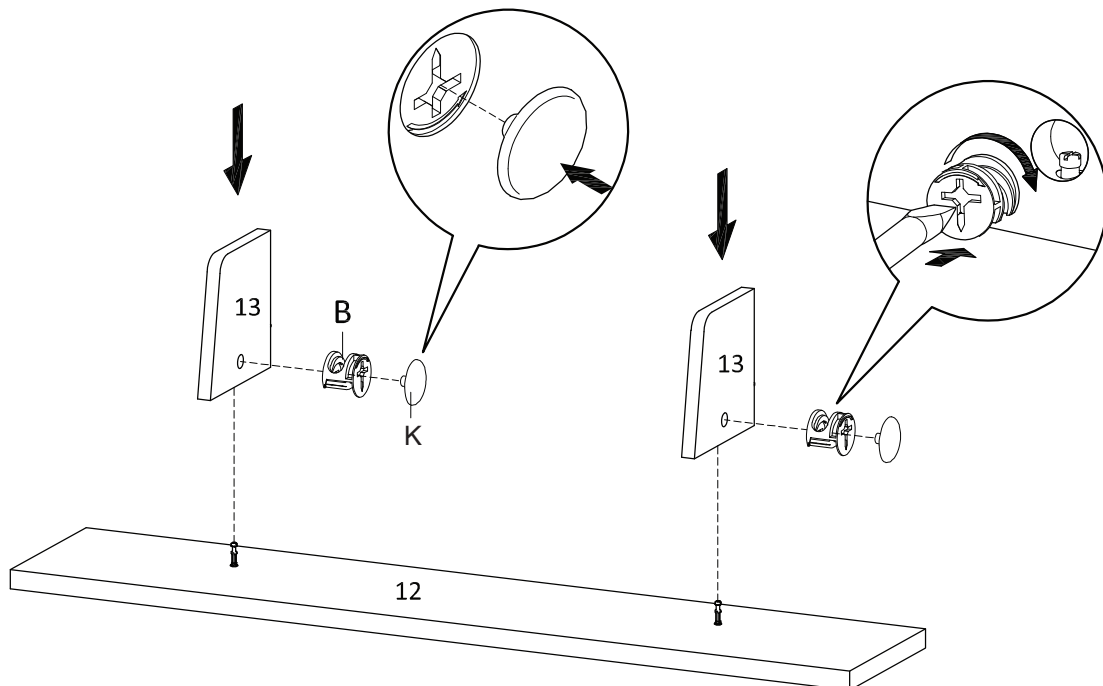



		
Bx2	Kx2	Lx1

Hardware required.
Screwdriver not included

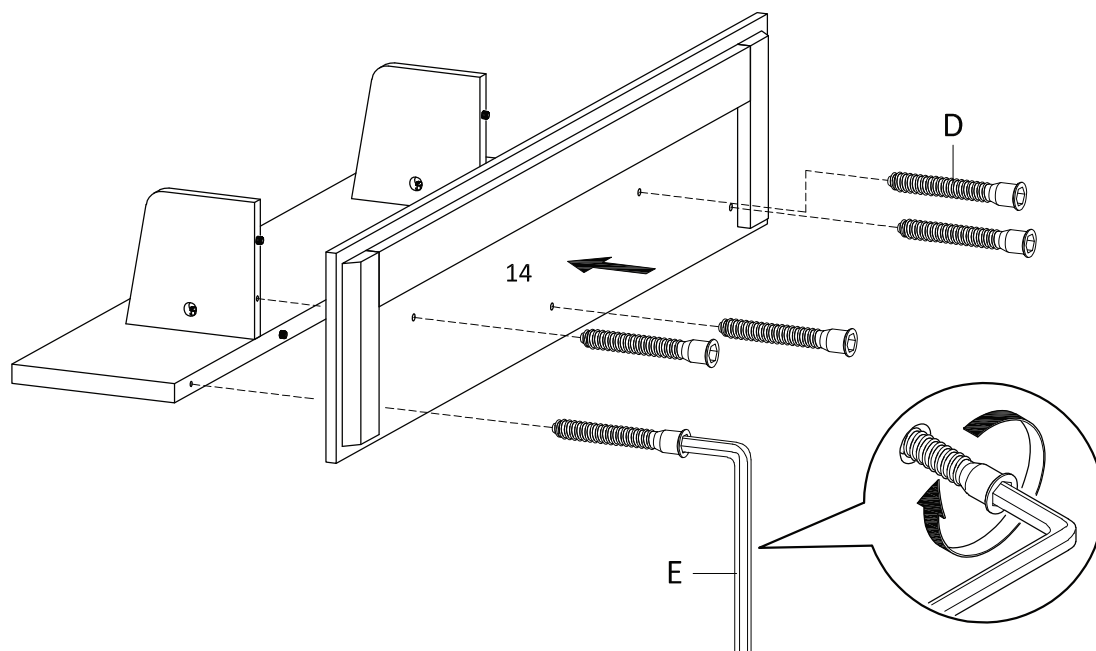
STEP 15:




	
Dx5	Ex1

Hardware required.

STEP 16:

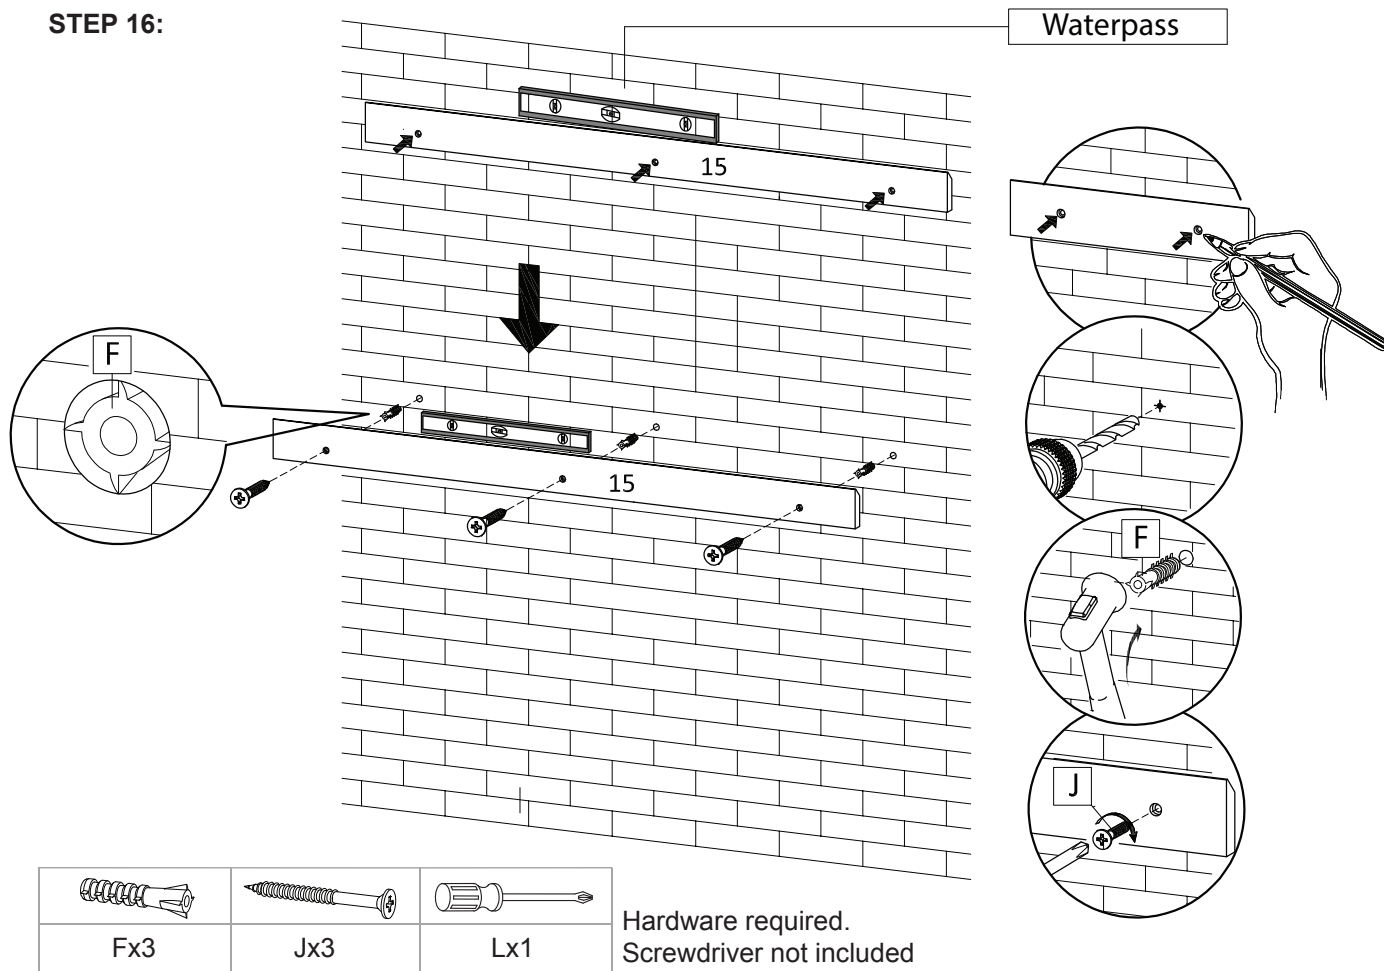


STEP 17:

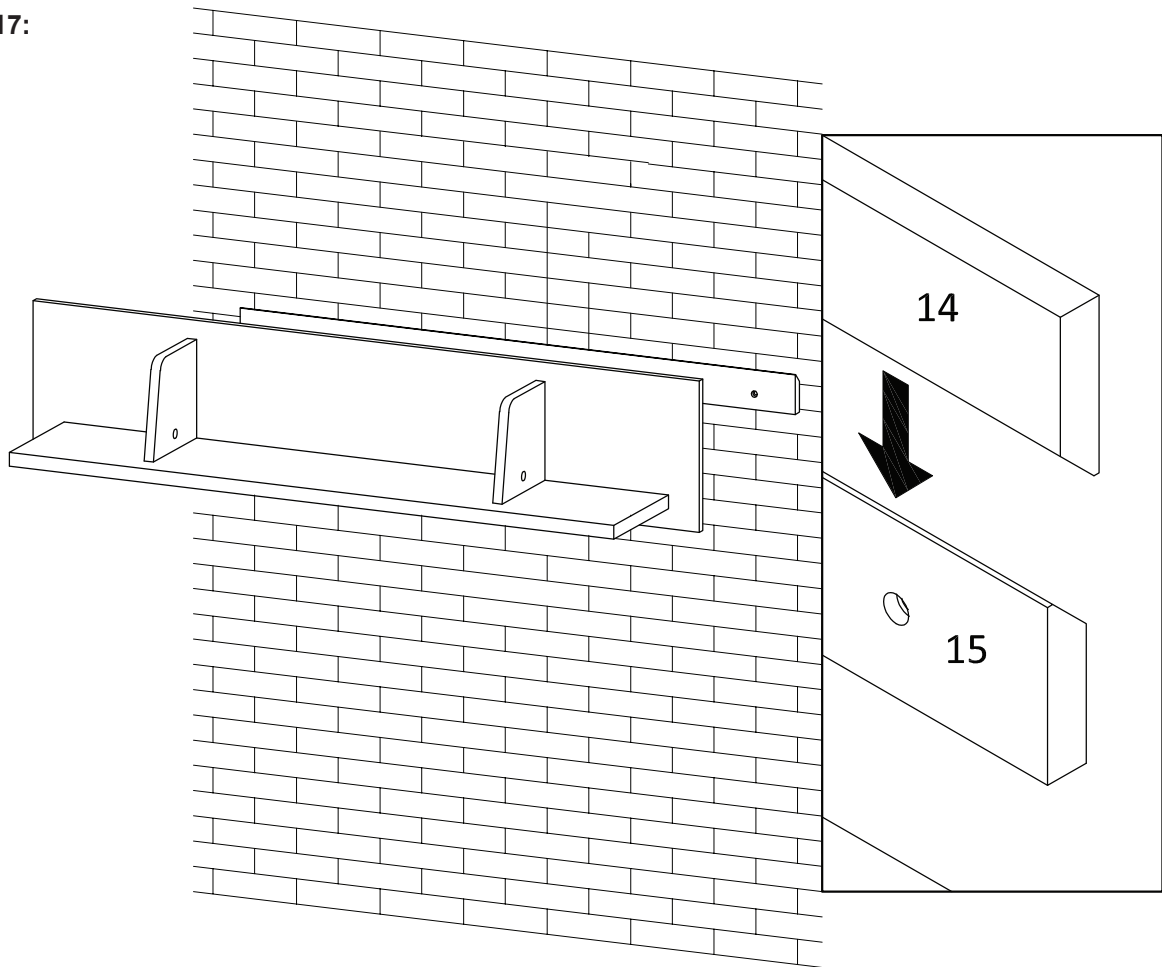


STEP 18:

OPTION 1

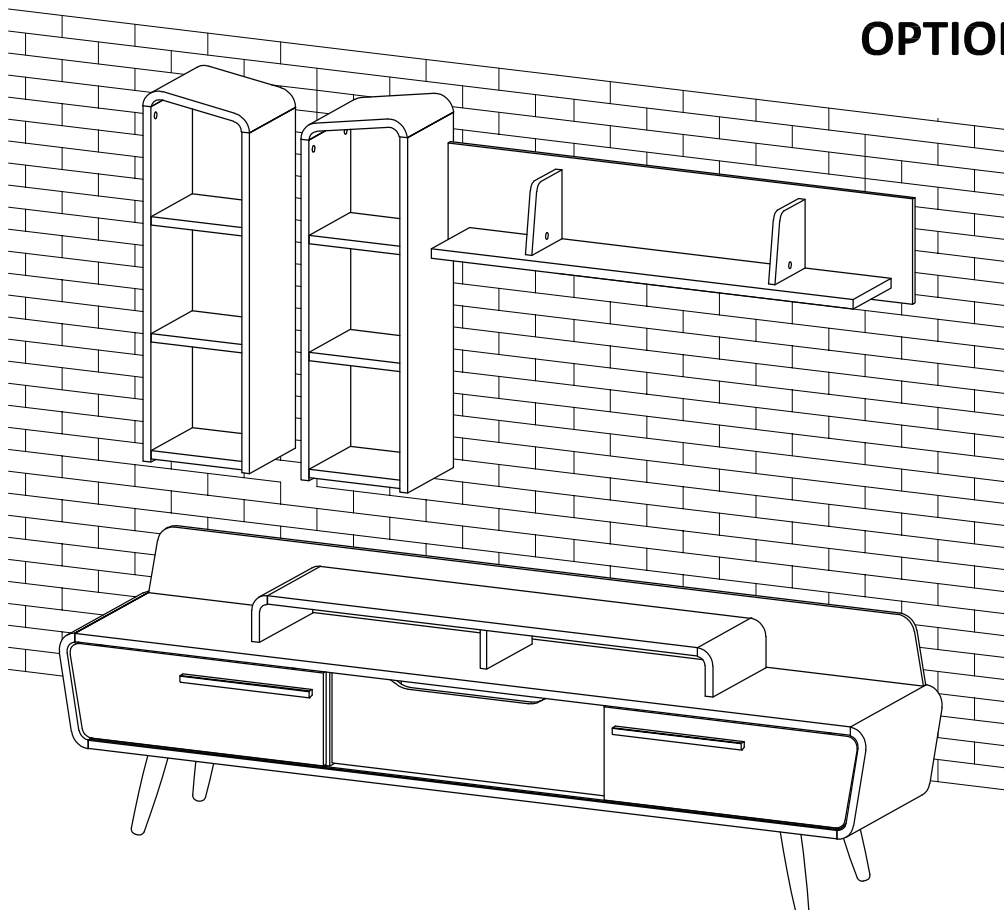


STEP 19:

OPTION 2

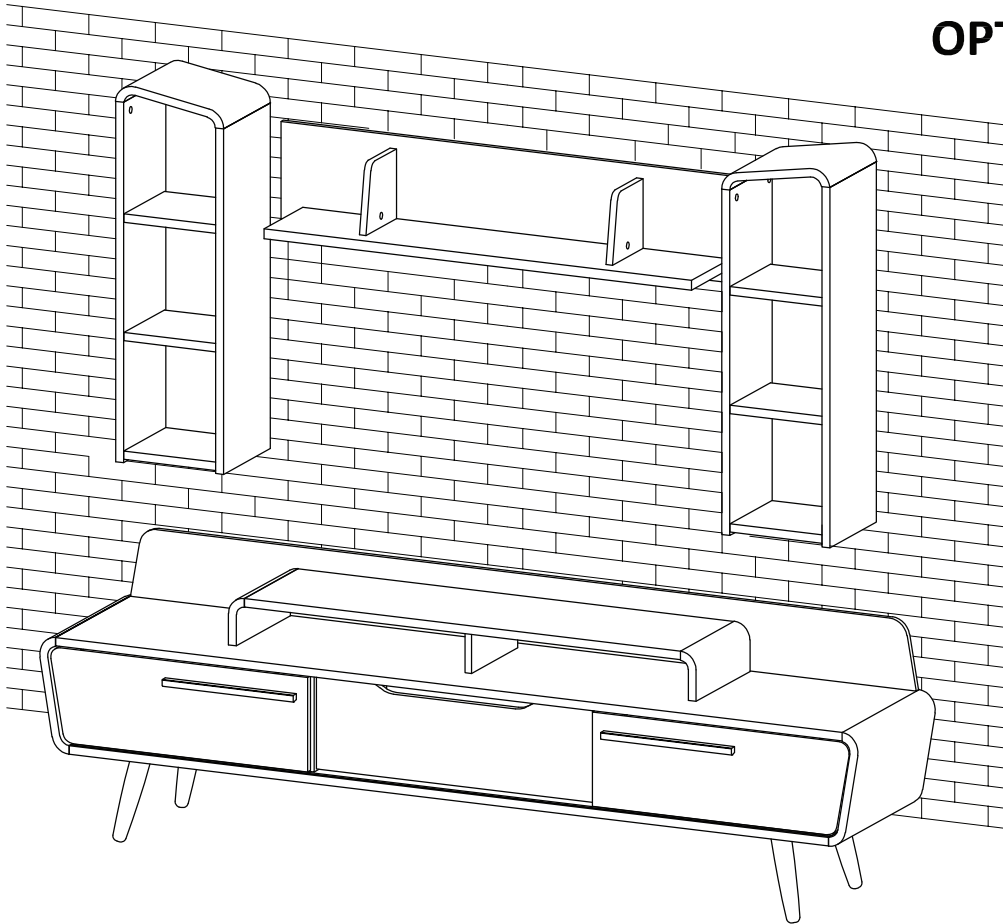


STEP 20:

OPTION 3

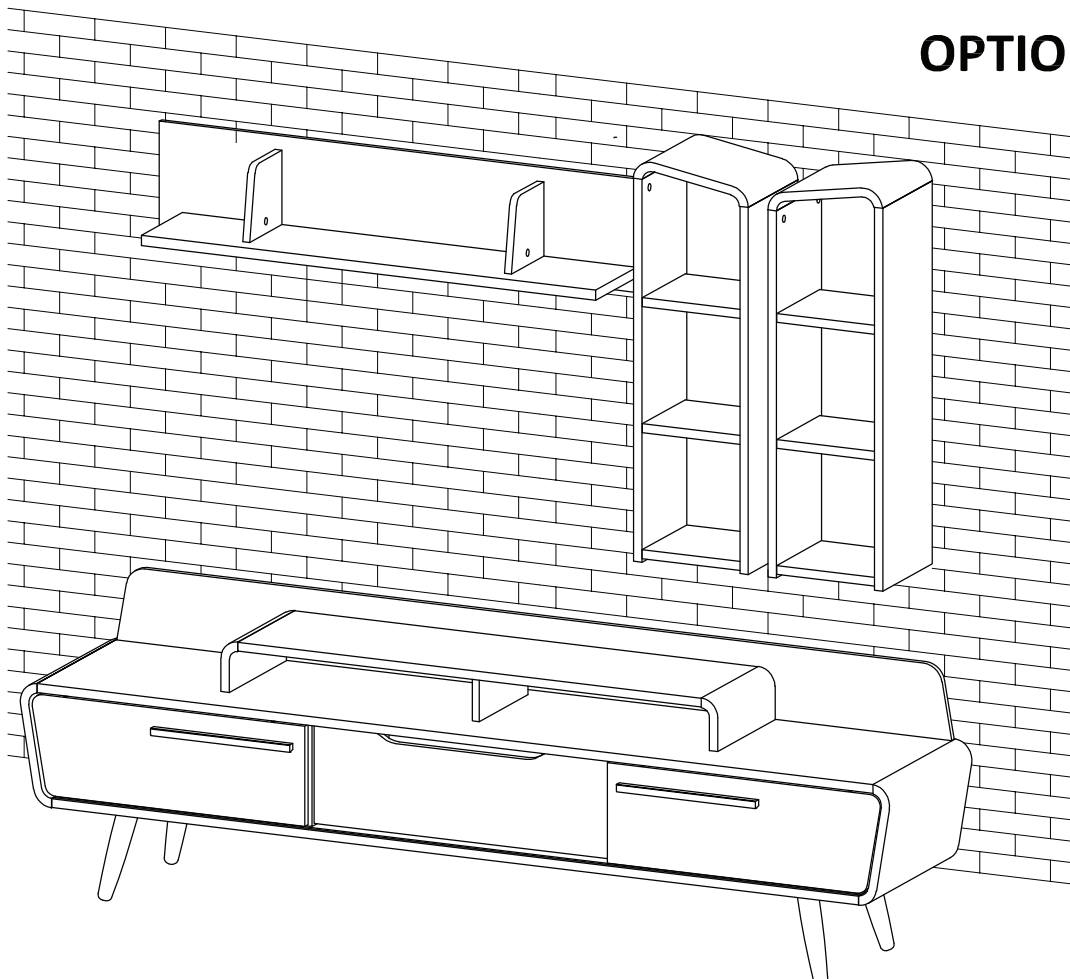

STEP 21:

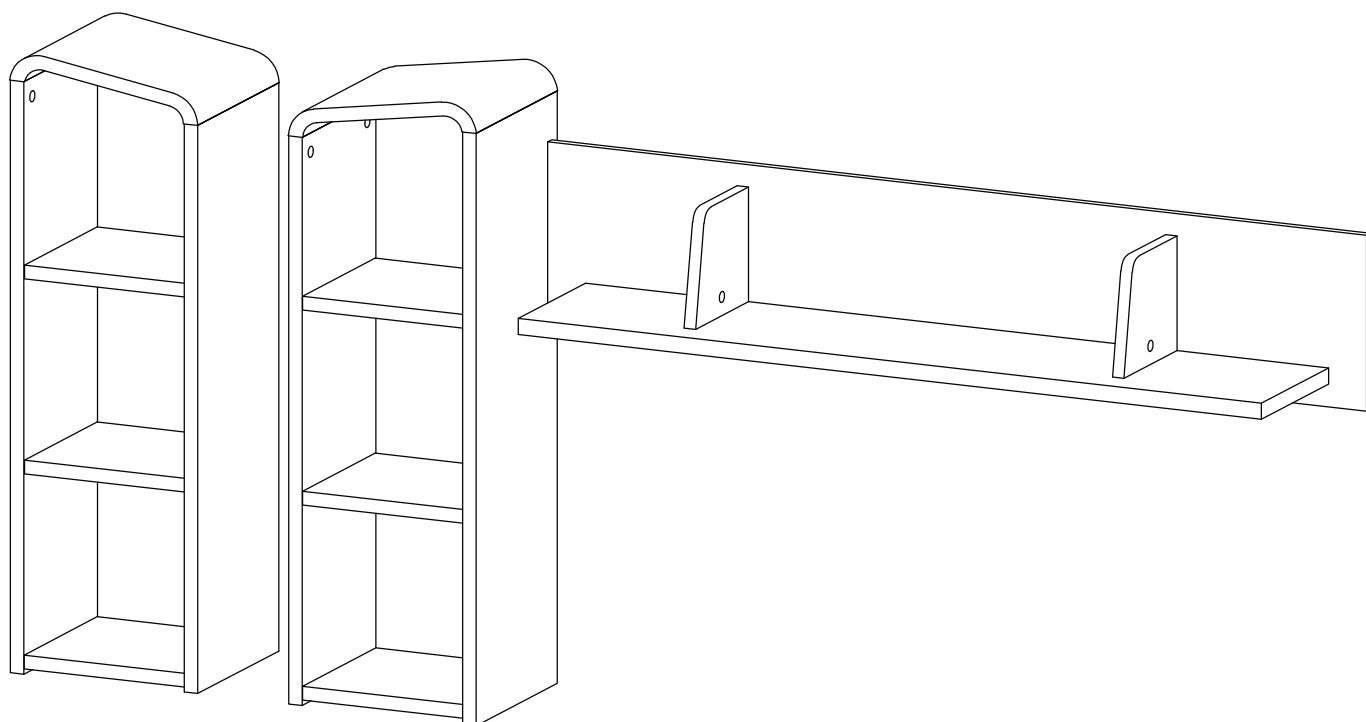

Assembly is complete. The WALL UNIT is ready to enjoy now !

