


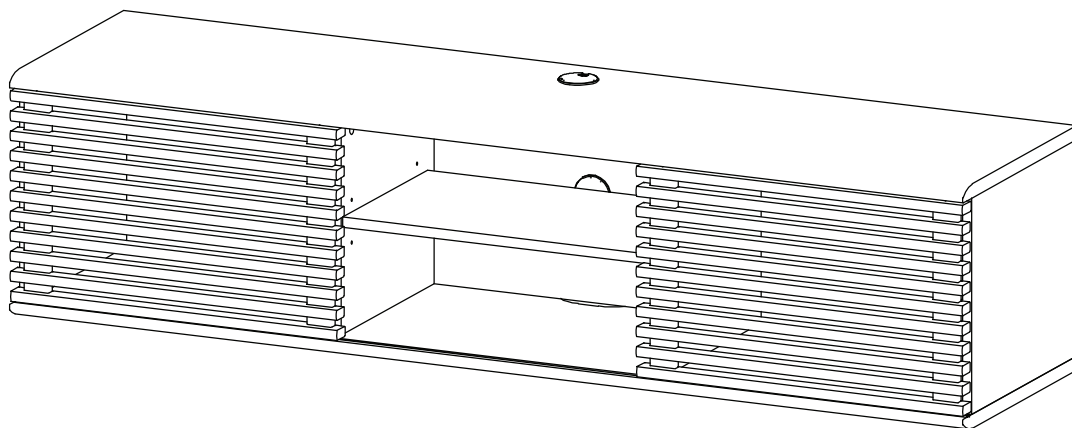









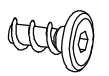
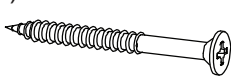
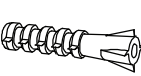

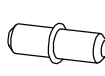
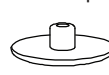
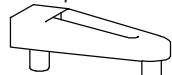


Thank you for purchasing the **MODWAY TV STAND** !

Before you start, here are some helpful advice:

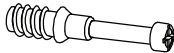
1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the TV Stand, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 70 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.

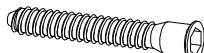

Hardware :


A) Cambolt/Metal  $\varnothing 6 \times 35 \text{ mm}$ x 16	B) Camlock/Metal  $\varnothing 15 \text{ mm}$ x 16	C) Dowel/Wood  $\varnothing 8 \times 30 \text{ mm}$ x 28	D) Screw/Metal  $M 7 \times 50 \text{ mm}$ x 16	E) Hex/Allen Key/Metal  L 4 x 1
F) Pin Sliding Top/Plastic  $\varnothing 8 \times 19 \text{ mm}$ x 4	G) Pin Sliding Bottom/Plastic  $\varnothing 8 \times 16 \text{ mm}$ x 4	H) Grommet Cover / Plastic  x 2	I) Short Bracket / Aluminium  x 5	J) Long Bracket /Aluminium  x 1
K) Screw/Metal  $M 6.4 \times 14 \text{ mm}$ x 10	L) Screw/Metal  $M 12 \times 45 \text{ mm}$ x 8	M) Wall Plug/Plastic  5002 x 8	N) Wall Mounted Bolt/Metal Plastic  x 2	O) Shelf Pin/Metal  $\varnothing 5 \times 15 \text{ mm}$ x 4
P) Screw Cup/Plastic  $\varnothing 15 \text{ mm}$ x 8	Q) Stoper/Plastic  $40 \times 14 \times 8 \text{ mm}$ x 2	R) Bumper /Silicon  $\varnothing 8 \text{ mm}$ x 1	S)  Screwdriver (Not Include)	

Components:

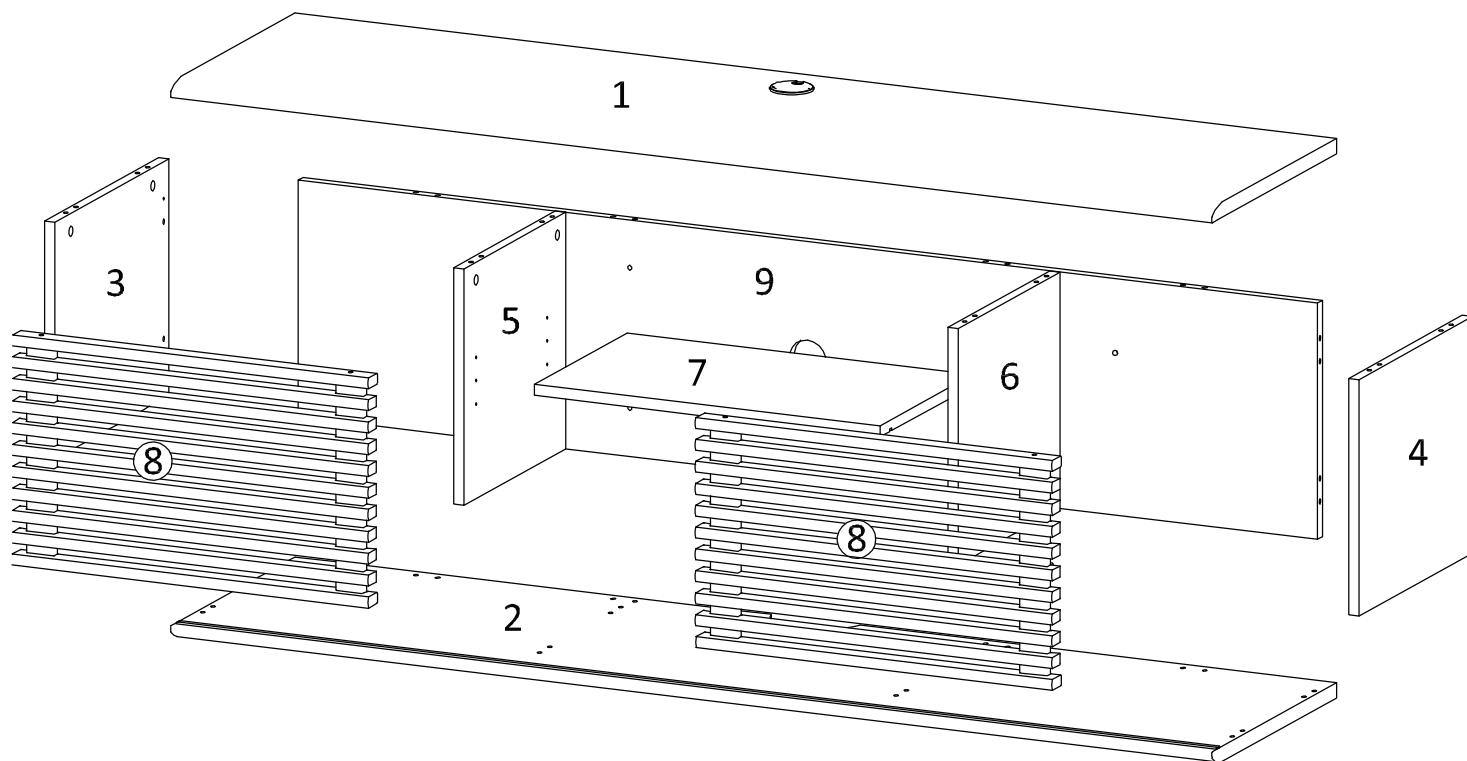




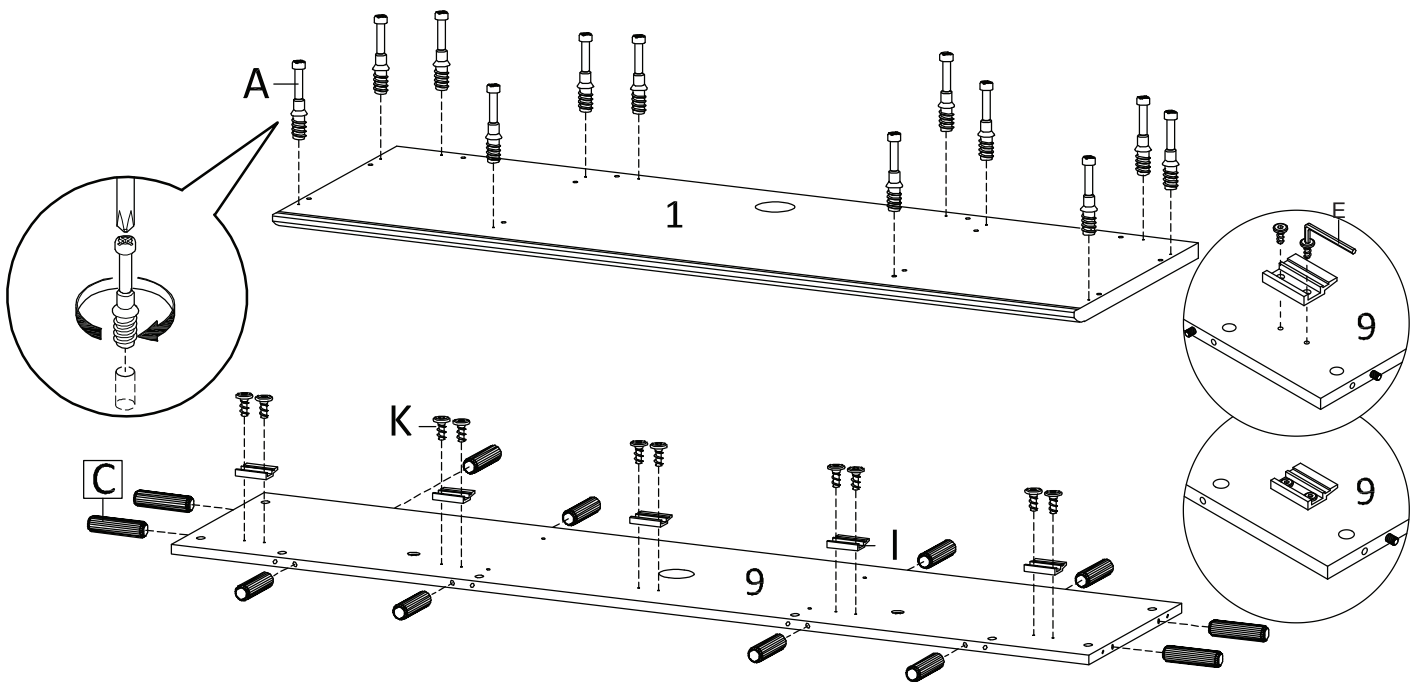


1	Top Board	x1	2	Bottom Board	x1	3	Side Board Left	x1	4	Side Board Right	x1
5	Center Board 1	x1	6	Center Board 1	x2	7	Adjustable Shelf	x1	8	Frame Door	x2
9	Back Board	x1									


STEP 1:

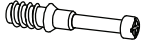




Hardware required.
Screwdriver not included

					
Ax12	Cx12	Ex1	Ix5	Kx10	Sx1

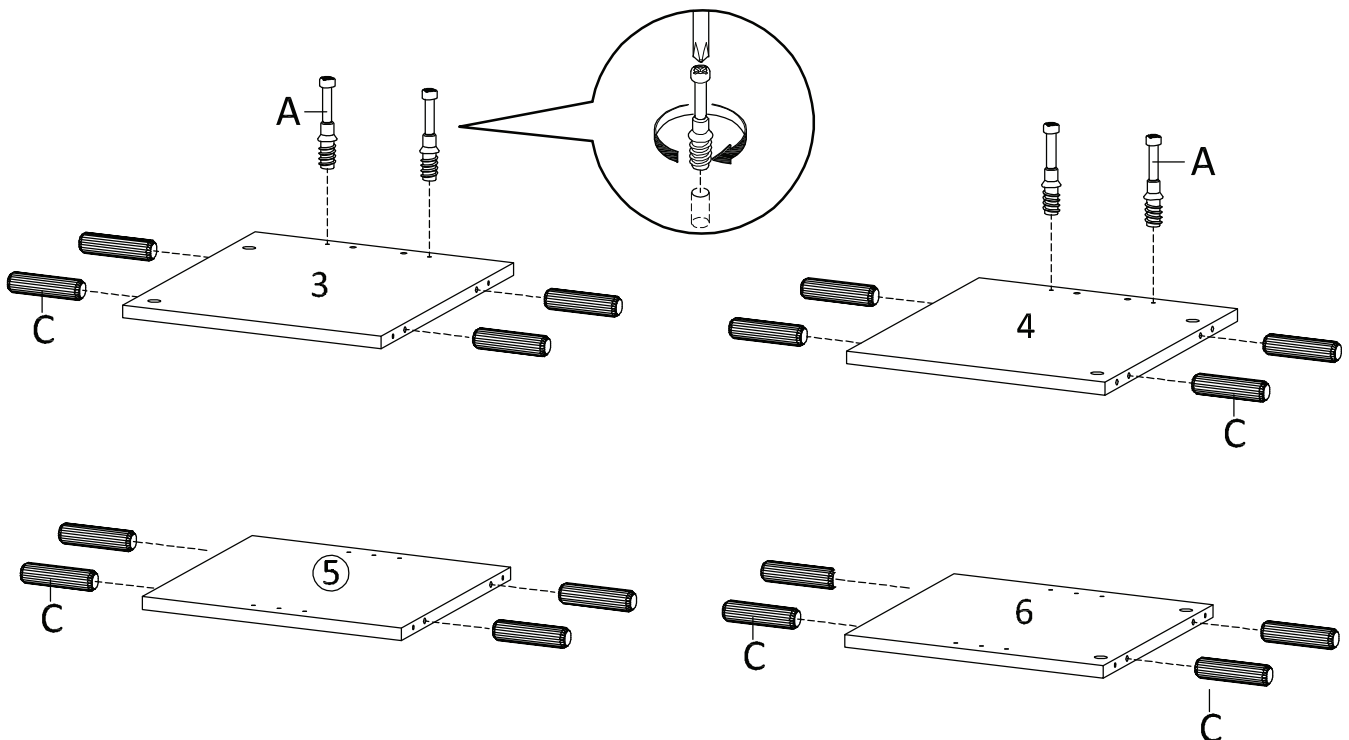
STEP 2:

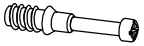



		
Ax4	Cx16	Sx1

Hardware required.
Screwdriver not included



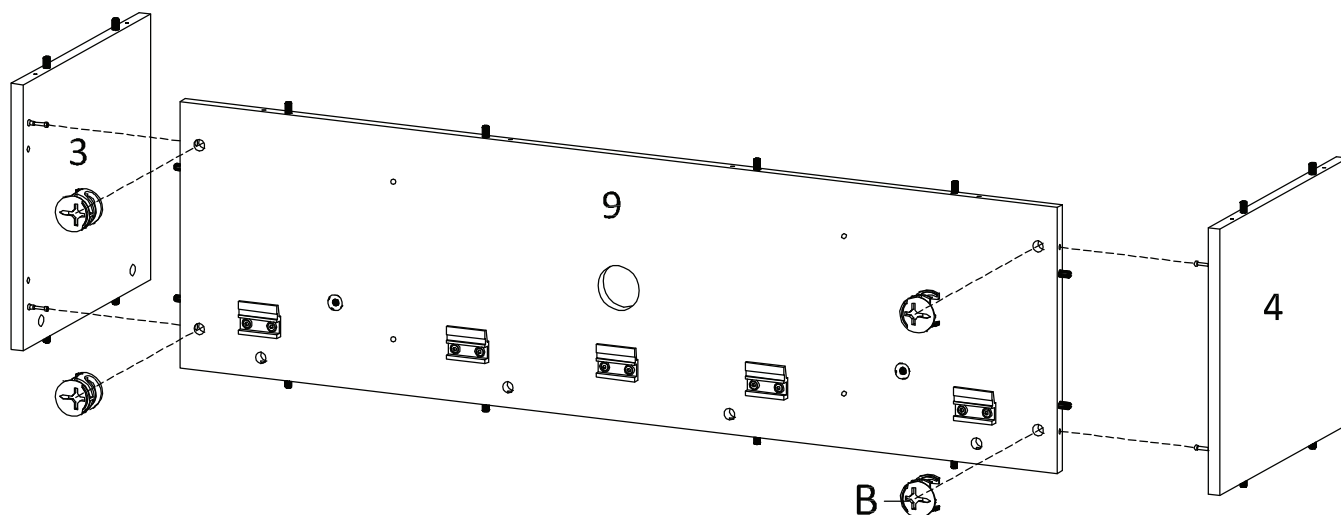
STEP 3:



	
Bx4	Sx1

STEP 4:


BACK VIEW

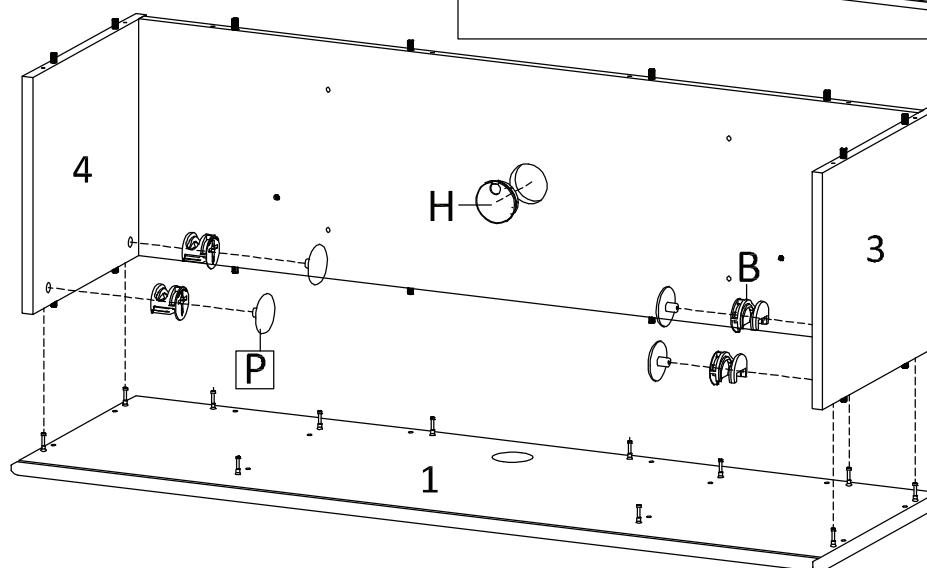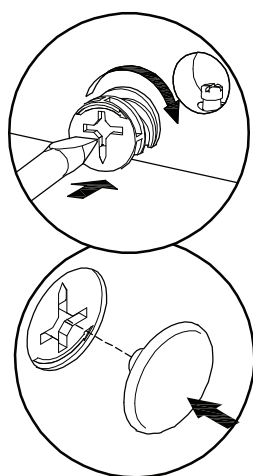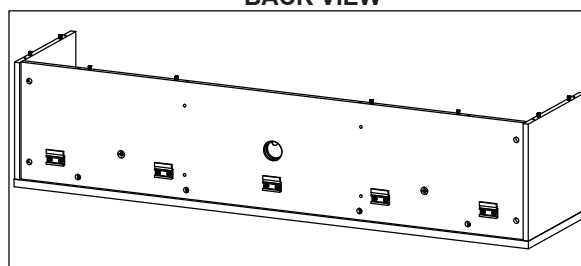

			
Bx4	Hx1	Px4	Sx1

Hardware required.
Screwdriver not included


STEP 5:

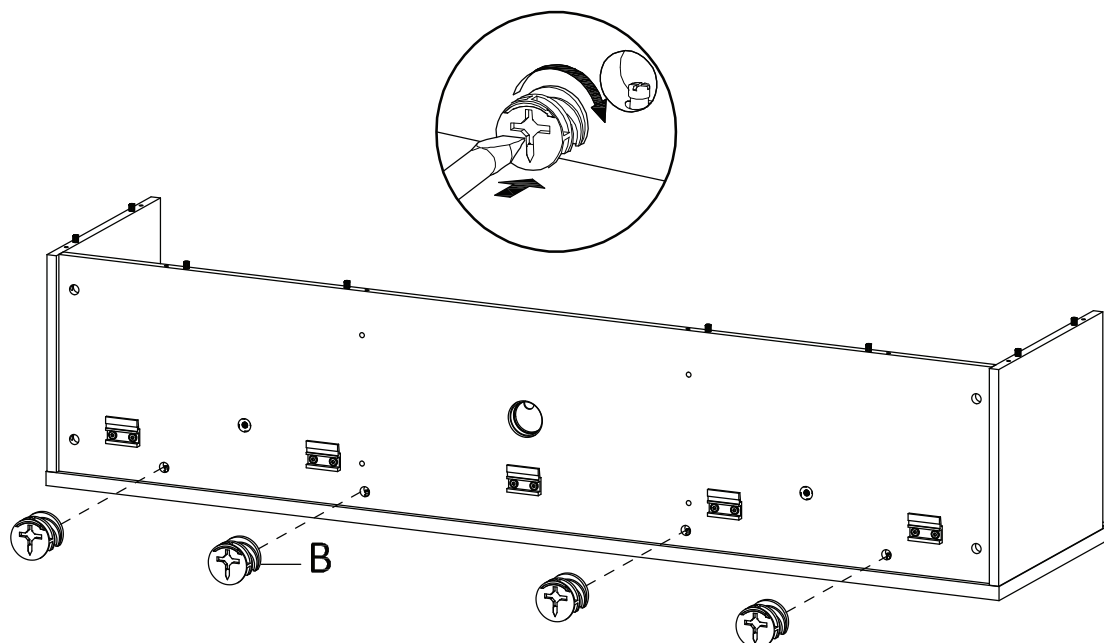

Bx4	Sx1

Hardware required.
Screwdriver not included


STEP 6:

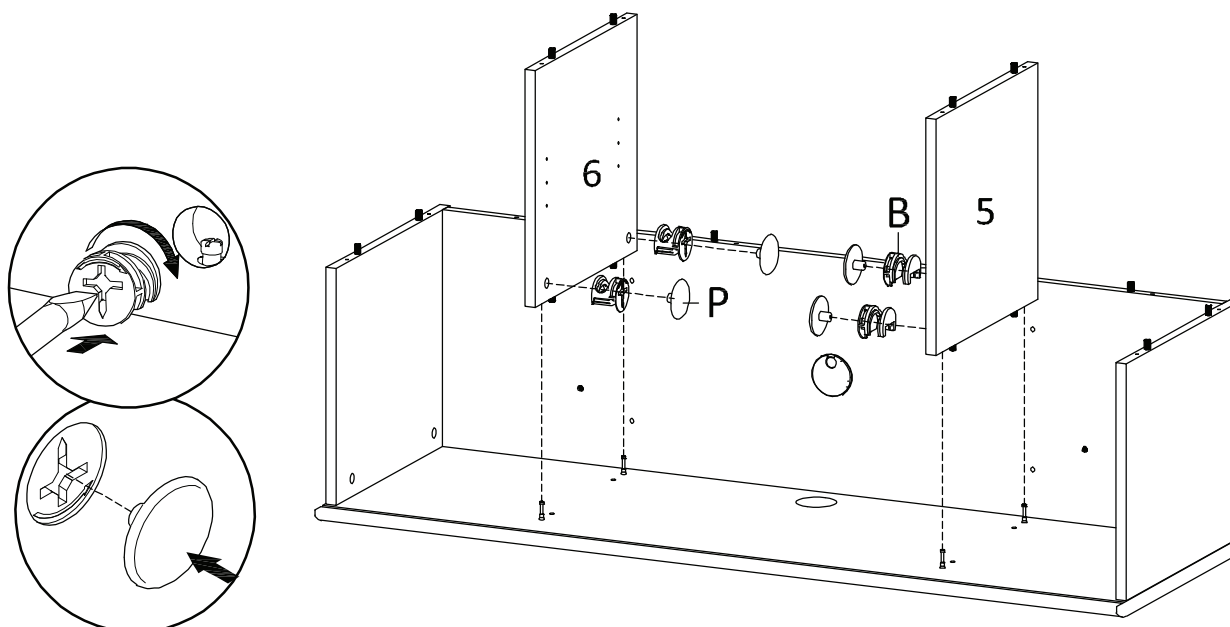



Bx4	Px4	Sx1

Hardware required.
Screwdriver not included

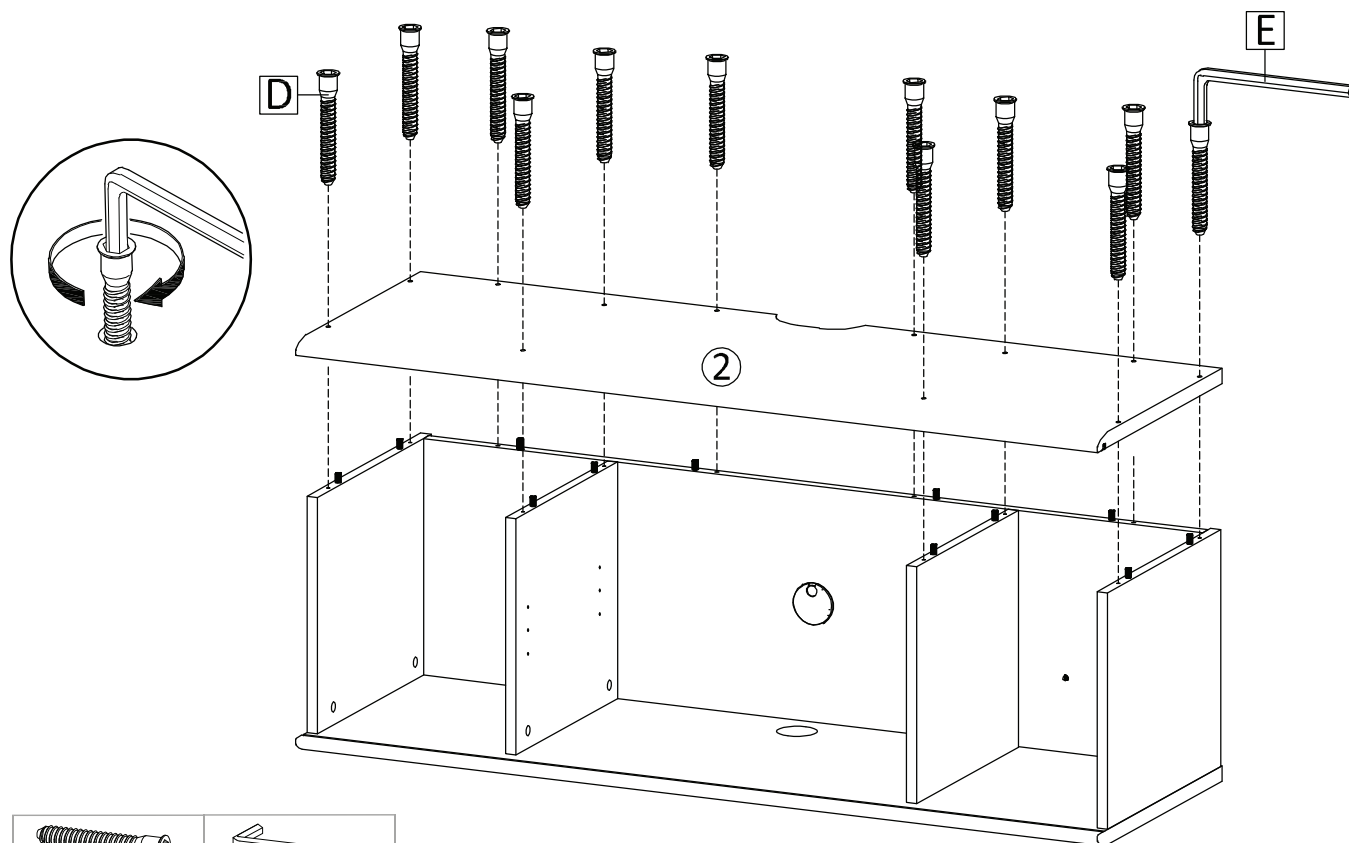
STEP 7:






	
Dx12	E

Hardware required.

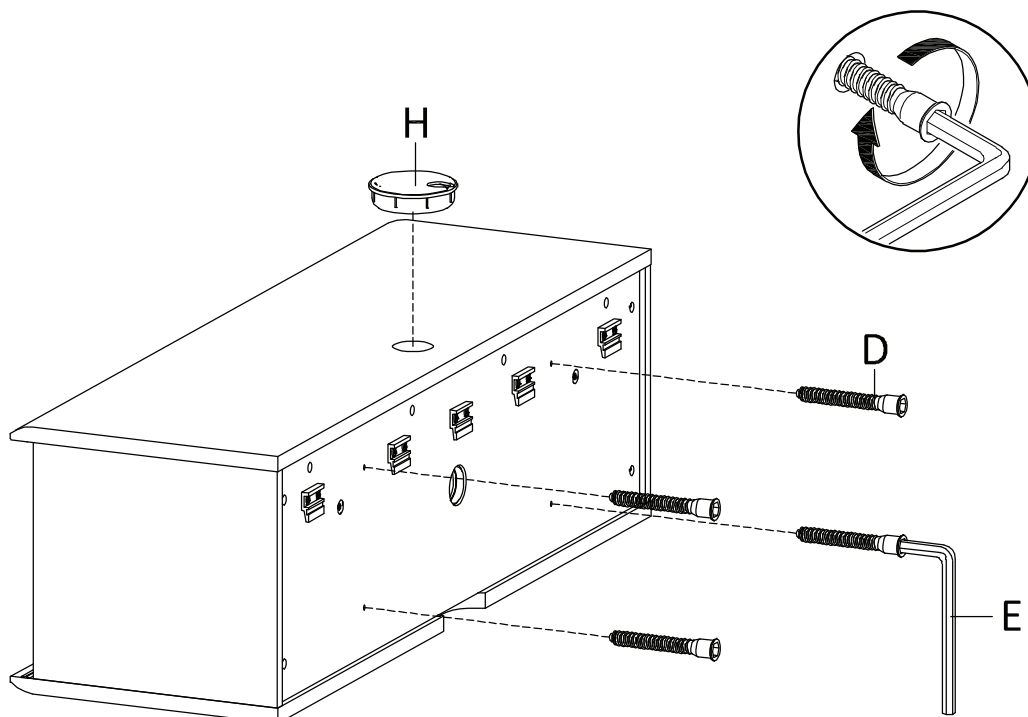STEP 8:




		
Dx4	E	Hx1

Hardware required.

STEP 9:


Determine your desired (Y) height, then subtract by 127 mm. This is the drill holes height from the floor (Z).

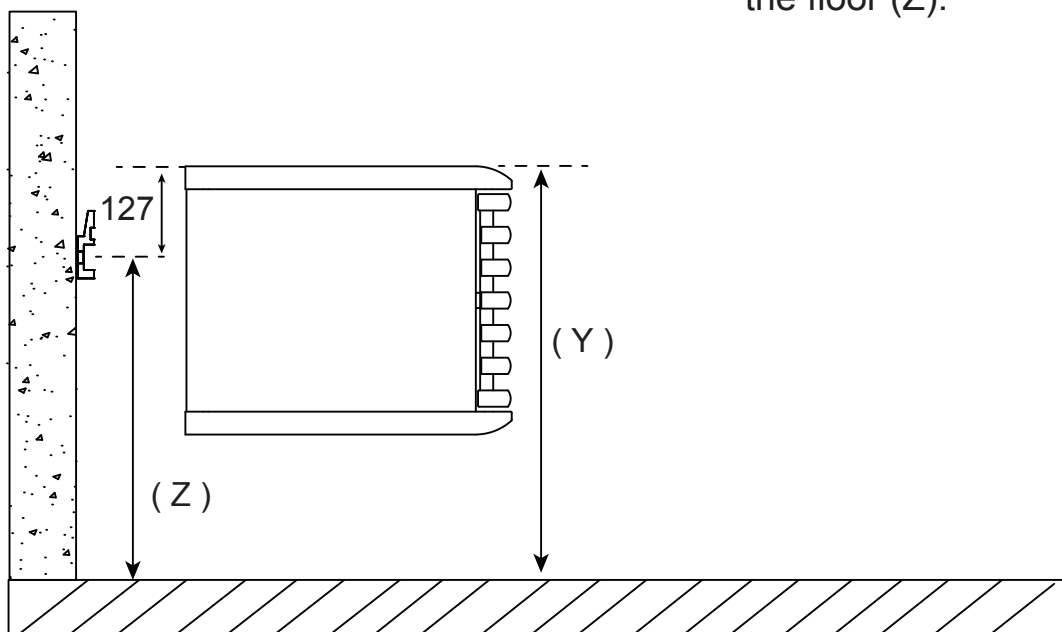

STEP 10:


Please use minimum 1 hole from each hole group to apply the wall plug and screw. Use additional holes when necessary.

* Long Bracket

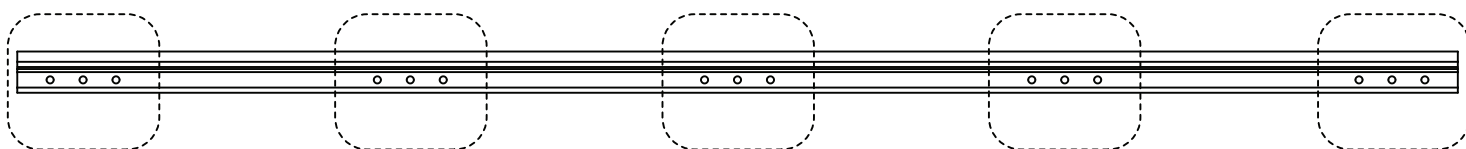



Different wall materials require unique wall fasteners.

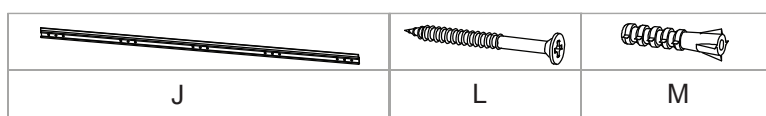


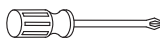
The wall plugs (M) and screws (L) are designed for fixing to concrete walls only. Please consult your local hardware store to ensure you are using the correct hardware for your wall type.



STEP 11:

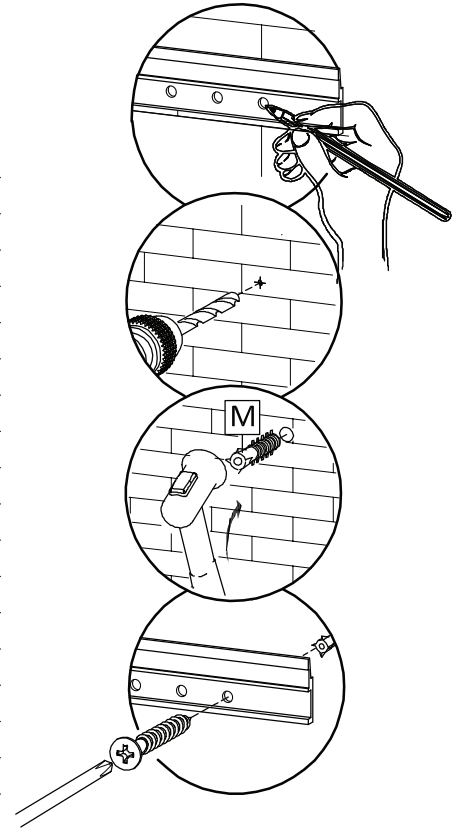
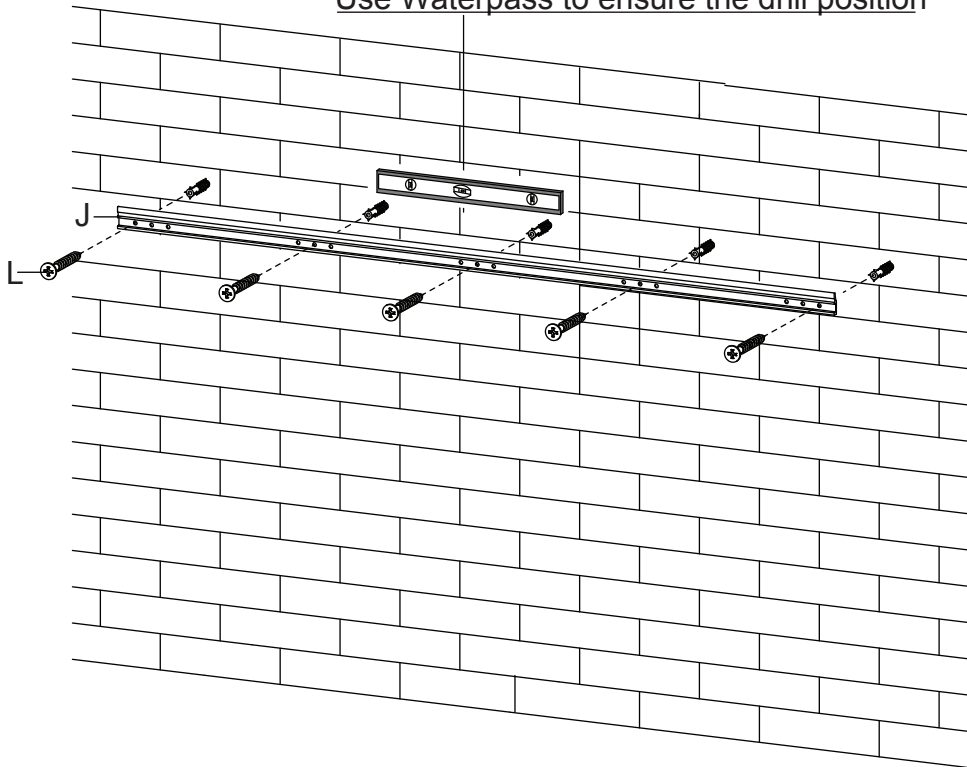
Use Waterpass to ensure the drill position


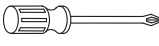


			
Jx1	Lx5	Mx5	Sx1

Hardware required.
Screwdriver not included



STEP 12:

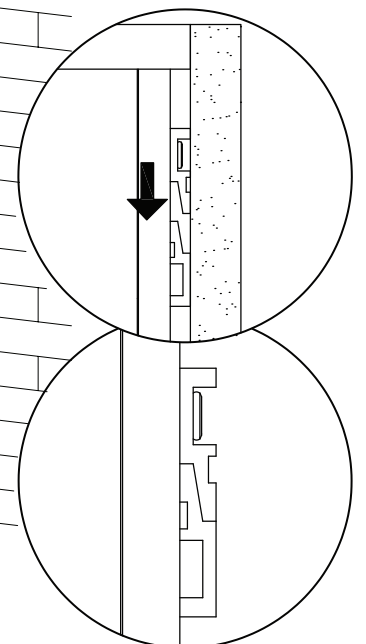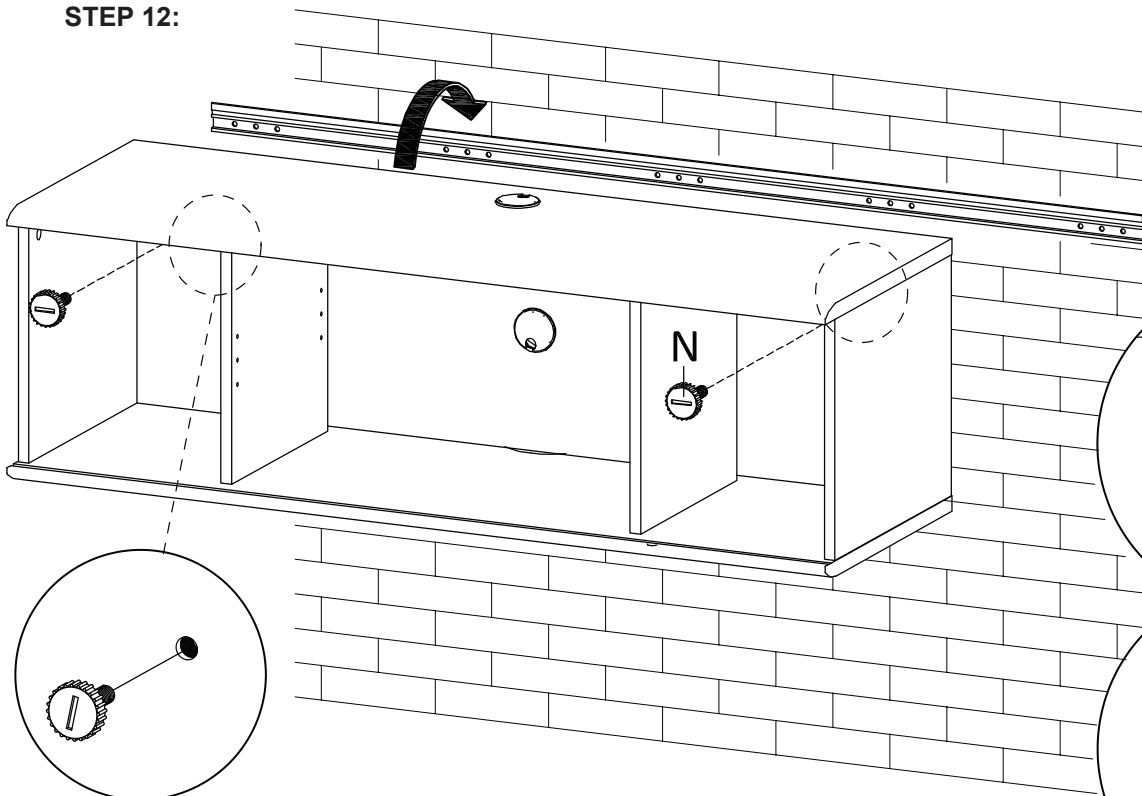

	
Nx2	Sx1



Hardware required.
Screwdriver not included

STEP 13:

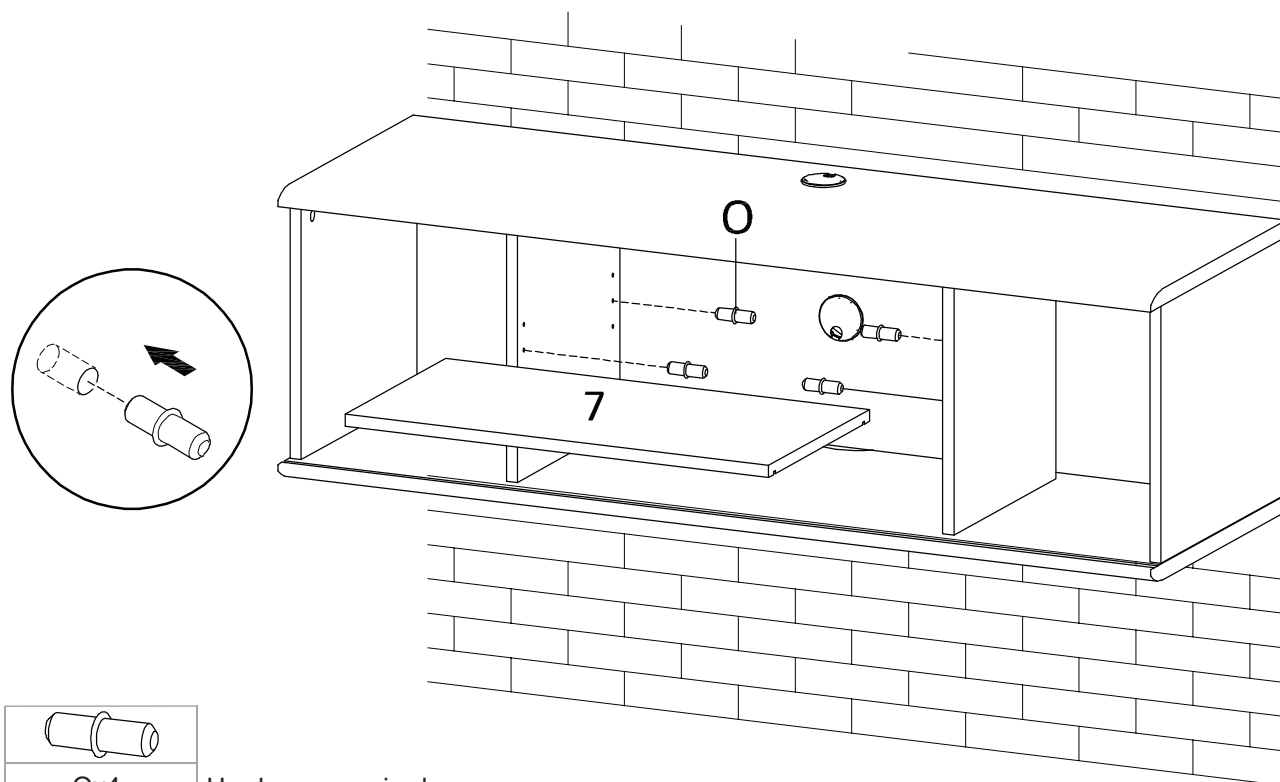


Hardware required.

STEP 14:

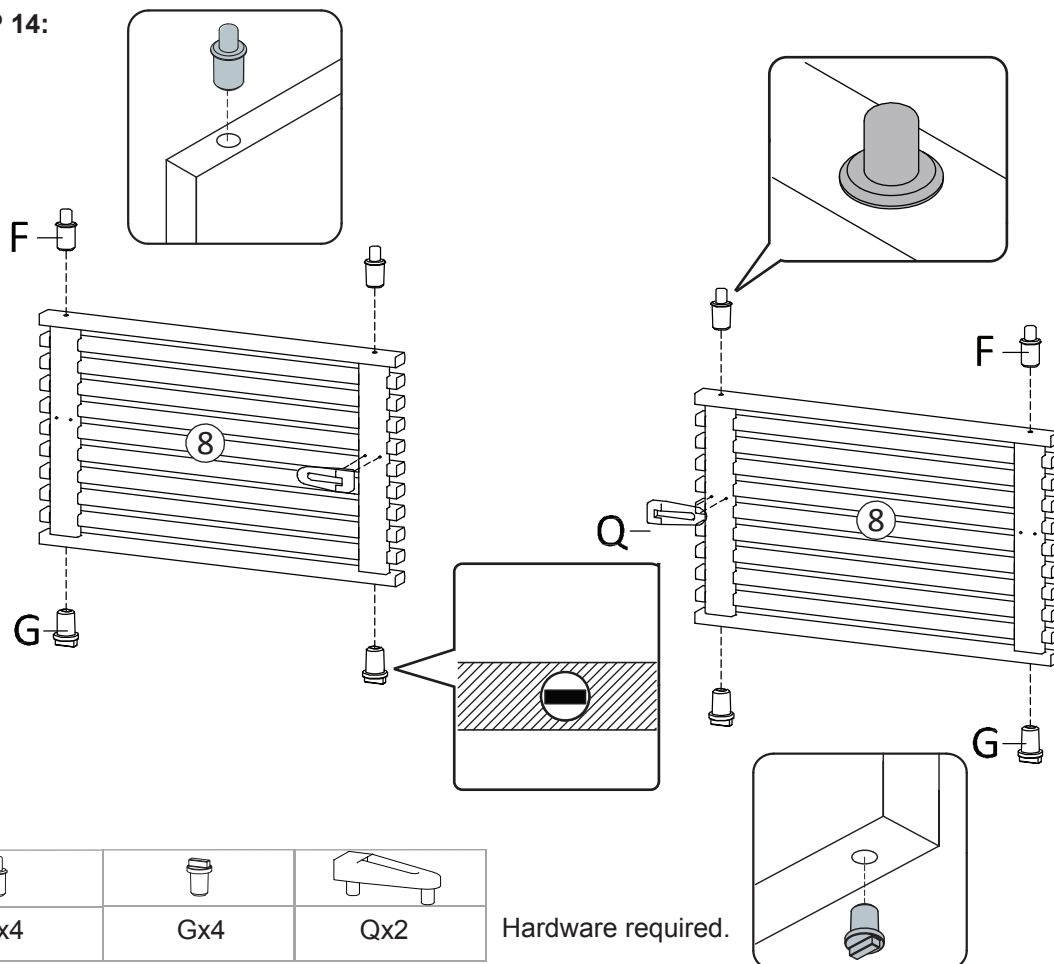

Hardware required.

①



Technical drawing of a cabinet. The drawing shows a perspective view of the cabinet with its top panel and two side panels. The top panel is labeled with a circled 'C'. The side panels are labeled with a circled 'D'. The cabinet has two internal shelves and two drawers on each side. The drawers are labeled with a circled 'E'.

Page 10 of 10