

ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See furniture and hardware part lists, on the right, for guidance.

Have all parts ready before assembly. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the steps below to start assembling.

| FURNITURE PART LIST | | |
|---------------------|---------------|-------|
| ITEM | DESCRIPTION | QTY |
| A | HEADBOARD | 1 PC |
| В | SUPPORT BOARD | 2 PCS |
| | | |


| HARDWARE PART LIST | | | | |
|--------------------|---------------------|-------|--|--|
| ITEM | DESCRIPTION | QTY | | |
| 1 | JCBB BOLT M8 x 40mm | 4 PCS | | |
| 2 | M8 FLAT WASHER | 4 PCS | | |
| 3 | M5 ALLEN KEY | 1 PC | | |

CAUTION: 1. Do not FULLY - TIGHTEN the nut or bolt until all nuts and bolts are assembled.


2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.

3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

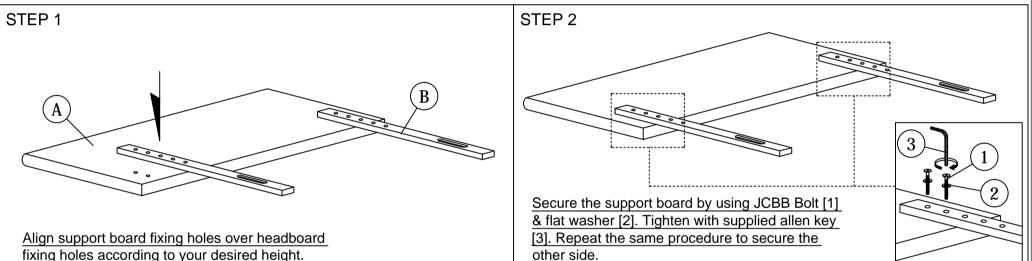

STEP 3

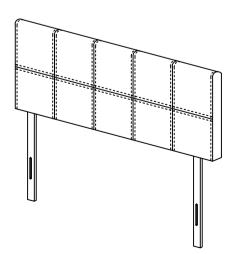

Your headboard assembly is complete.

Note: Hardware may loosen over time. Periodically

check that all connections are tight.